

1998

BMW
Z3 M Roadster
(E36/7)

Electrical
Troubleshooting
Manual

Z3 produced 2/98 thru Present

BMW NA



ELECTRICAL TROUBLESHOOTING MANUAL

SERIES 3 – E36/7 (Z3 M Roadster)

This brochure contains the schematics for the E36/7 Z3 M Roadster. In conjunction with the Electrical Troubleshooting Manual Series 3 – E36/7 model year 1998 (Part Number 01 00 1 470 217) this enables diagnosis of all electrical/electronic systems.

SCHEMATICS

MODEL YEAR 1998

| | | | |
|---------|--|--------|--|
| 0100.0 | INDEX | 5126.0 | ZKE CENTRAL LOCKING (ZV) |
| 0670.0 | POWER DISTRIBUTION CHART | 6211.0 | INSTRUMENT CLUSTER |
| 0670.2 | POWER DISTRIBUTION | 6300.0 | LIGHT SWITCH DETAILS |
| 0670.3 | FUSE DETAILS | 6312.0 | HEADLIGHTS/FOG LIGHTS |
| 0670.4 | GROUND DISTRIBUTION | 6313.0 | TURN/HAZARD LIGHTS |
| 0670.5 | DATA LINK | 6320.0 | LICENSE PLATE/LUGGAGE COMPARTMENT LIGHTS |
| 1210.17 | ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52) | 6325.0 | BRAKE LIGHTS |
| 1230.0 | CHARGING SYSTEM | 6450.6 | INTEGRATED HEATING– AND CLIMATE CONTROL |
| 1290.0 | E-BOX FAN | 7000.0 | COMPONENT LOCATION CHART |
| 3450.0 | SLIP CONTROL (ABS) | 7100.0 | COMPONENT LOCATION VIEWS |
| 3450.1 | SLIP CONTROL (ABS/ASC) | 8500.0 | CONNECTOR VIEWS |
| 3614.0 | TYRE INFLATION SYSTEM | | |

| | |
|--|------------|
| ABS HYDRAULIC UNIT, Y1 | 3450.0-01 |
| ABS HYDRAULIC UNIT, Y1w | 3450.1-01 |
| ABS PUMP MOTOR RELAY, K75 | 3450.0-00 |
| ABS RELAY, K10 | 3450.0-00 |
| AIR CONDITIONING COMPRESSOR, Y2 | 6450.6-02 |
| AIR CONDITIONING RELAY, MOTRONIC, K33a | 6450.6-00 |
| AIR CONDITIONING/RECIRCULATING SWITCH ASSEMBLY, S220 | 6450.6-01 |
| AIR PUMP, Y6133 | 1210.17-05 |
| ANALOG CLOCK, N5 | 6211.0-05 |
| ASC SWITCH, S6 | 3450.1-03 |
| AUXILIARY FAN MOTOR, M9 | 6450.6-03 |
| AUXILIARY FUSE BOX, P95 | 0670.2-01 |
| AUXILIARY FUSE BOX, P97 | 0670.2-01 |
| AUXILIARY THROTTLE POSITION MOTOR (ADS), M93 | 3450.1-02 |
| AUXILIARY THROTTLE POSITION SENSOR, R31 | 3450.1-02 |
| AUXILIARY TURN LIGHT, LEFT FRONT, H9 | 6313.0-02 |
| AUXILIARY TURN LIGHT, RIGHT FRONT, H8 | 6313.0-02 |
| B+ JUMP START JUNCTION POINT, G6430 | 0670.2-00 |
| BATTERY, G1 | 0670.2-00 |
| BLOWER MOTOR, M30 | 6450.6-00 |
| BLOWER RELAY, K4 | 6450.6-00 |
| BLOWER RESISTORS, R11 | 6450.6-00 |
| BLOWER SWITCH, S75 | 6450.6-00 |
| BRAKE FLUID LEVEL SWITCH, B18 | 6211.0-00 |
| BRAKE LIGHT SWITCH, S30 | 6325.0-00 |
| BRAKE LIGHT, LEFT, H24 | 6325.0-00 |
| BRAKE LIGHT, RIGHT, H31 | 6325.0-00 |
| BRAKE LIGHTS | 6325.0-00 |
| BRAKE PAD SENSOR, LEFT FRONT, B16 | 6211.0-01 |
| BRAKE PAD SENSOR, RIGHT REAR, B17 | 6211.0-01 |
| CAMSHAFT POSITION SENSOR (CYLINDER IDENTIFICATION), B6204 | 1210.17-06 |
| CHARCOAL FILTER SHUT-OFF VALVE, B6247 | 1210.17-09 |
| CHARGING SYSTEM | 1230.0-00 |

| | |
|---|------------|
| CHIME MODULE, H10 | 6211.0-04 |
| CIGAR LIGHTER CONNECTION, E28a | 3614.0-00 |
| COMBINATION SWITCH, S7 | 6313.0-00 |
| COMPONENT LOCATION CHART | 7000.0 |
| COMPRESSOR CONTROL RELAY, K19 | 6450.6-02 |
| COMPRESSOR MAIN SWITCH, S232 | 3614.0-00 |
| COMPRESSOR RELAY, K6394 | 3614.0-00 |
| CONNECTOR VIEWS | 8500.0 |
| CRANKSHAFT POSITION/RPM SENSOR, B6203 | 1210.17-06 |
| DATA LINK | 0670.5 |
| DATA LINK CONNECTOR, D100 | 0670.5 |
| DOOR JAMB SWITCH, DRIVER'S, S14 | 5126.0-01 |
| DOOR LOCK MOTOR, DRIVER'S, M12 | 5126.0-02 |
| DOOR LOCK SWITCH, DRIVER'S, S47 | 5126.0-00 |
| DUAL TEMPERATURE SENSOR (COOLANT TEMPERATURE), B6256 | 1210.17-02 |
| E-BOX FAN | 1290.0-00 |
| E-BOX FAN, M6506 | 1290.0-00 |
| ELECTRICAL COMPRESSOR, M805 | 3614.0-00 |
| ENGINE CONTROL MODULE (DME), A6000 | 1210.17 |
| ENGINE CONTROL MODULE RELAY, K6300 | 1210.17-00 |
| ENGINE CONTROL RELAY (ABS/ASC), K94 | 3450.1-00 |
| ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52) | 1210.17 |
| ENGINE COOLANT TEMPERATURE SENSOR, B6232 | 1210.17-02 |
| ENGINE COOLANT TEMPERATURE SENSOR, B6232 | 6211.0-02 |
| ENGINE COOLANT TEMPERATURE SENSOR, B6236 | 1210.17-02 |
| EVAPORATIVE EMISSION VALVE, Y6120 | 1210.17-05 |
| EVAPORATOR CONTROLLER, S221 | 6450.6-01 |
| EVAPORATOR TEMPERATURE SENSOR, B14 | 6450.6-01 |
| FRESH AIR RECIRCULATION MOTOR, M111 | 6450.6-01 |
| FRONT ASHTRAY LIGHT, E25 | 6300.0-01 |
| FRONT CIGAR LIGHTER LIGHT, E29 | 6300.0-01 |
| FRONT POWER DISTRIBUTION BOX, P90 | 0670.2 |
| FUEL INJECTION VALVE, CYL. 1, Y6101 | 1210.17-01 |
| FUEL INJECTION VALVE, CYL. 2, Y6102 | 1210.17-01 |

| | |
|---|------------|
| FUEL INJECTION VALVE, CYL. 3, Y6103 | 1210.17-01 |
| FUEL INJECTION VALVE, CYL. 4, Y6104 | 1210.17-01 |
| FUEL INJECTION VALVE, CYL. 5, Y6105 | 1210.17-01 |
| FUEL INJECTION VALVE, CYL. 6, Y6106 | 1210.17-01 |
| FUEL PUMP RELAY, K6301w | 1210.17-04 |
| FUEL PUMP, M2 | 1210.17-04 |
| FUEL SENSOR, B6y | 6211.0-03 |
| FUEL TANK PRESSURE SENSOR, B65 | 1210.17-09 |
| FUSE DETAILS | 0670.3 |
| GEAR SHIFT LEVER INDICATOR, E96 | 6300.0-01 |
| GENERATOR, G6509 | 1230.0-00 |
| GROUND DISTRIBUTION | 0670.4 |
| HAZARD FLASHER RELAY, K16 | 6313.0-00 |
| HAZARD SWITCH, S18 | 6313.0-01 |
| HEADLIGHT, LEFT, E7 | 6312.0-01 |
| HEADLIGHT, RIGHT, E8 | 6312.0-01 |
| HEADLIGHTS/FOG LIGHTS | 6312.0 |
| HEAT/A/C CONTROL PANEL ILLUMINATION, E105 | 6300.0-02 |
| HEAT/A/C CONTROL PANEL ILLUMINATION, E106 | 6300.0-02 |
| HIGH BEAM LIGHT RELAY, K46 | 6312.0-01 |
| HIGH BEAM LIGHT, LEFT, E11 | 6312.0-01 |
| HIGH BEAM LIGHT, RIGHT, E12 | 6312.0-01 |
| HIGH LEVEL STOP LIGHT, H34 | 6325.0-00 |
| HIGH SPEED RELAY, K22 | 6450.6-03 |
| HOT FILM AIR MASS METER, B6207 | 1210.17-05 |
| IDLE SPEED CONTROL VALVE, Y6130 | 1210.17-01 |
| IGNITION COIL, CYL. 1, T6151 | 1210.17-03 |
| IGNITION COIL, CYL. 2, T6152 | 1210.17-03 |
| IGNITION COIL, CYL. 3, T6153 | 1210.17-03 |
| IGNITION COIL, CYL. 4, T6154 | 1210.17-03 |
| IGNITION COIL, CYL. 5, T6155 | 1210.17-03 |
| IGNITION COIL, CYL. 6, T6156 | 1210.17-03 |
| IGNITION SWITCH, S2 | 0670.2-03 |
| INDEX | 0100.0 |
| INSTRUMENT CLUSTER | 6211.0 |

| | |
|---|------------|
| INSTRUMENT CLUSTER, A2w | 6211.0 |
| INTAKE AIR TEMPERATURE SENSOR, B6205 | 1210.17-02 |
| INTEGRATED HEATING- AND CLIMATE CONTROL | 6450.6 |
| INTERMEDIATE PRESSURE SWITCH, B9 | 6450.6-03 |
| JAMB SWITCH, PASSENGER'S DOOR, S13 | 5126.0-01 |
| KNOCK SENSOR, B6240 | 1210.17-06 |
| LICENSE PLATE LIGHT, LEFT, E43 | 6320.0-00 |
| LICENSE PLATE LIGHT, RIGHT, E44 | 6320.0-00 |
| LICENSE PLATE/LUGGAGE COMPARTMENT LIGHTS | 6320.0-00 |
| LIGHT ASSEMBLY, LEFT REAR, E16 | 0670.4-07 |
| LIGHT ASSEMBLY, RIGHT REAR, E17 | 0670.4-07 |
| LIGHT SWITCH DETAILS | 6300.0 |
| LIGHT SWITCH, S8 | 6300.0-00 |
| LOCK MOTOR, PASSENGER'S DOOR, M13 | 5126.0-02 |
| LOCK SWITCH, PASSENGER'S DOOR, S49 | 5126.0-00 |
| LOW BEAM LIGHT RELAY, K48 | 6312.0-01 |
| LOW BEAM LIGHT, LEFT, E13 | 6312.0-01 |
| LOW BEAM LIGHT, RIGHT, E14 | 6312.0-01 |
| LUGGAGE COMPARTMENT LIGHT SWITCH, S826 | 6320.0-00 |
| NORMAL SPEED RELAY, K21 | 6450.6-03 |
| OBD II CONNECTOR, D110 | 0670.5-03 |
| OIL PRESSURE SWITCH, B6231 | 6211.0-02 |
| OIL TEMPERATURE GAUGE, B59 | 6211.0-05 |
| OIL TEMPERATURE SENSOR, B6238 | 6211.0-05 |
| OXYGEN SENSOR I (BEHIND CATALYTIC CONVERTER), B62102 | 1210.17-04 |
| OXYGEN SENSOR I (IN FRONT OF CATALYTIC CONVERTER), B62101 | 1210.17-04 |
| OXYGEN SENSOR II (BEHIND CATALYTIC CONVERTER), B62202 | 1210.17-04 |
| OXYGEN SENSOR II (IN FRONT OF CATALYTIC CONVERTER), B62201 | 1210.17-04 |
| PARK BRAKE SWITCH, S31 | 6211.0-00 |
| POWER DISTRIBUTION | 0670.2 |
| POWER DISTRIBUTION CHART | 0670.0 |

| | |
|--|------------|
| PRESSURE SWITCH, B8y | 6450.6-03 |
| PRESSURE SWITCH, B9508 | 6450.6-03 |
| SECONDARY AIR PUMP RELAY, K6304 | 1210.17-05 |
| SECONDARY AIR PUMP VALVE, Y6163 | 1210.17-05 |
| SLIP CONTROL (ABS) | 3450.0 |
| SLIP CONTROL MODULE (ABS), A7 | 3450.0-00 |
| SLIP CONTROL MODULE (ABS/ASC), A52 | 3450.1 |
| SOLENOID VALVE ("RUNNING LOSSES"), Y6550 | 1210.17-05 |
| SPEED SENSOR – ABS, LEFT FRONT, B2 | 3450.1-04 |
| SPEED SENSOR – ABS, LEFT FRONT, B2 | 3450.0-02 |
| SPEED SENSOR – ABS, LEFT REAR, B4 | 3450.1-04 |
| SPEED SENSOR – ABS, LEFT REAR, B4 | 3450.0-02 |
| SPEED SENSOR – ABS, RIGHT FRONT, B1 | 3450.1-04 |
| SPEED SENSOR – ABS, RIGHT FRONT, B1 | 3450.0-02 |
| SPEED SENSOR – ABS, RIGHT REAR, B3 | 3450.1-04 |
| SPEED SENSOR – ABS, RIGHT REAR, B3 | 3450.0-02 |
| TEMPERATURE SWITCH, S36 | 6450.6-03 |
| TEMPERATURE WHEEL SWITCH, S531 | 6450.6-01 |
| THROTTLE POSITION SENSOR, R6252 | 1210.17-05 |
| TRUNK COMPARTMENT LIGHT, E32 | 6320.0-00 |
| TRUNK LOCK MOTOR, M17 | 5126.0-03 |
| TURN LIGHT, H5 | 6313.0-03 |
| TURN LIGHT, LEFT FRONT, H7 | 6313.0-02 |
| TURN LIGHT, LEFT REAR, H6 | 6313.0-03 |
| TURN LIGHT, RIGHT FRONT, H4 | 6313.0-02 |
| TURN/HAZARD LIGHTS | 6313.0 |
| TYRE INFLATION SYSTEM | 3614.0-00 |
| UNLOADER RELAY, TERMINAL 15, K6326 | 1210.17-02 |
| VALVE RELAY (ABS/ASC), K95 | 3450.1-00 |
| VARIABLE CAMSHAFT CONTROL VALVE 1, Y6275 | 1210.17-01 |
| VEHICLE SPEED SENSOR, B10 | 6211.0-03 |
| WATER VALVE, Y4z | 6450.6-01 |
| ZKE CENTRAL LOCKING (ZV) | 5126.0 |


POWER DISTRIBUTION CHART

FRONT POWER DISTRIBUTION BOX

86/80

0670.0-00

1998

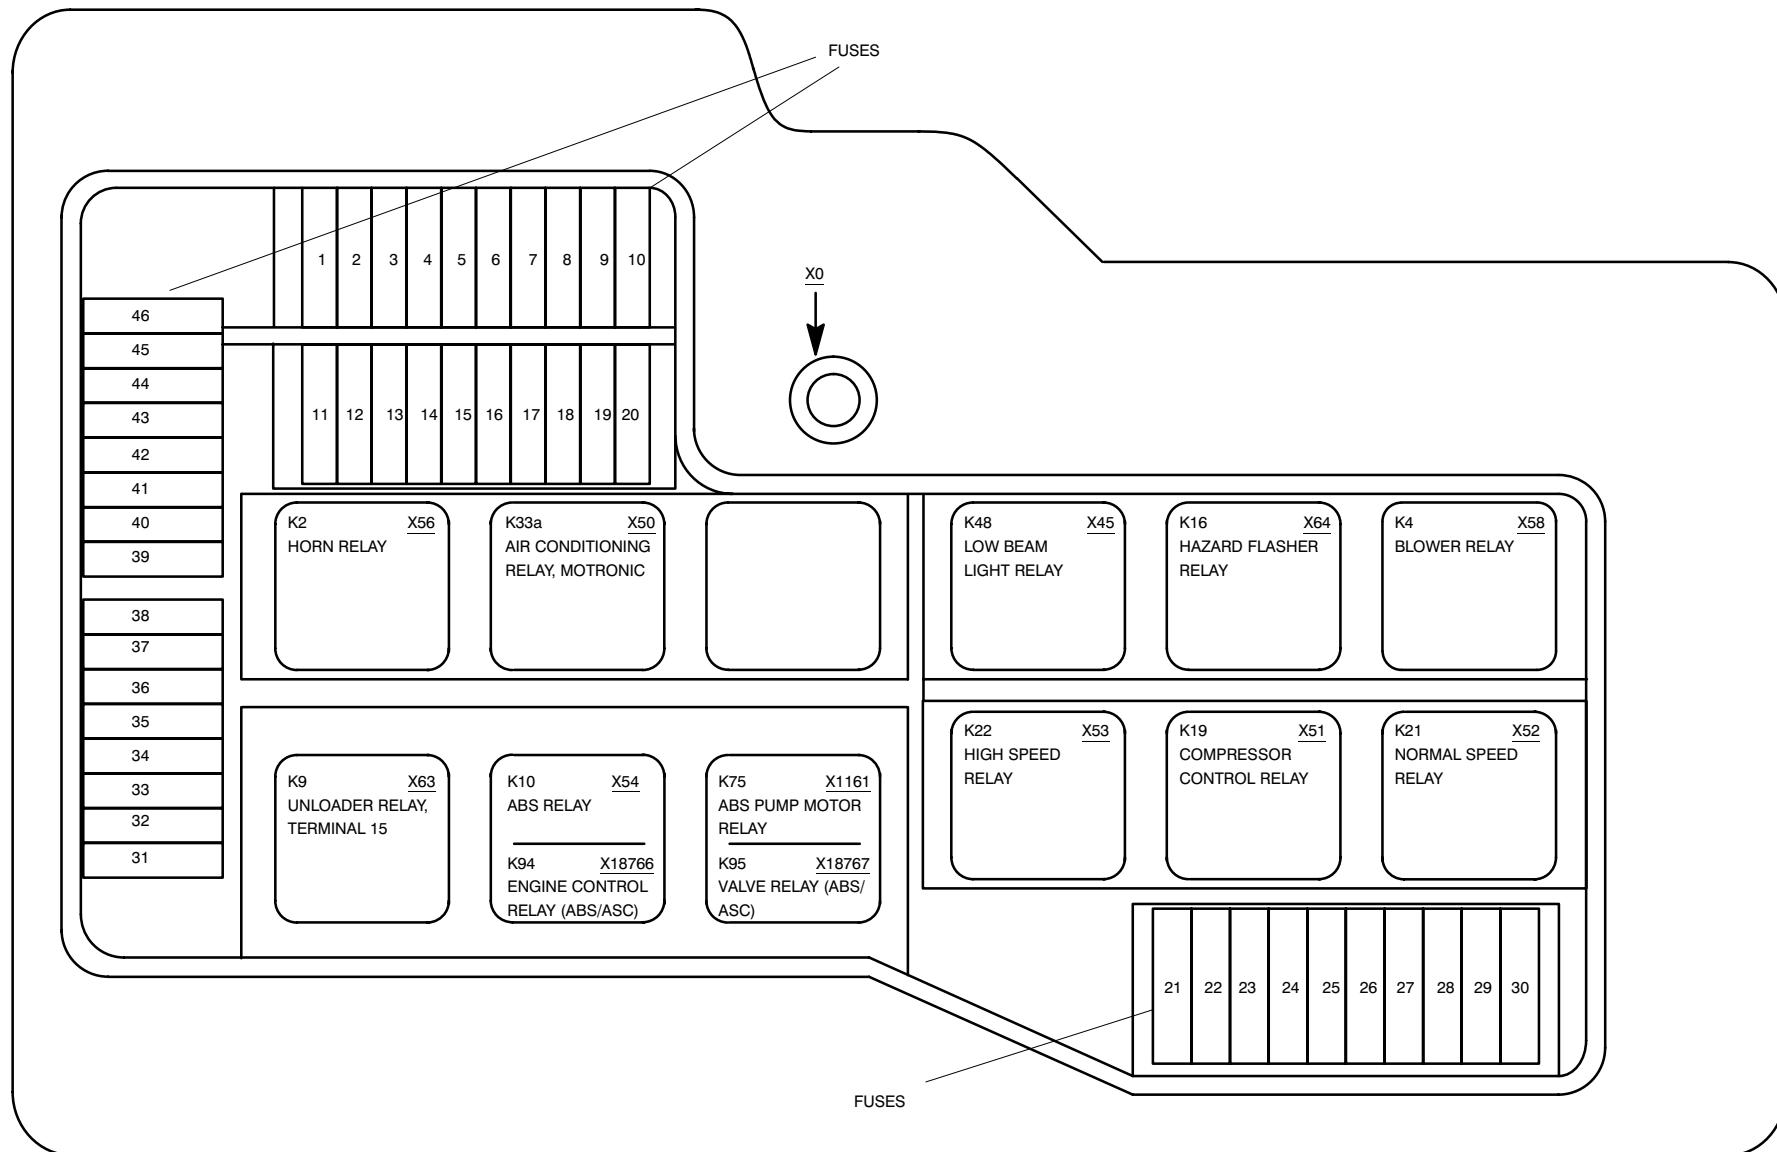


POWER DISTRIBUTION CHART

IN E-BOX

02/98

0670.0-01

1998

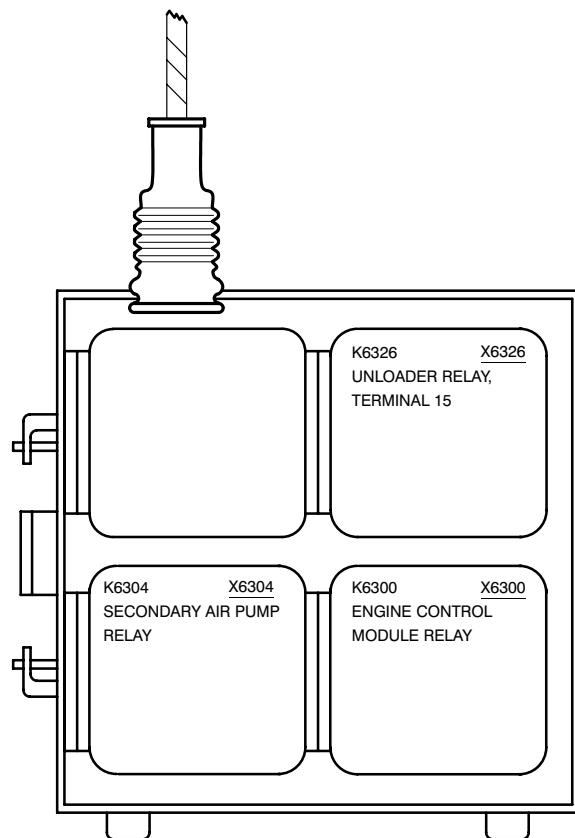


POWER DISTRIBUTION CHART

RELAY PANEL UNDER LH SIDE OF DASHBOARD

02/98

0670.0-02

1998

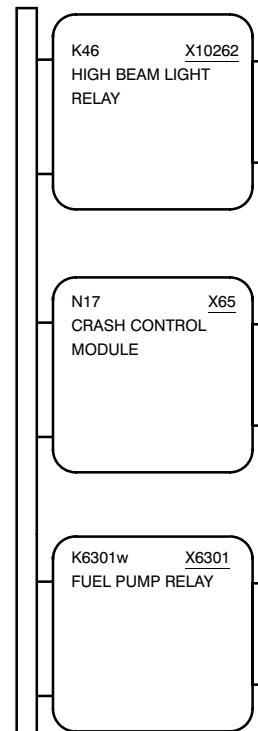


POWER DISTRIBUTION

Z3

02/98

0670.2-00

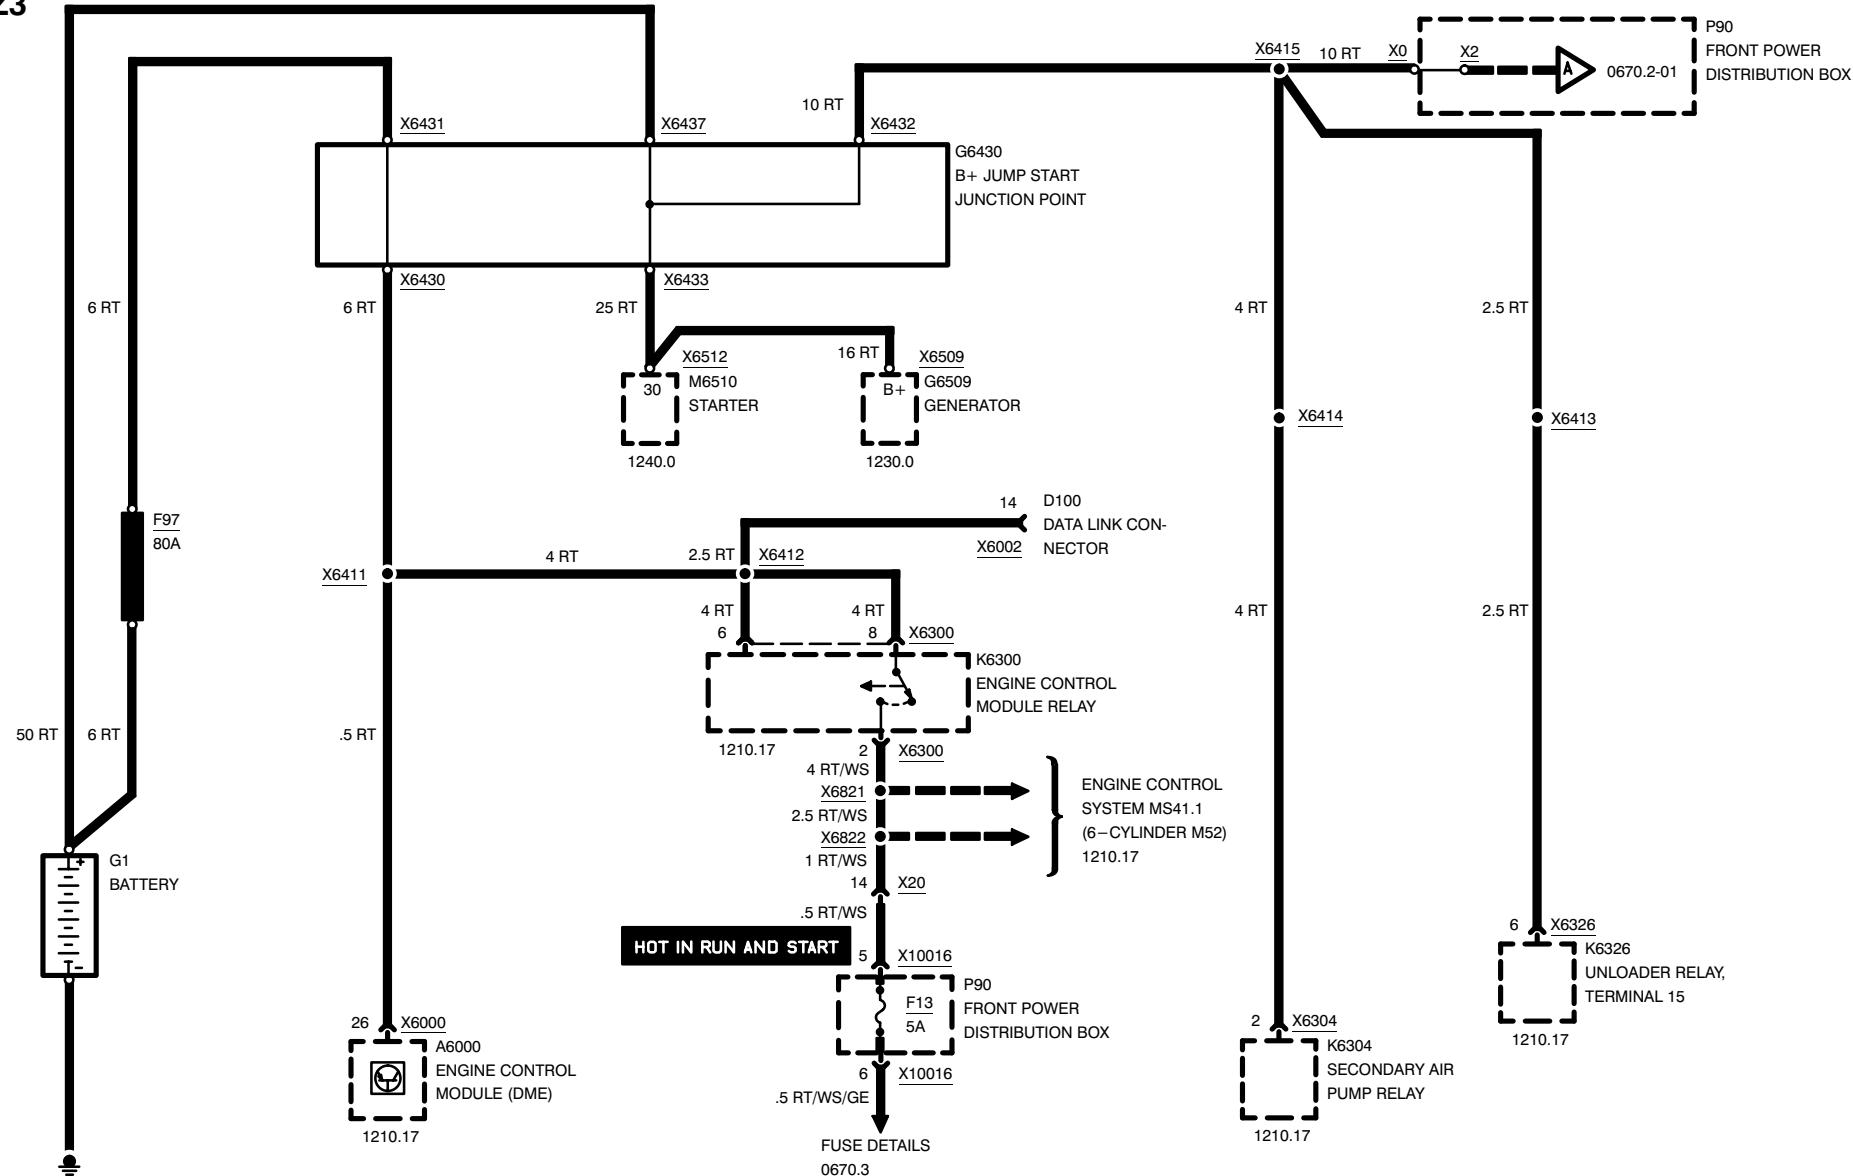


1998

POWER DISTRIBUTION

03/98

0670.2-01

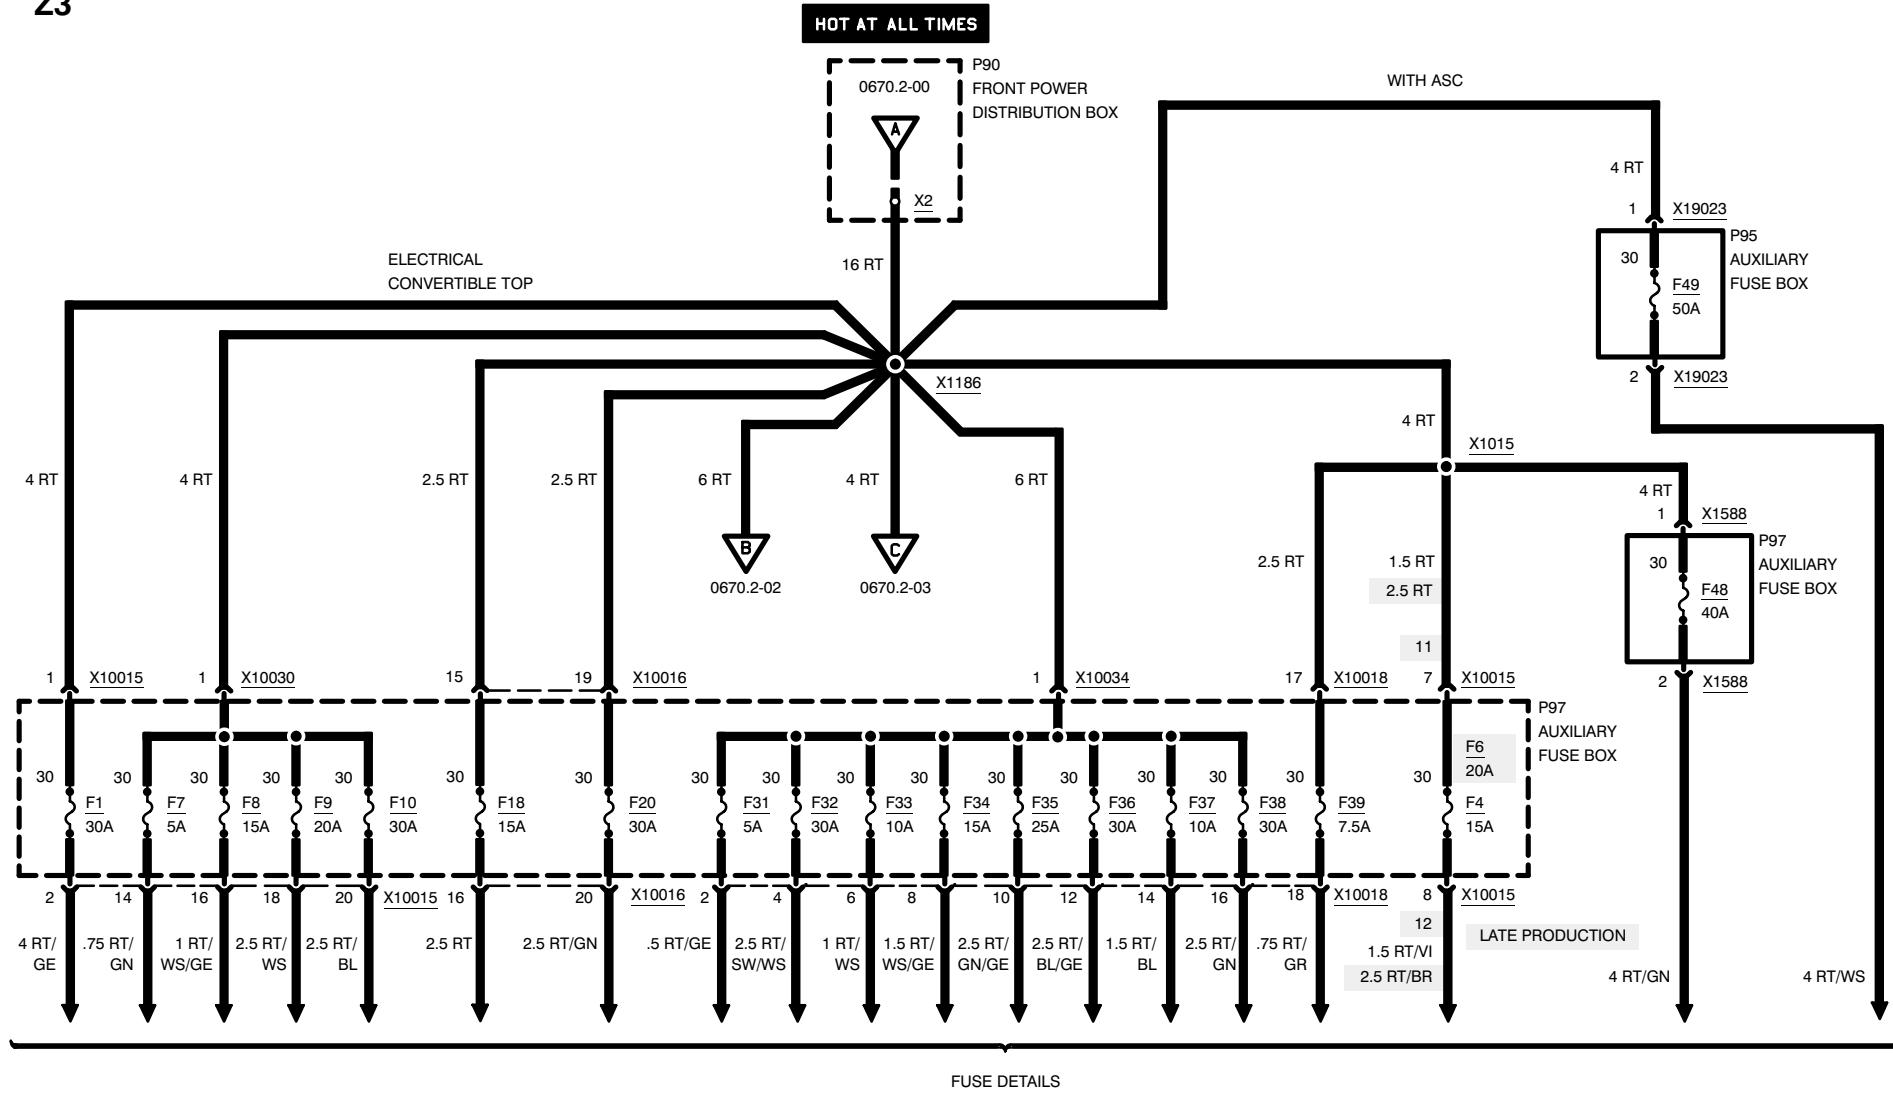


1998

POWER DISTRIBUTION

02/98

0670.2-02

1998

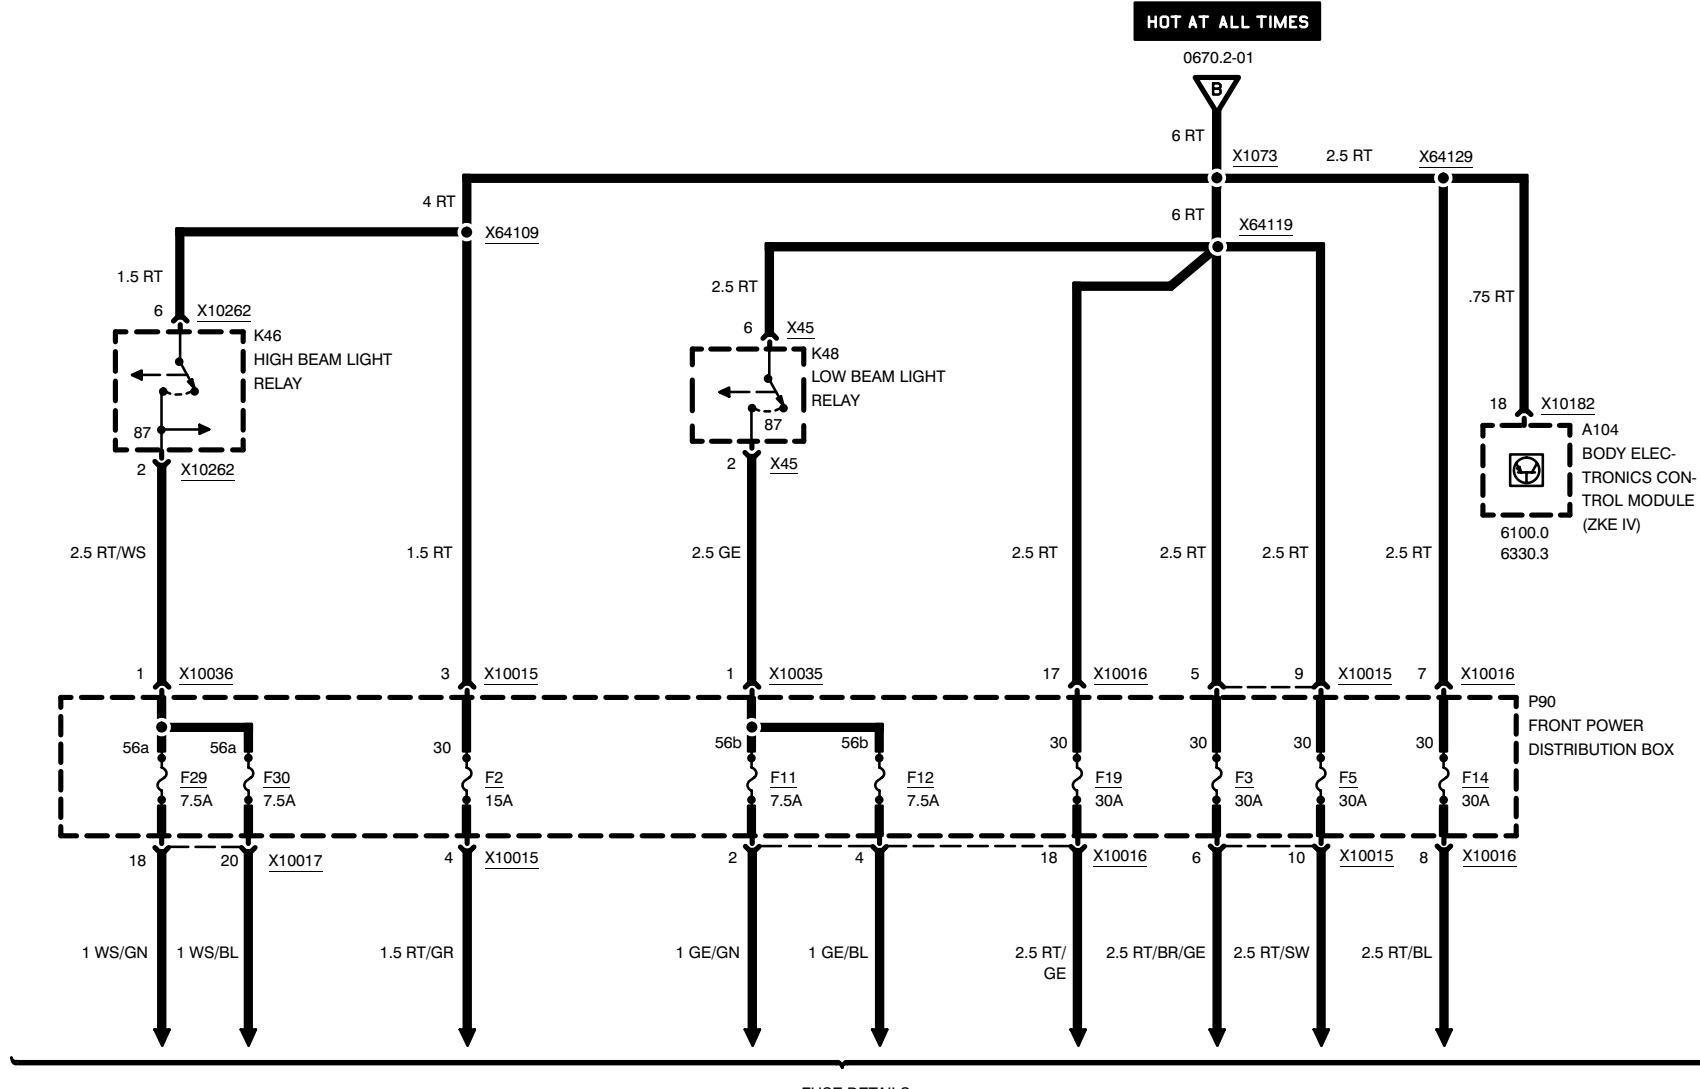



POWER DISTRIBUTION

02/98

0670.2-03

1998

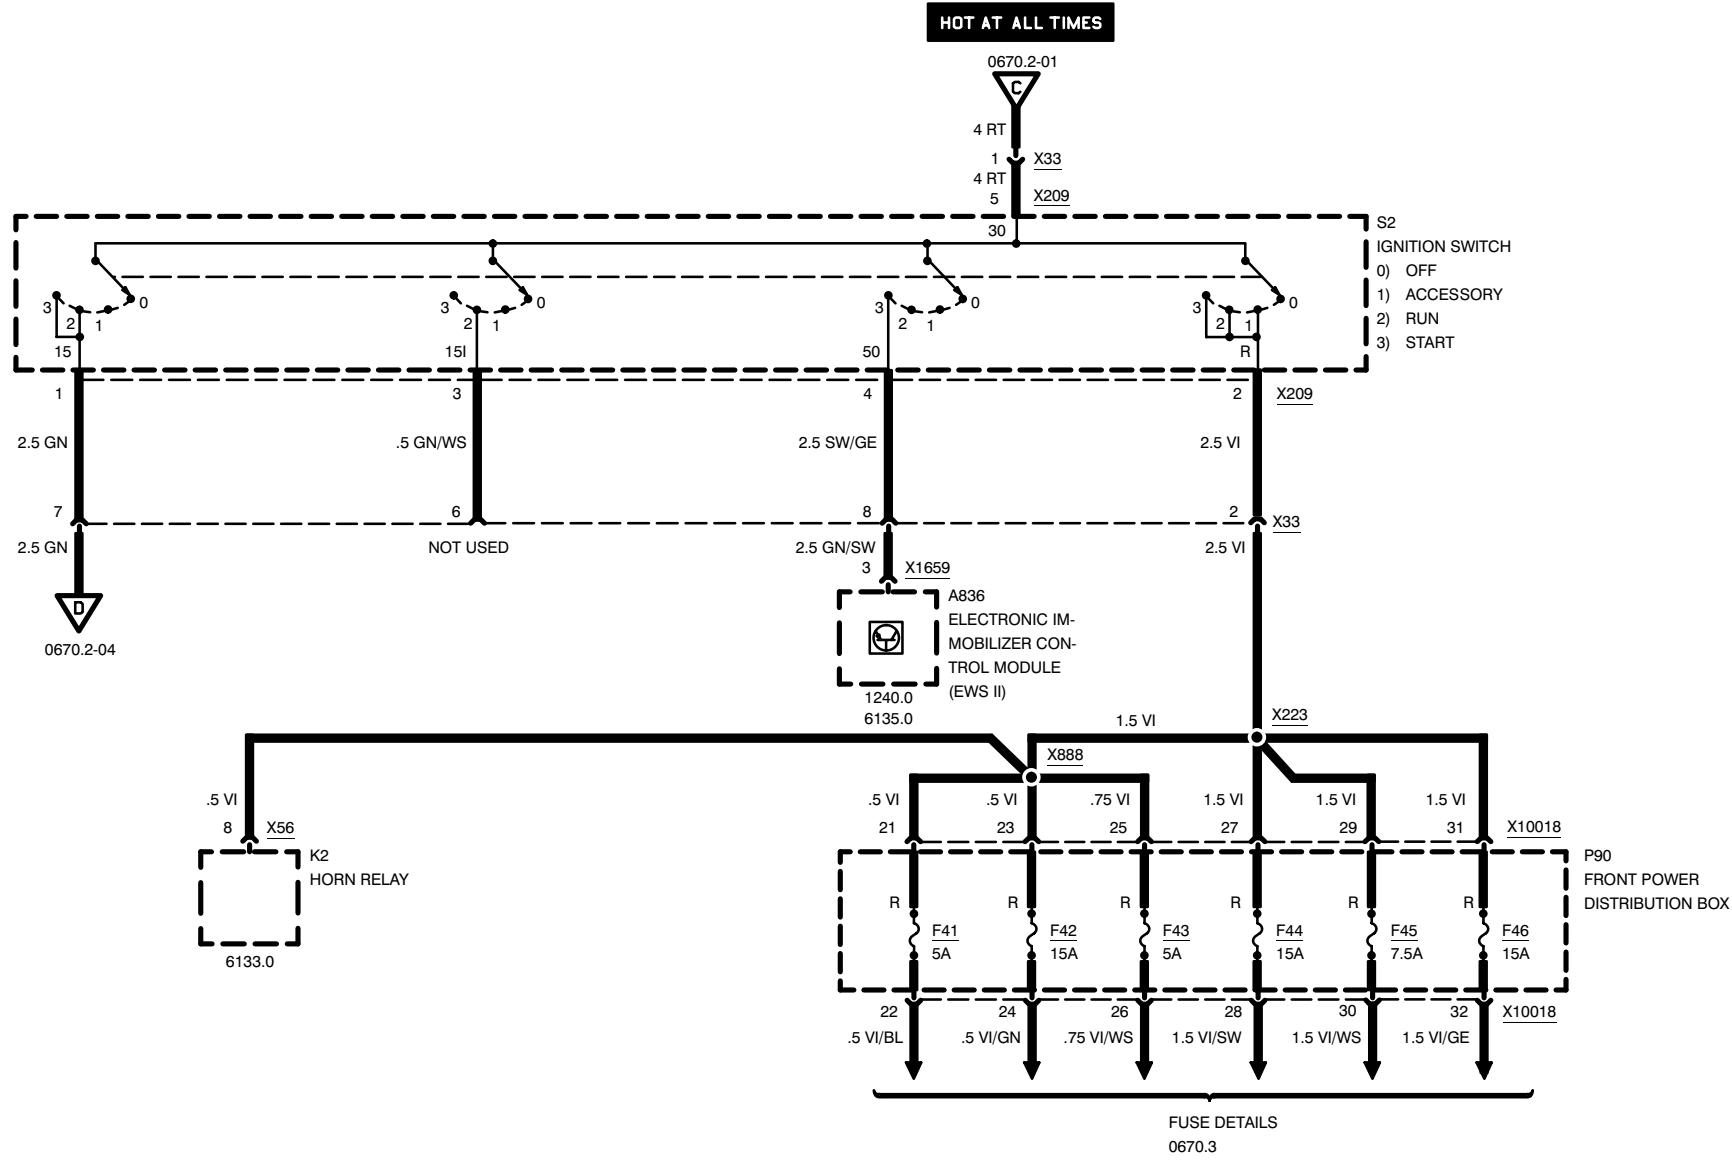

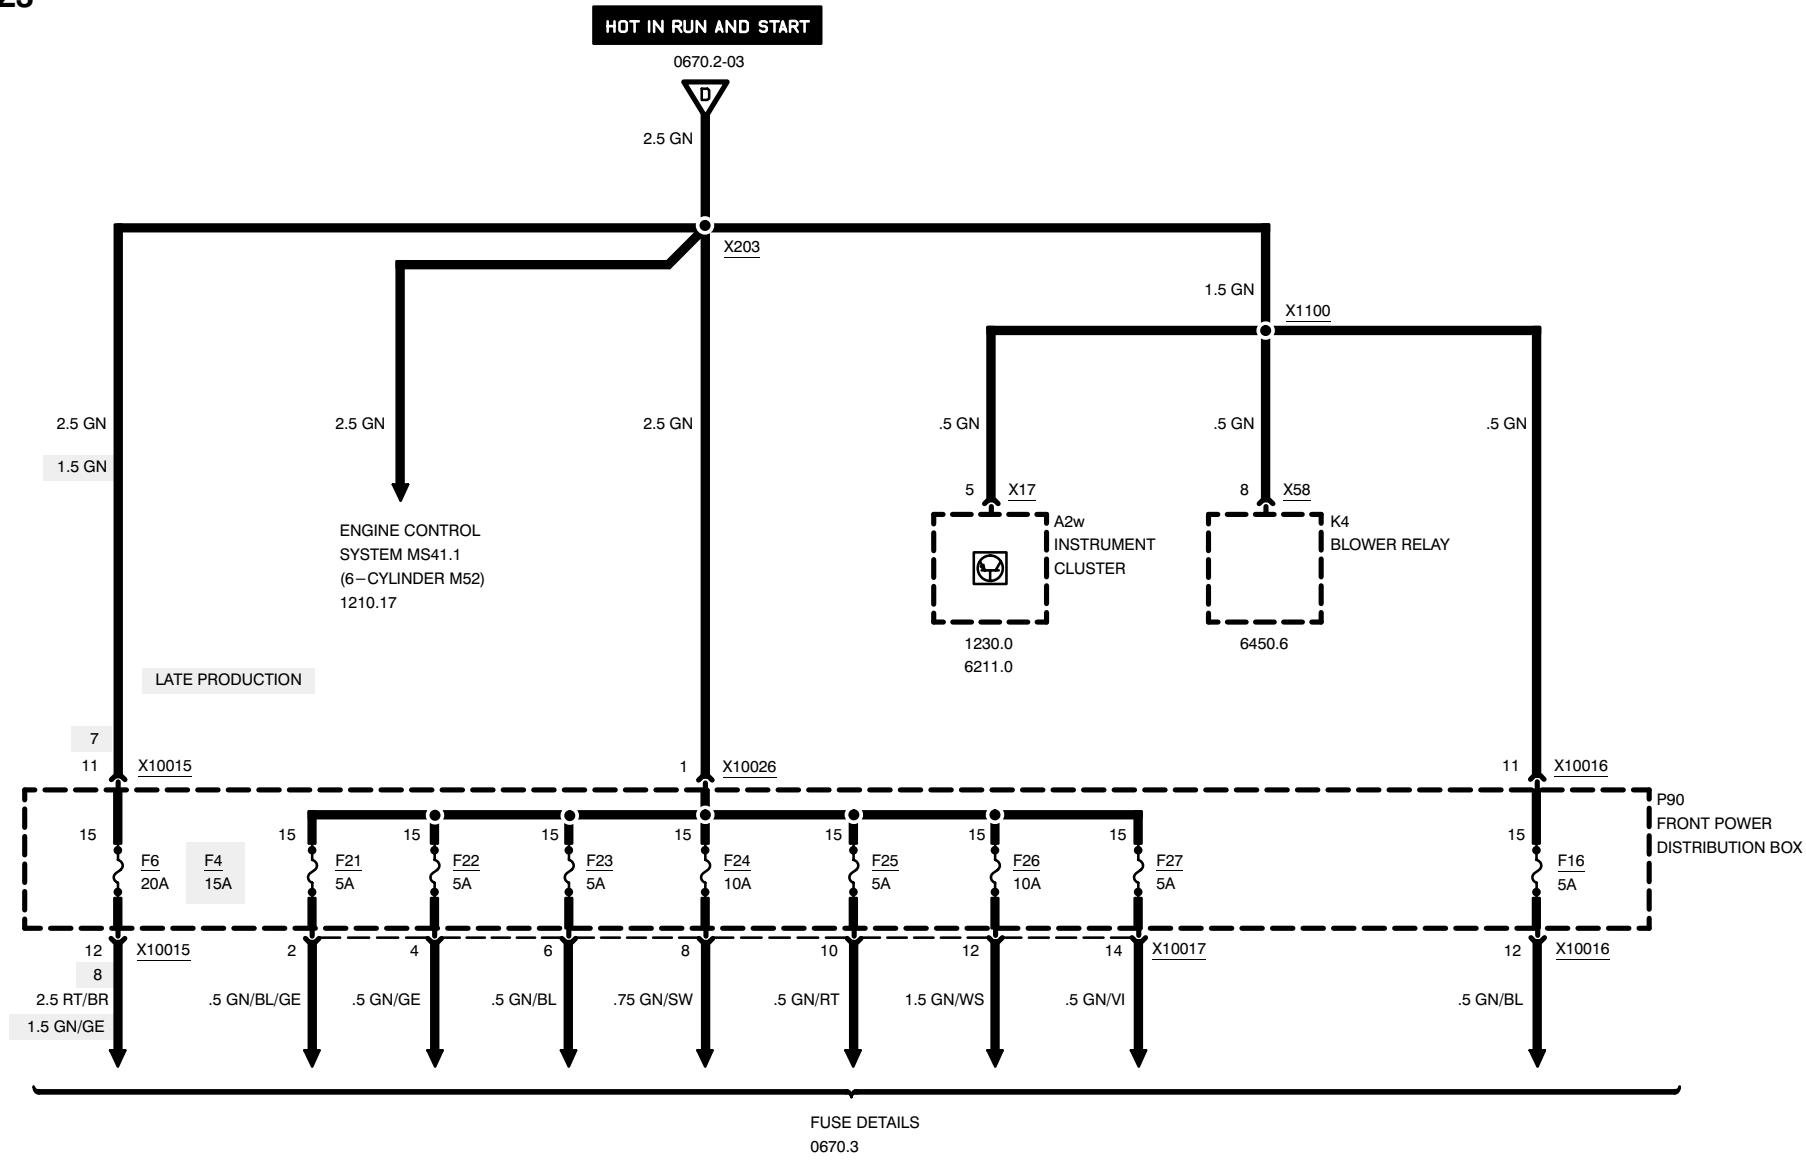


FUSE DETAILS

FUSES 7, AND 10

03/98

0670.3-00

1998

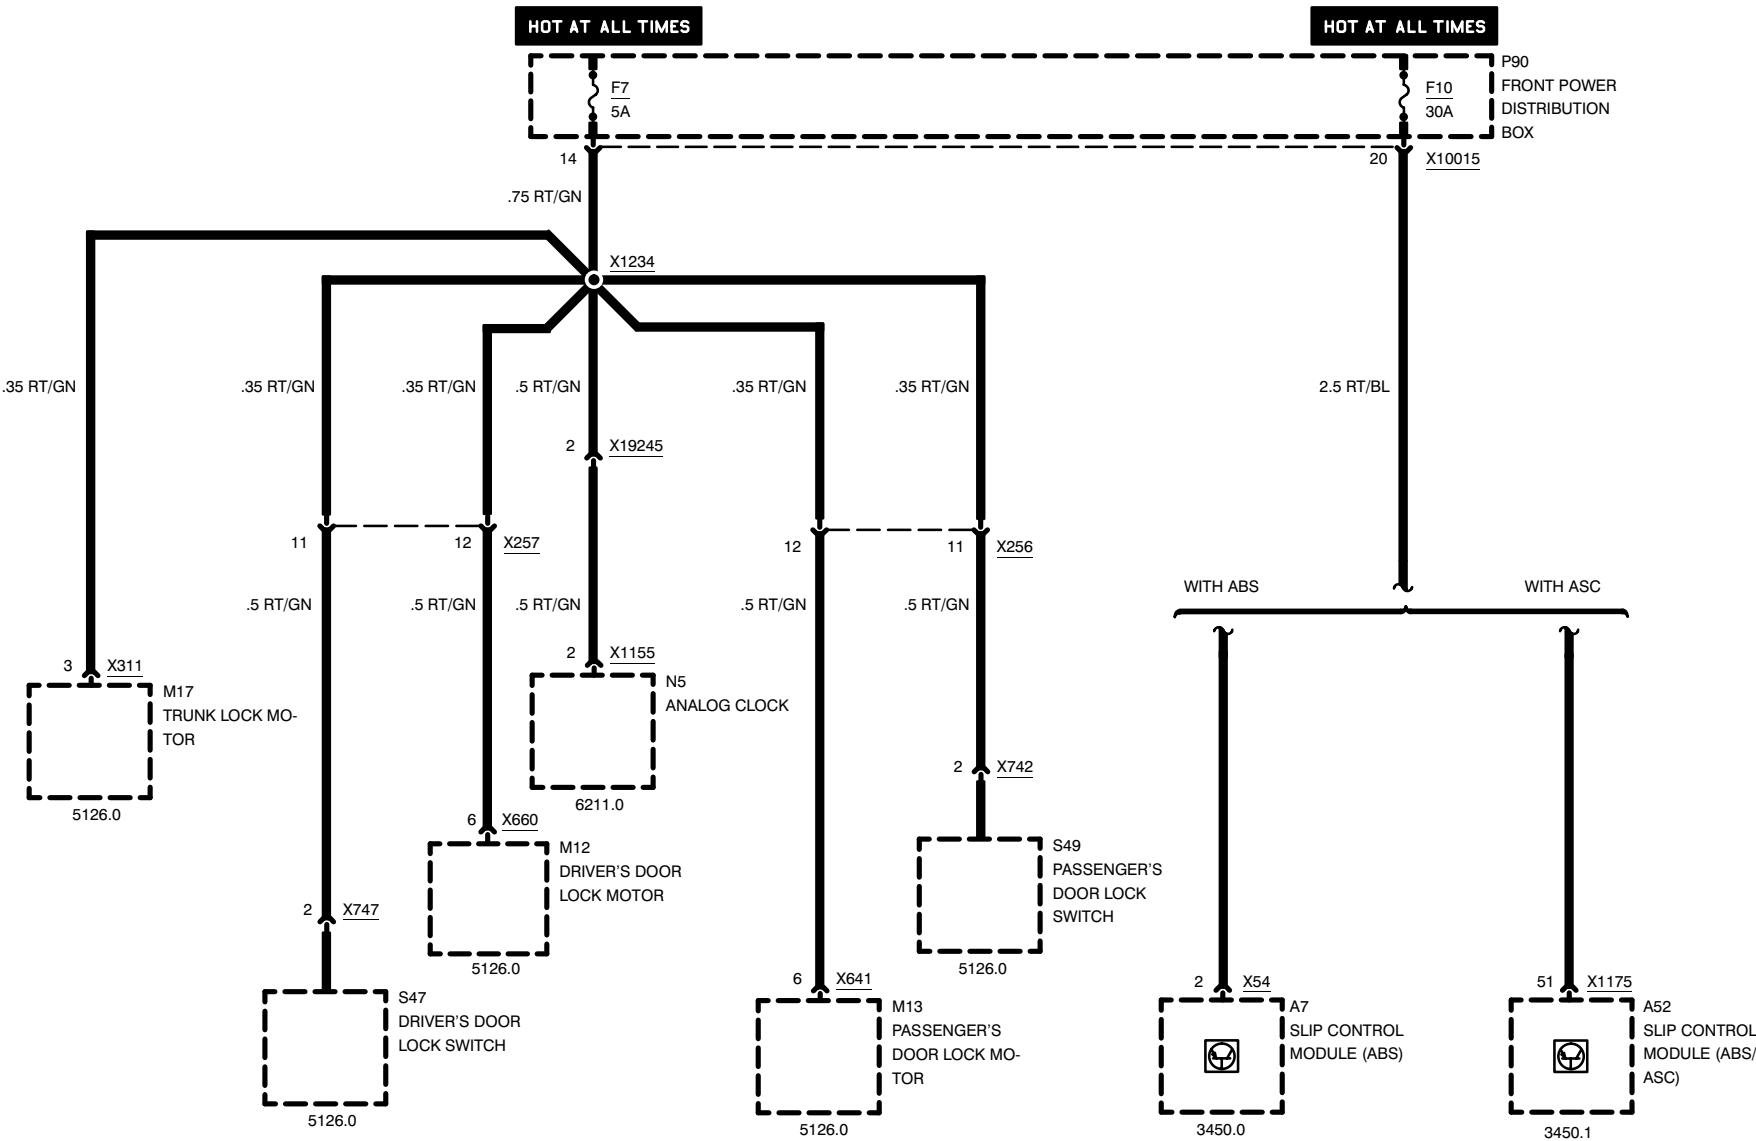

FUSE DETAILS


FUSES 13, 16, 21, AND 26

Z3

88/89


06/03/01

1
66

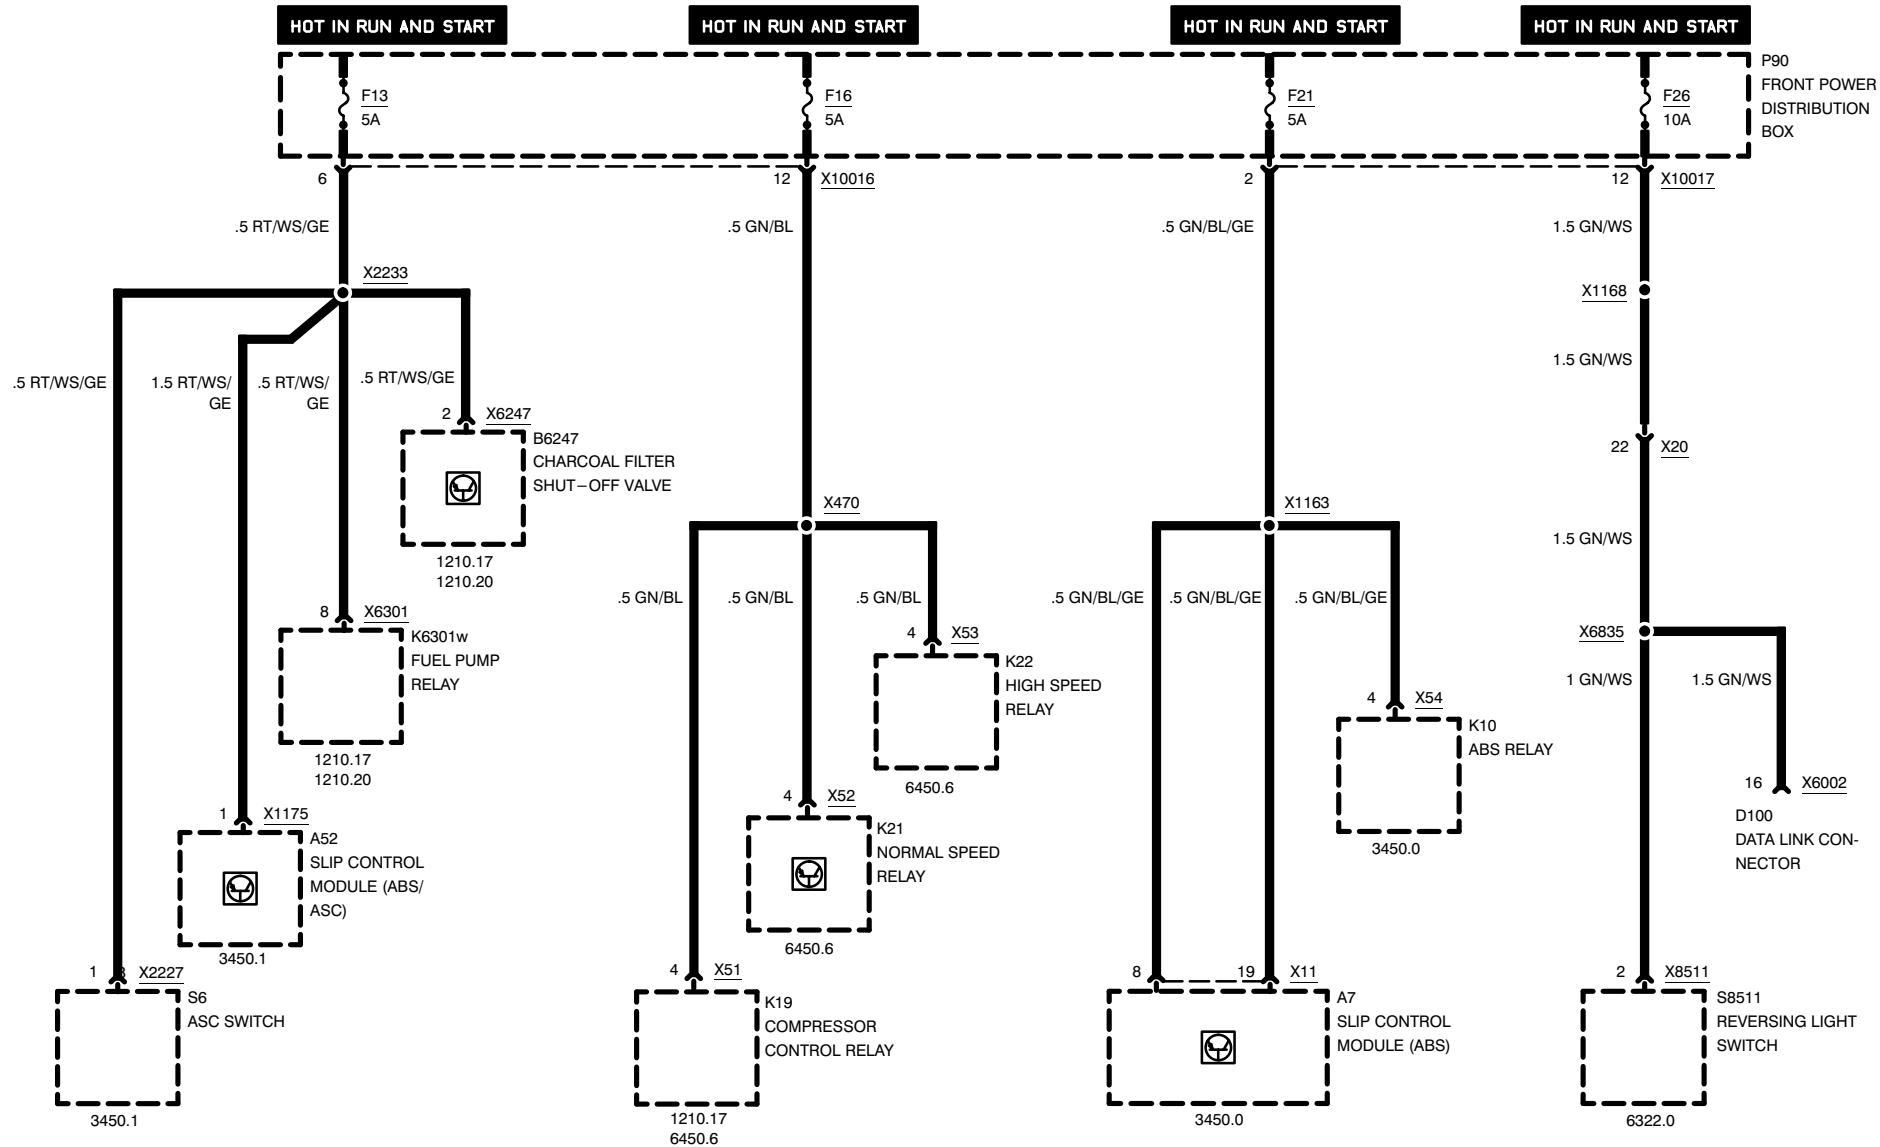


FUSE DETAILS

FUSES 38, 39, AND 46

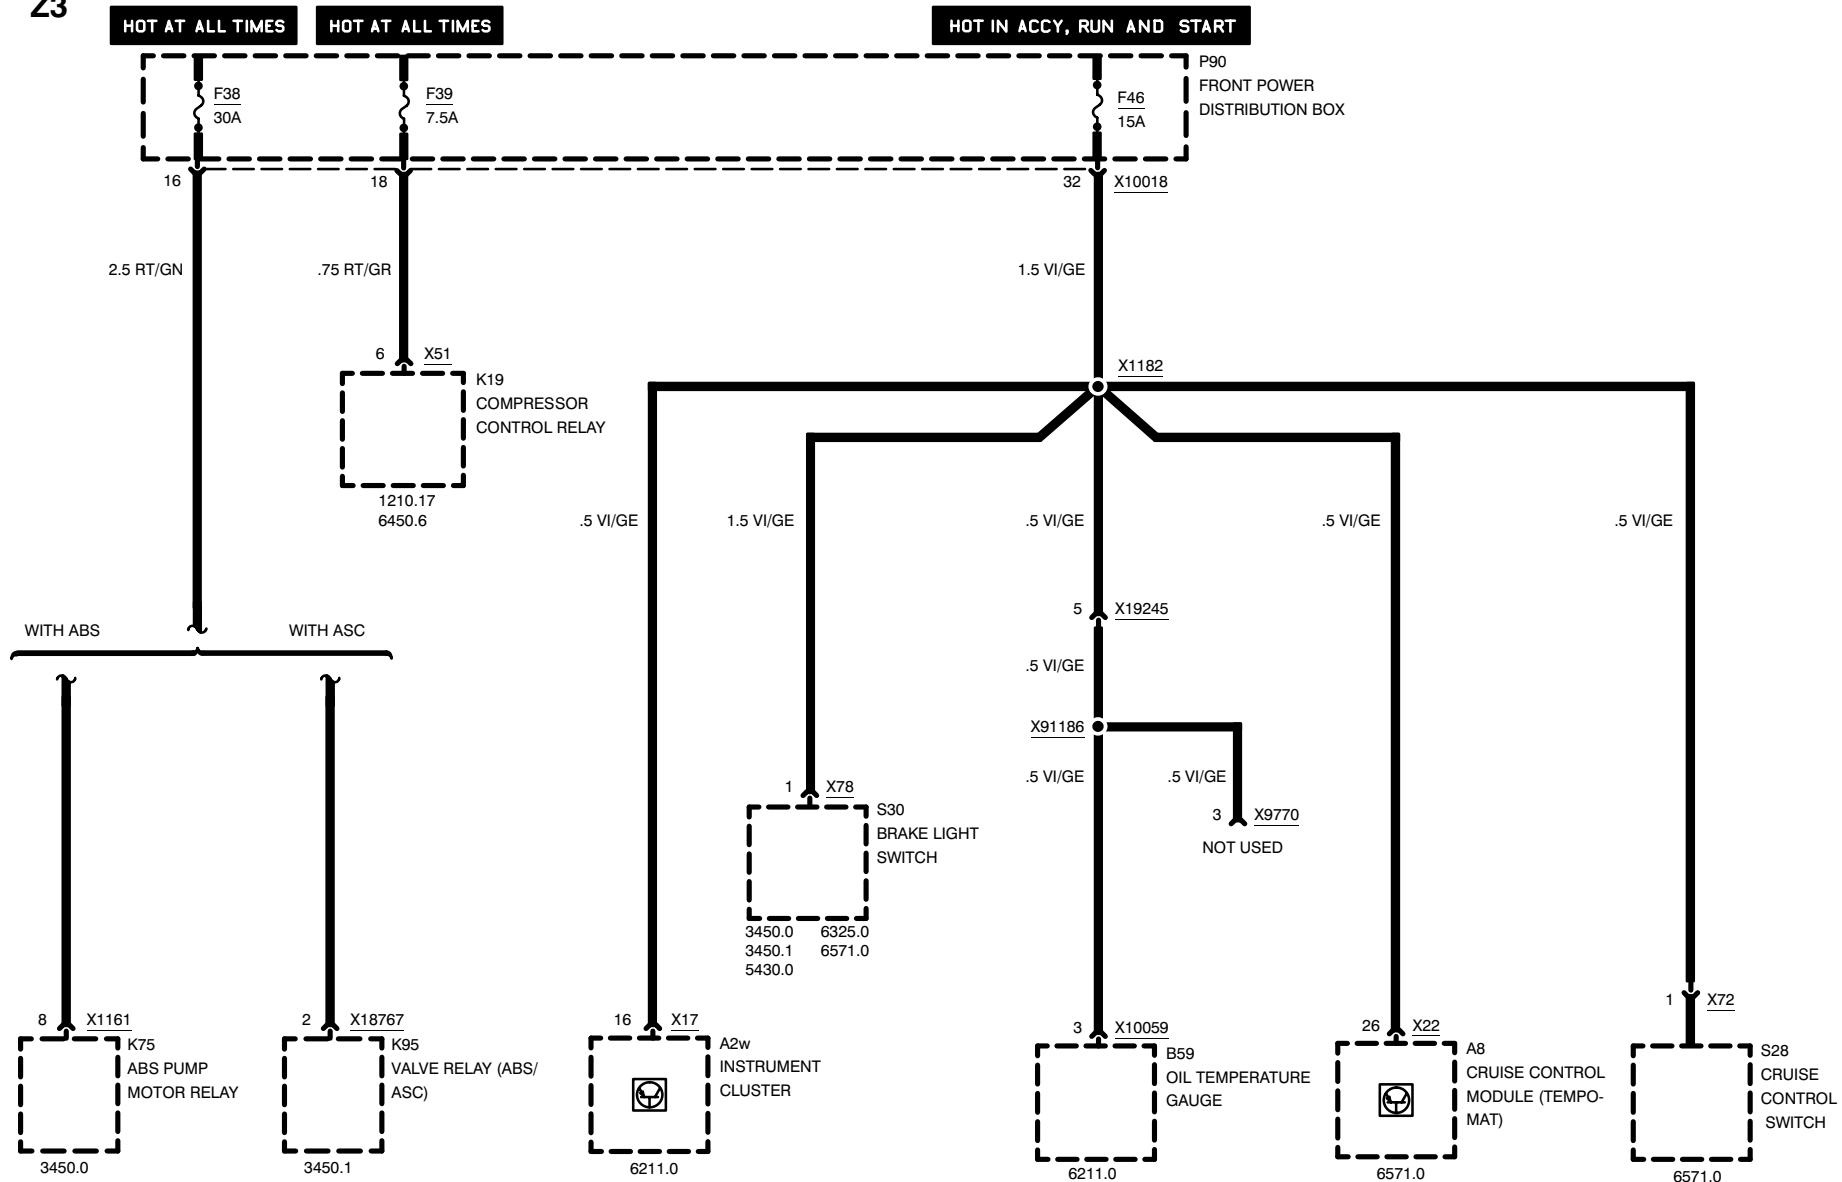

FUSE DETAILS


FUSES 48 AND 49

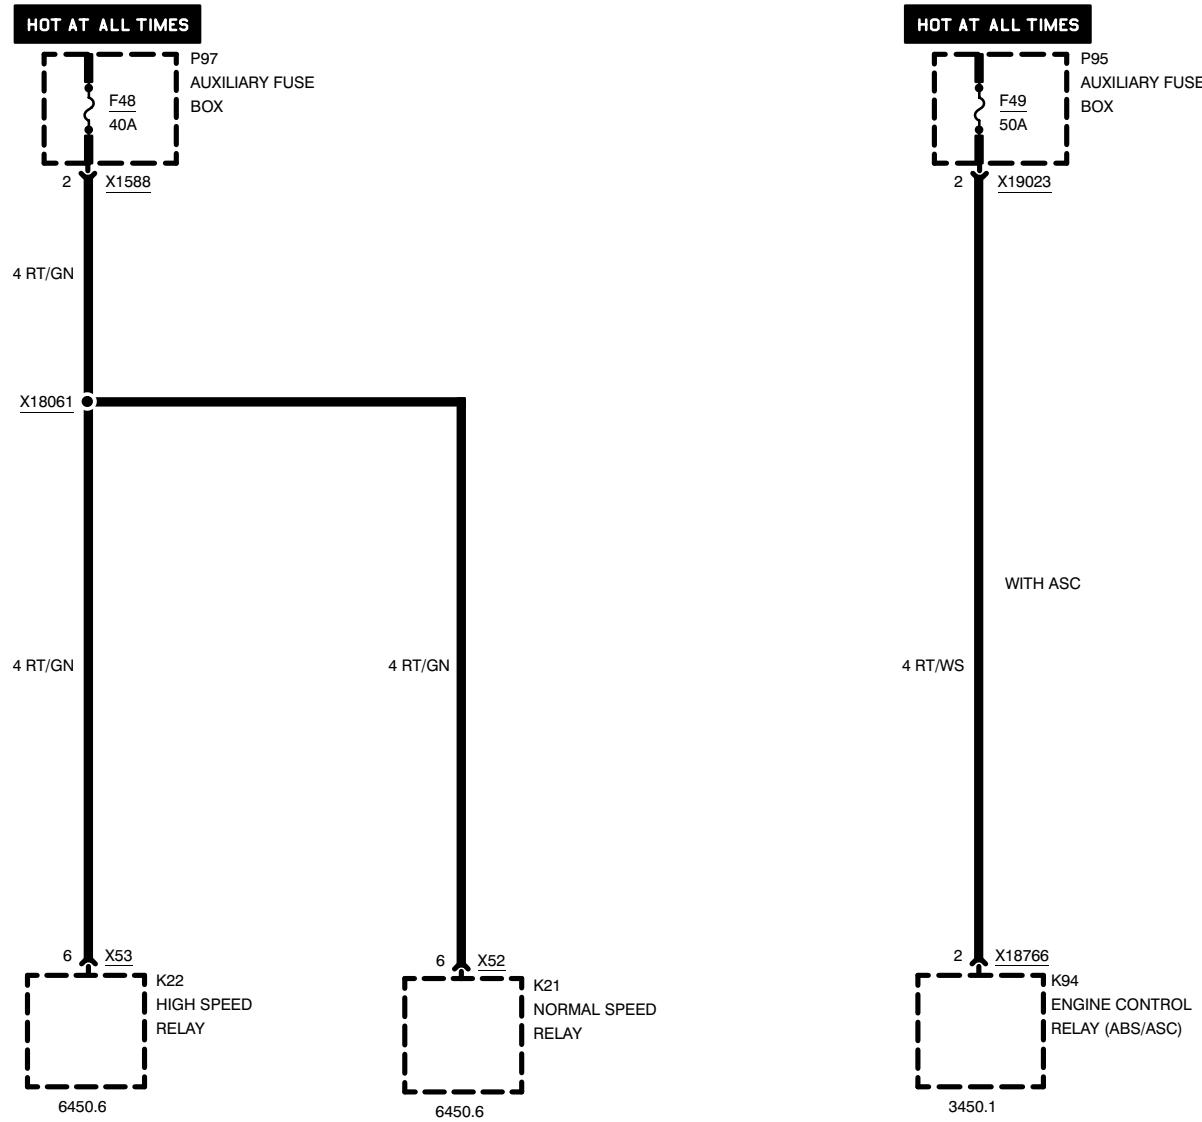

GROUND DISTRIBUTION

GROUNDS X4 AND X165

Z3

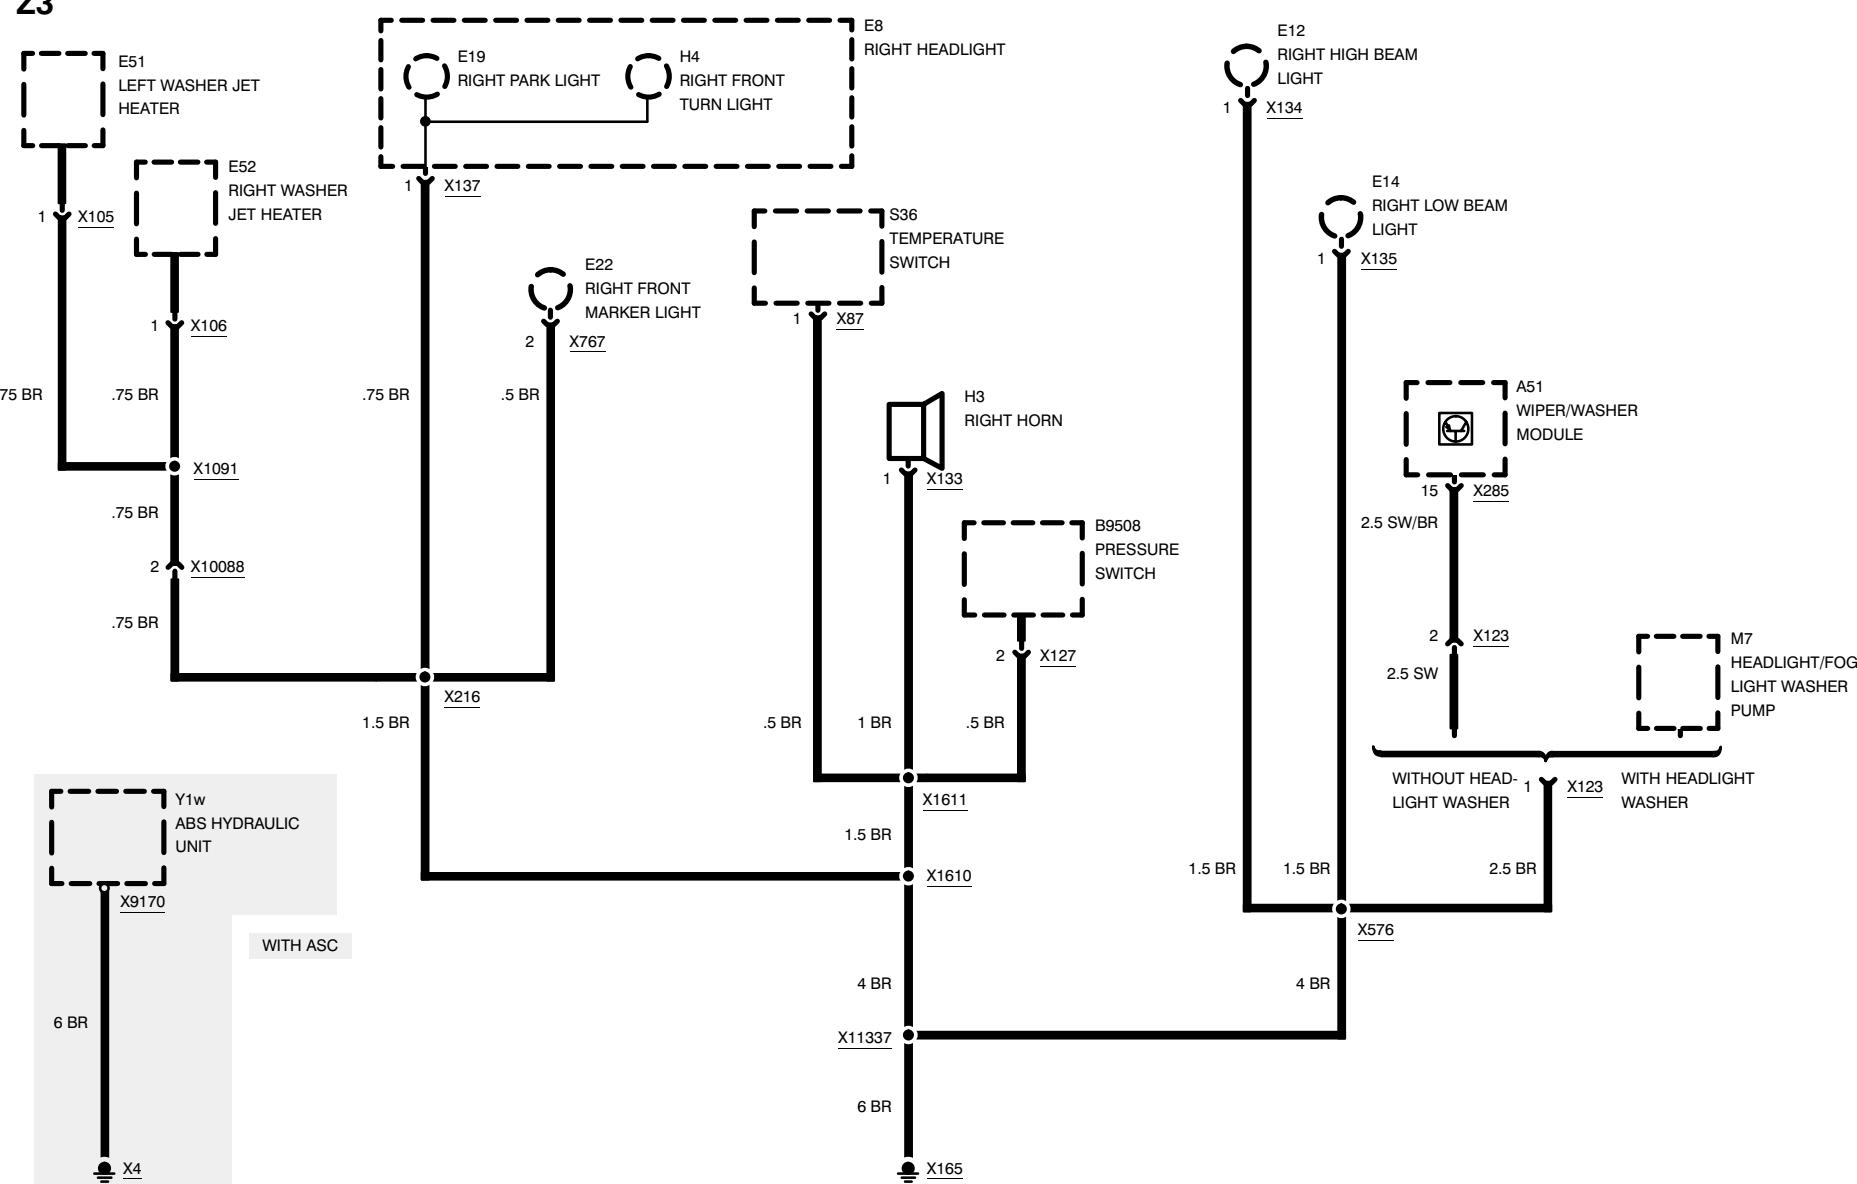


GROUND DISTRIBUTION

GROUND X166

02/98

0670-4-01

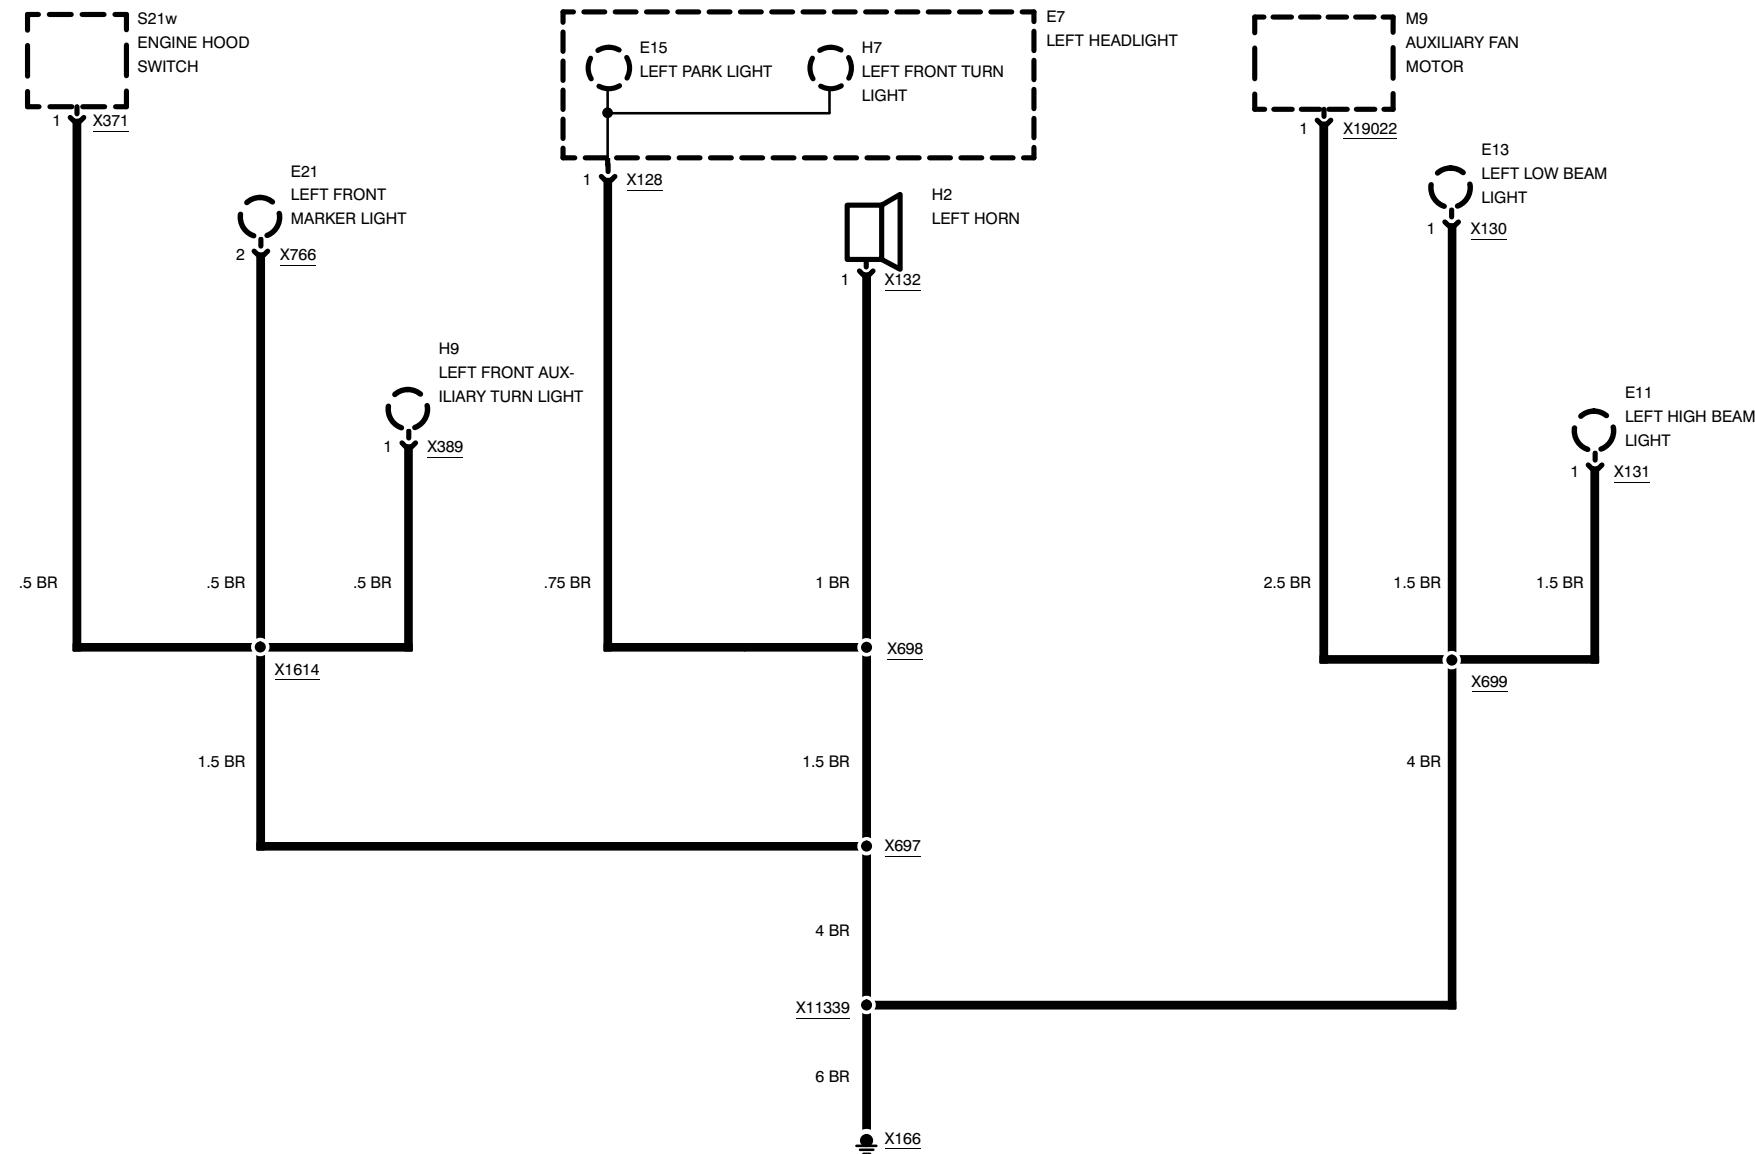

1998

GROUND DISTRIBUTION


GROUNDS X170 AND X1166

Z3

03/98

0670.4-02

1998

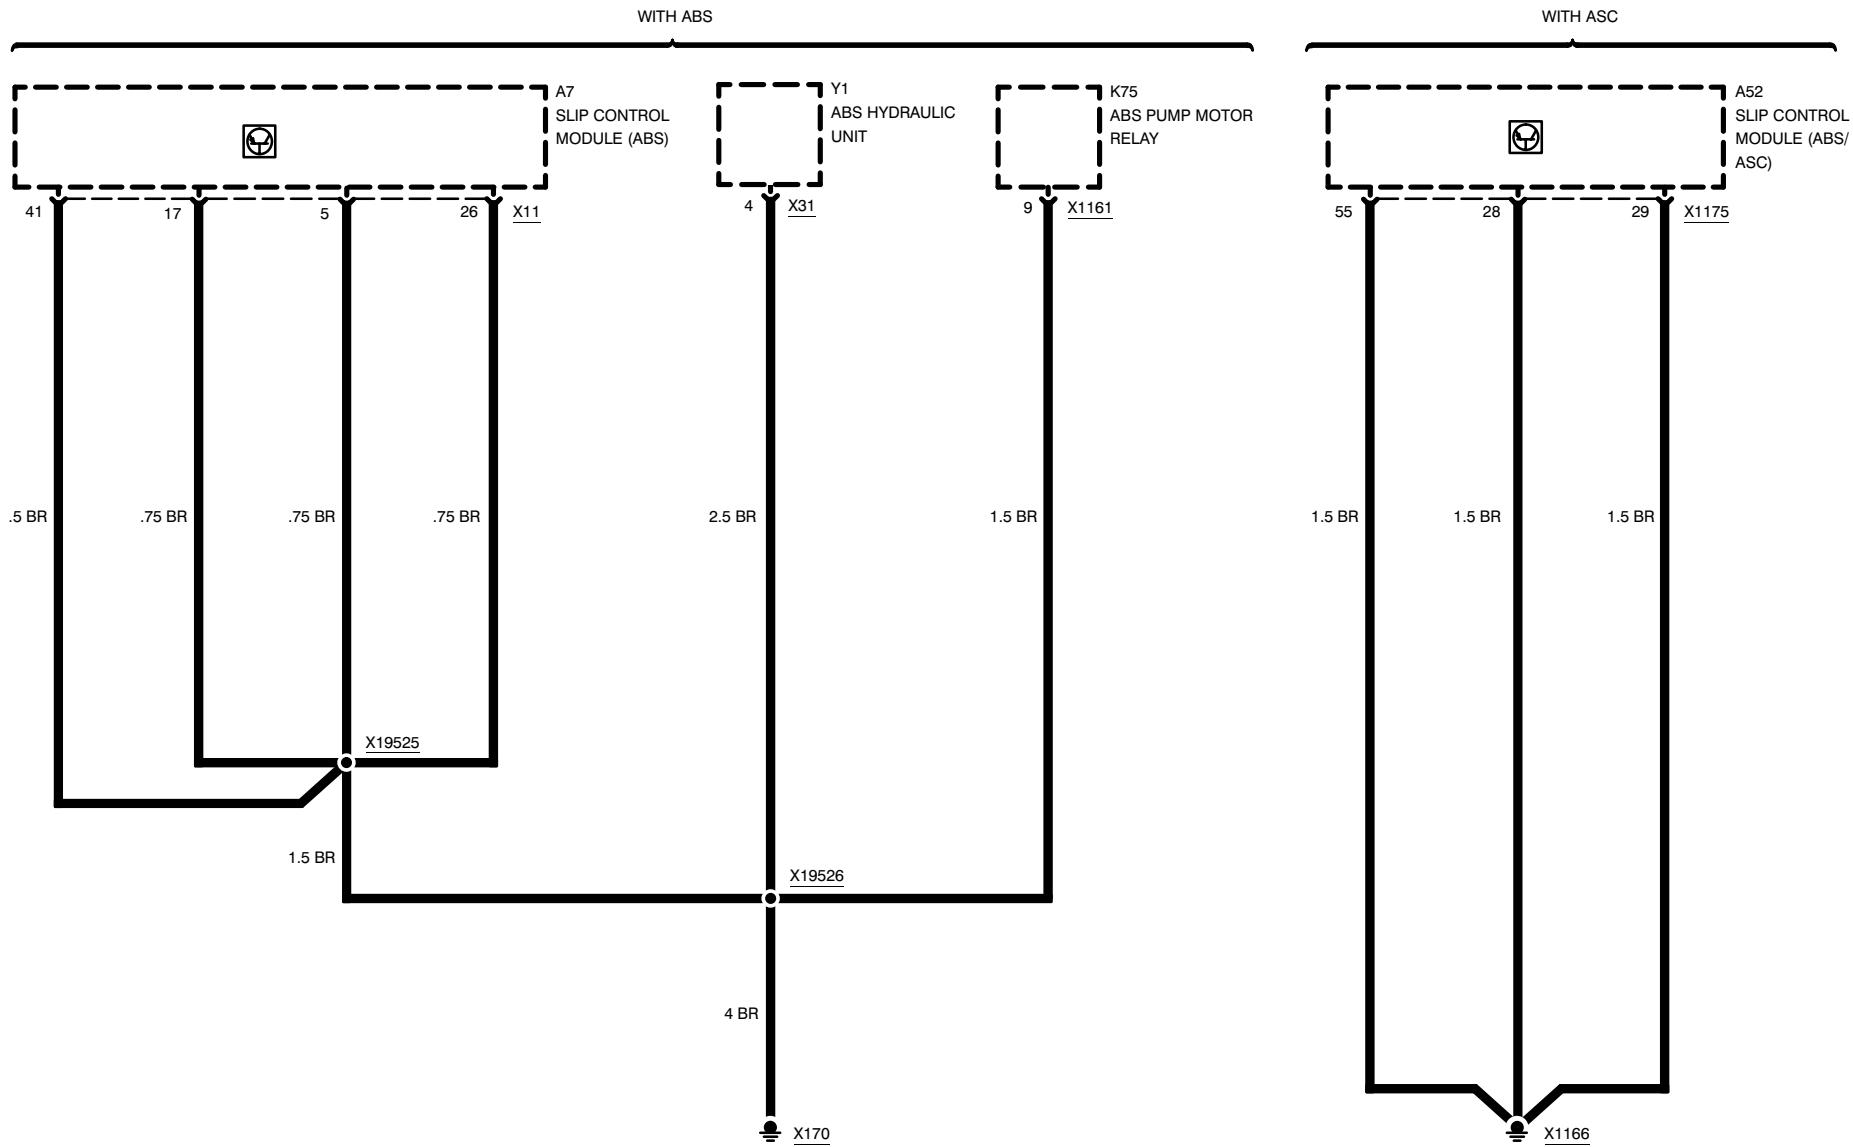



GROUND DISTRIBUTION

GROUND X6454

Z3

W6203
CRANKSHAFT
POSITION/RPM
SENSOR SHIELD

K6326
UNLOADER RELAY,
TERMINAL 15

4 X6326

32 34 4

28 X6000

B6207
HOT FILM AIR
MASS METER

1 X6207

W6165
SHIELD UP TO
10mm BEFORE
IGNITION COIL
CONNECTOR

X6492

.5 BR

.5 BR

2.5 BR

1.5 BR

1.5 BR

.5 BR

1.5 BR/OR

.5 BR/OR

M6506
E-BOX FAN

1 X6506

X6458

4 BR

X6454

4 BR/OR

1.5 BR/OR 19
D100
DATA LINK CON-
NECTOR
X6002


02/98


0670.4-03

1998

GROUND DISTRIBUTION

GROUND X9633

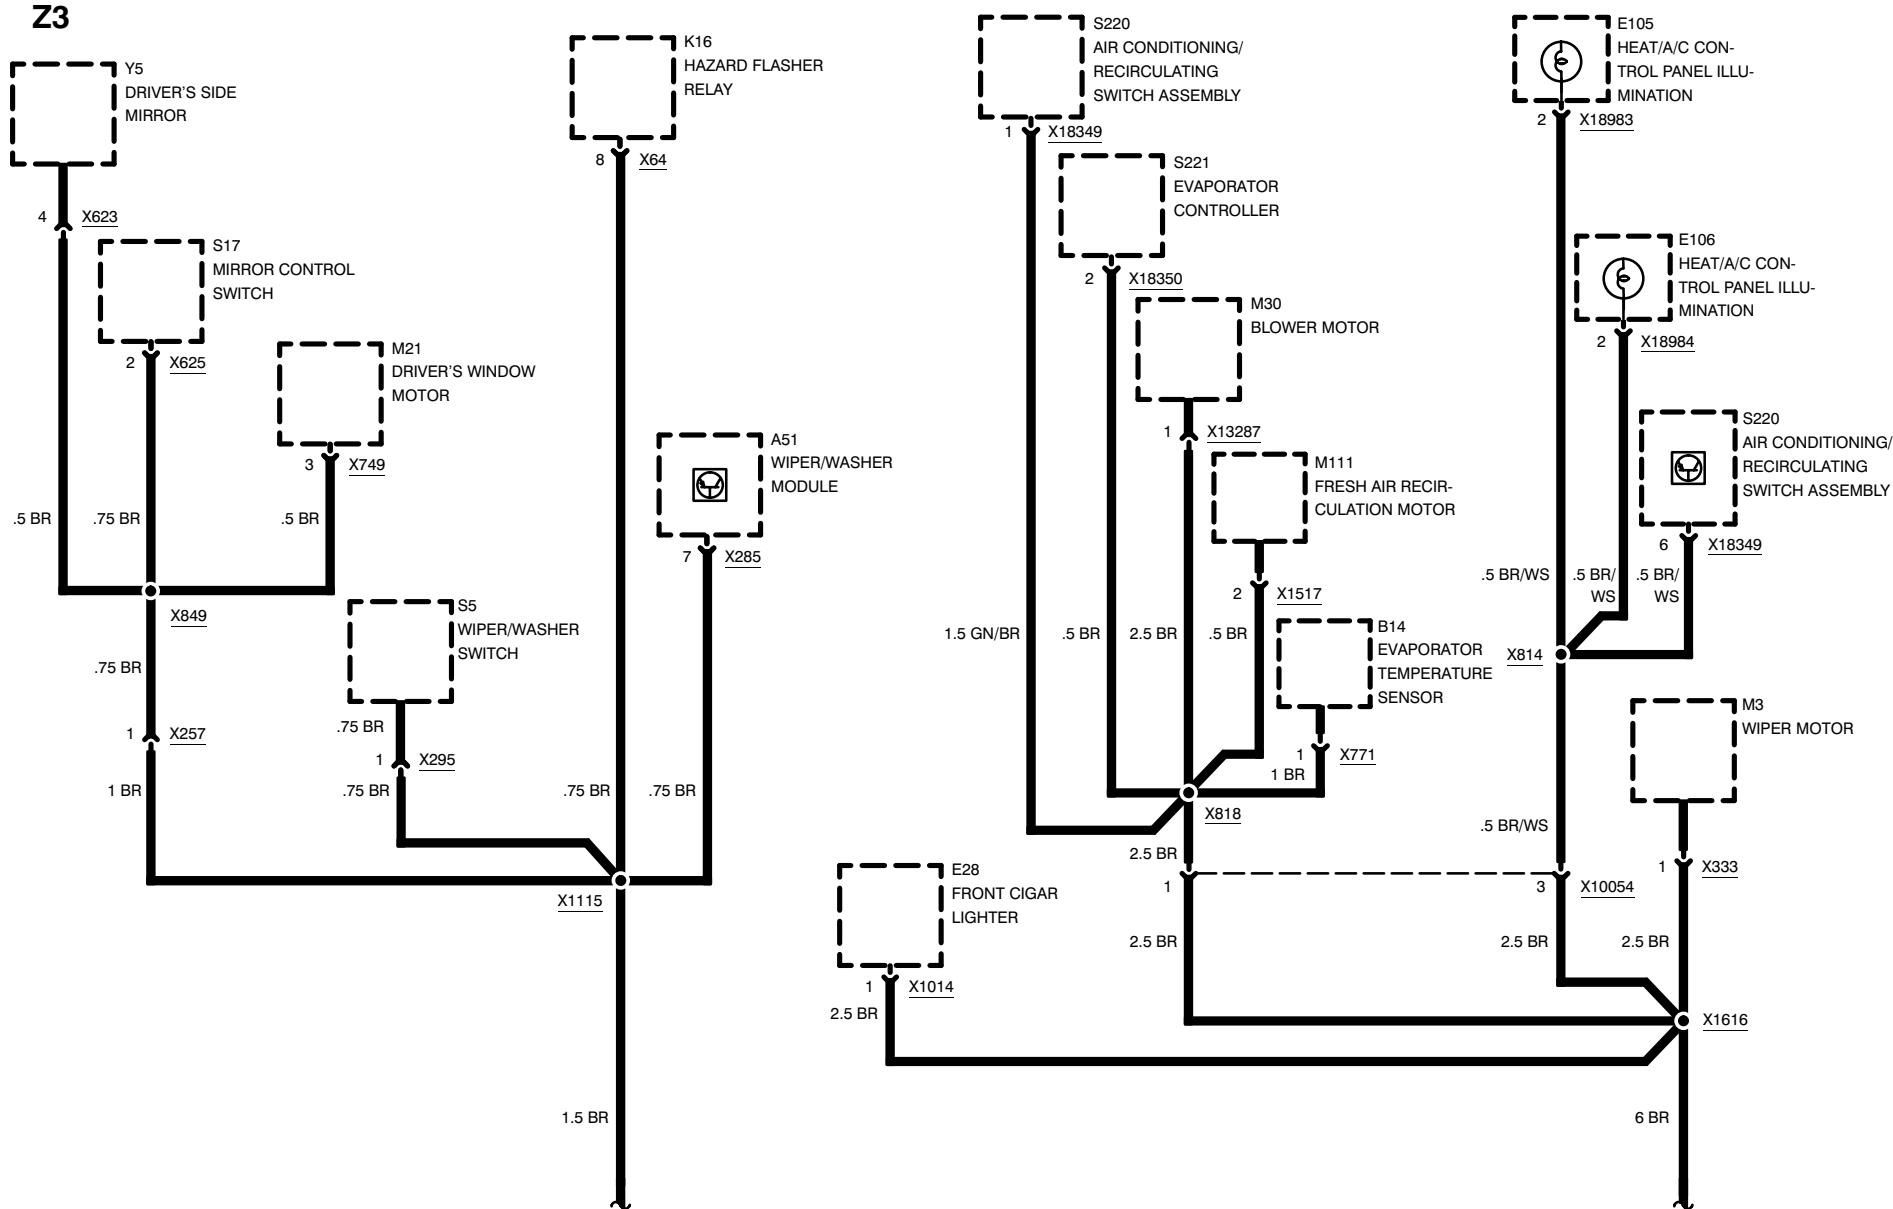

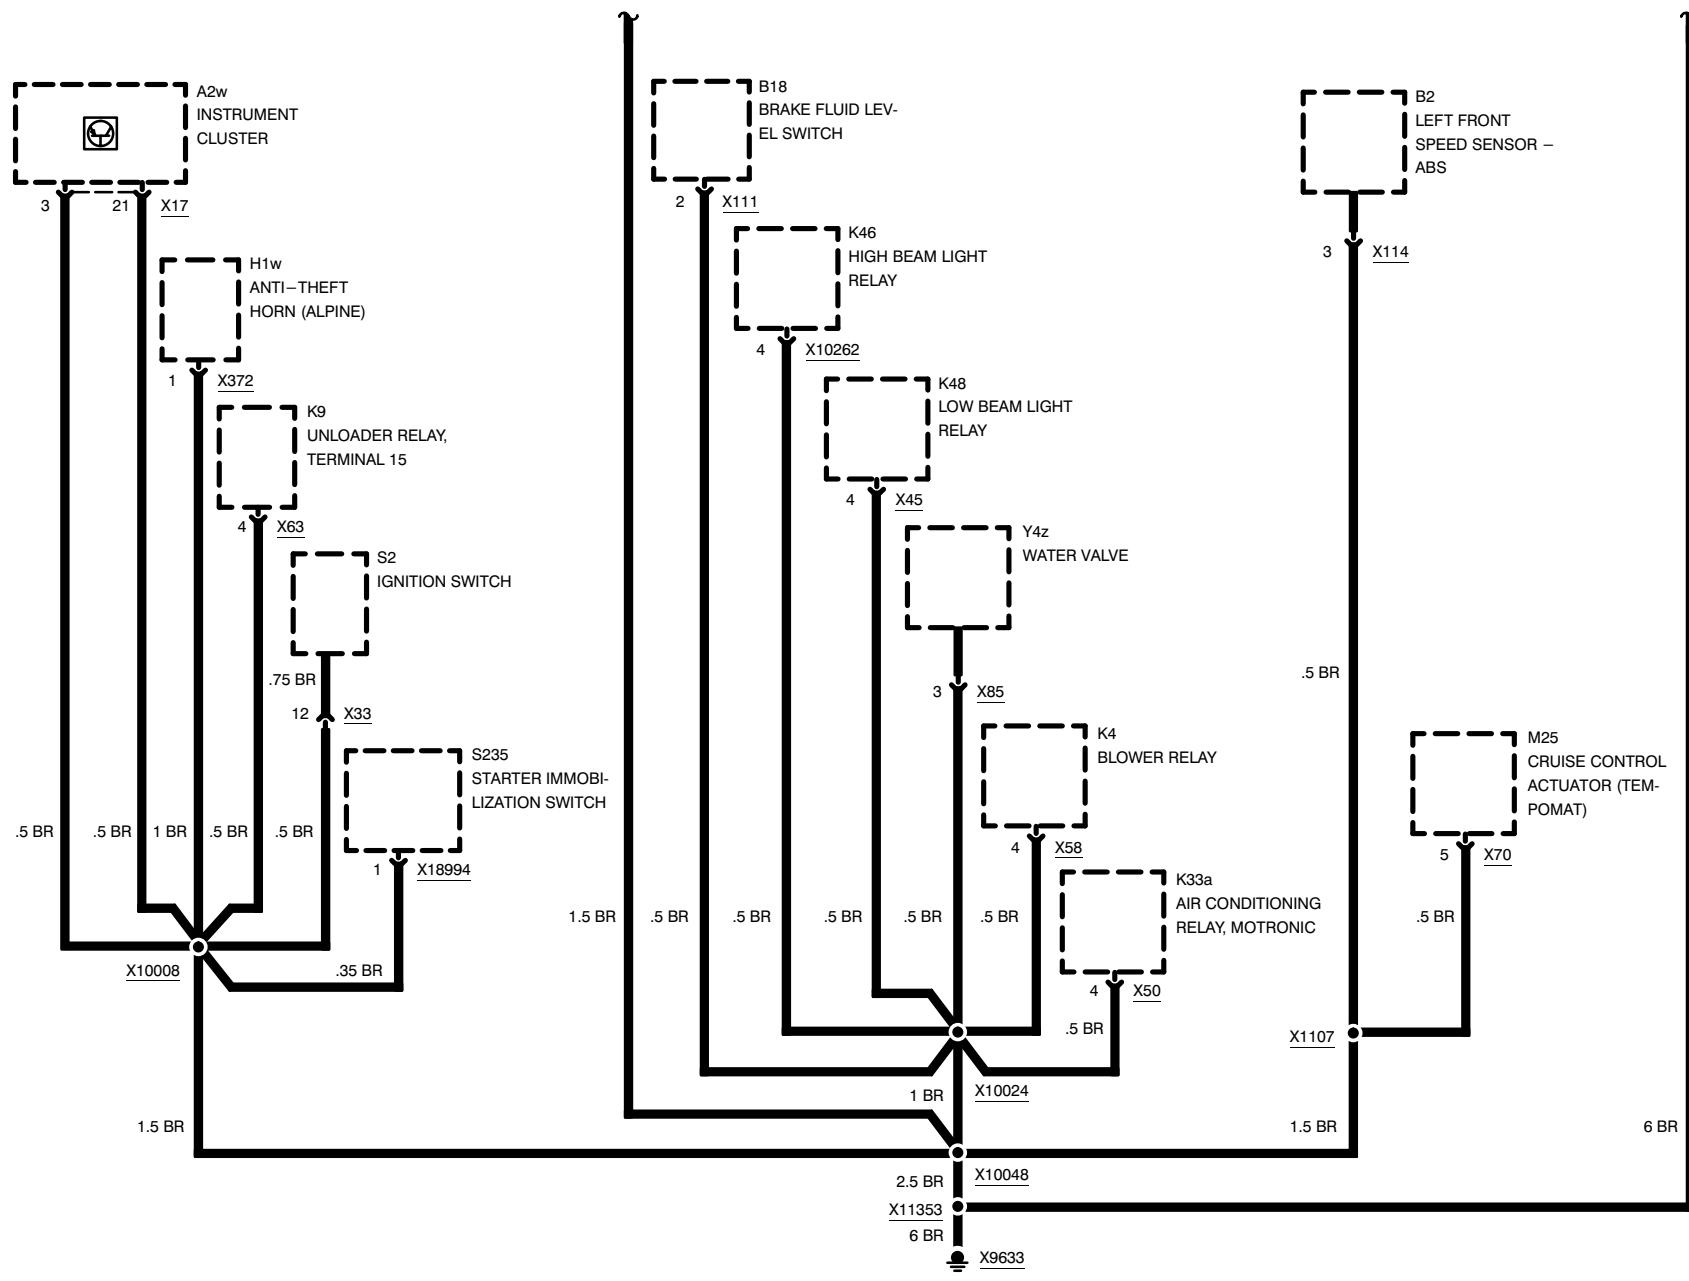

02/98

- 0670.4-05



1998



GROUND DISTRIBUTION

GROUND X10010

Z3

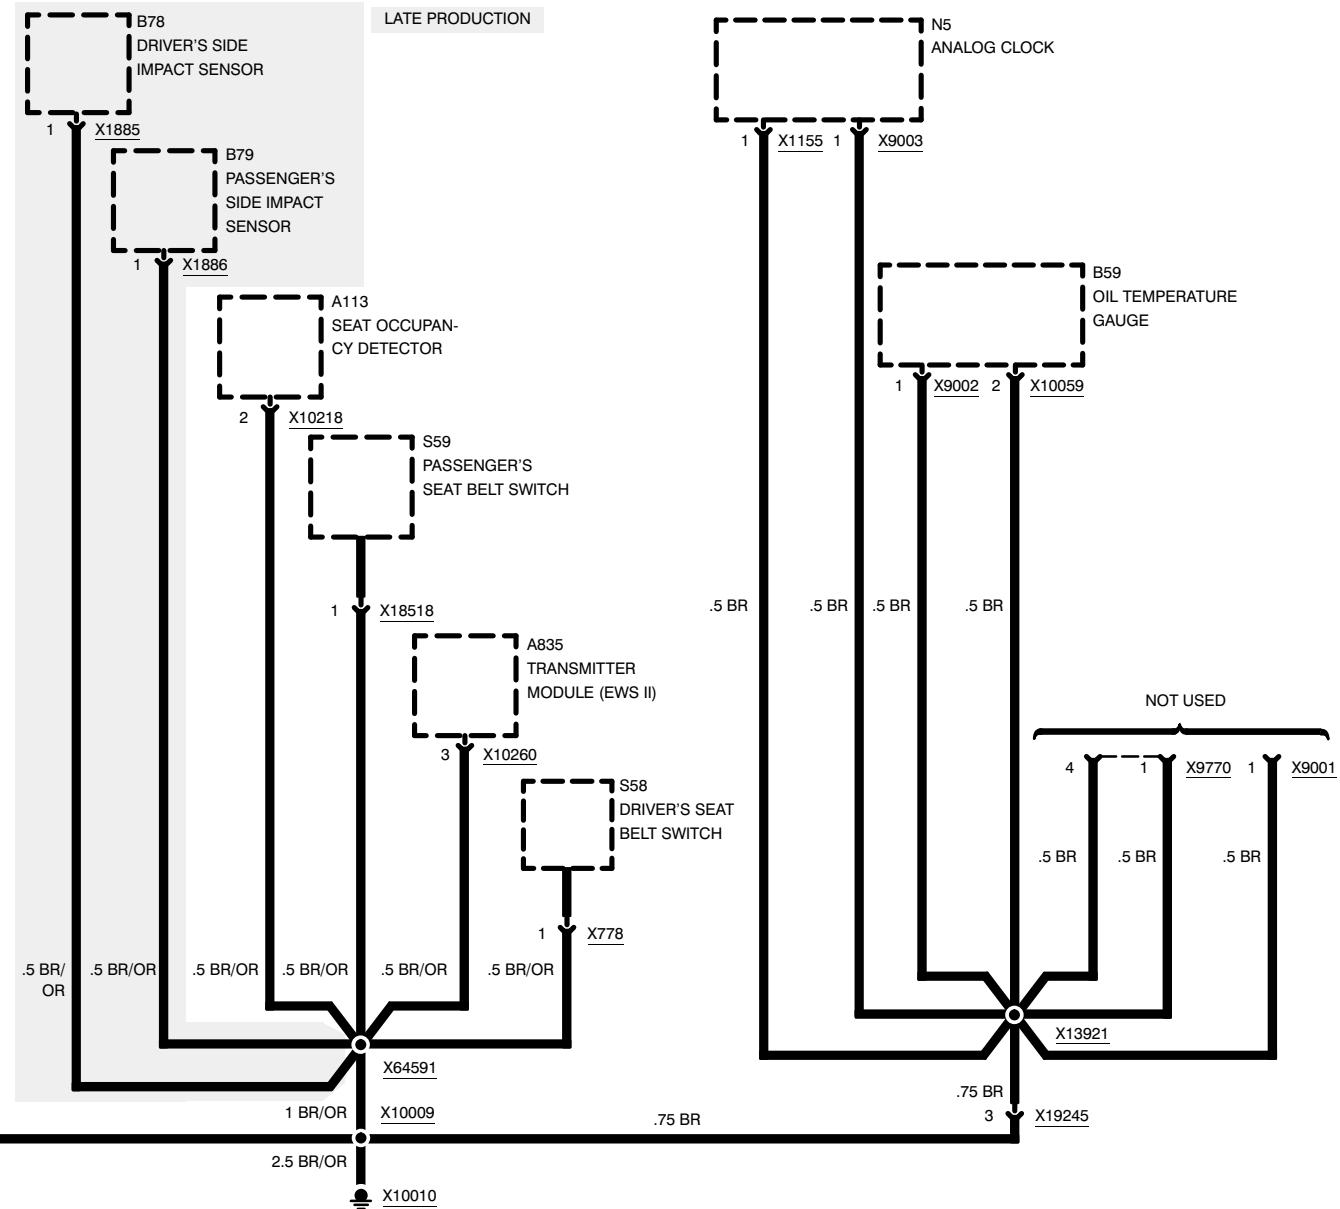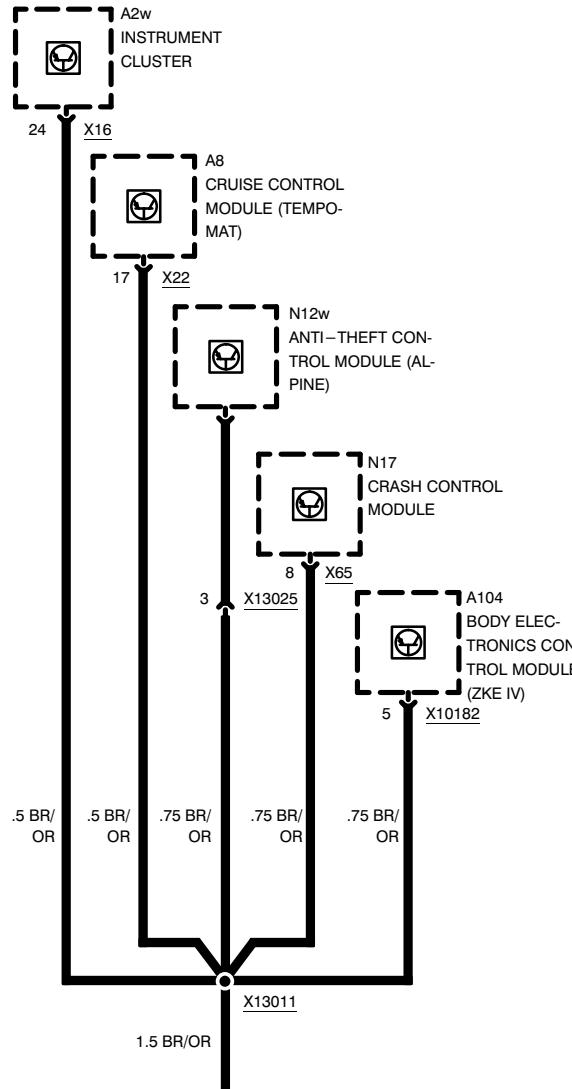


GROUND DISTRIBUTION

GROUND X13006

02/98

0670.4-07

1998

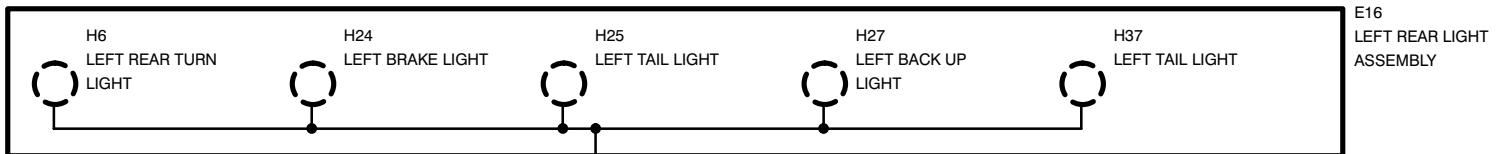

1 X319

1.5 BR

0670.4-08

5 X318

1.5 BR

0670.4-08




E17
RIGHT REAR LIGHT
ASSEMBLY



GROUND DISTRIBUTION

GROUND X13006

Z3

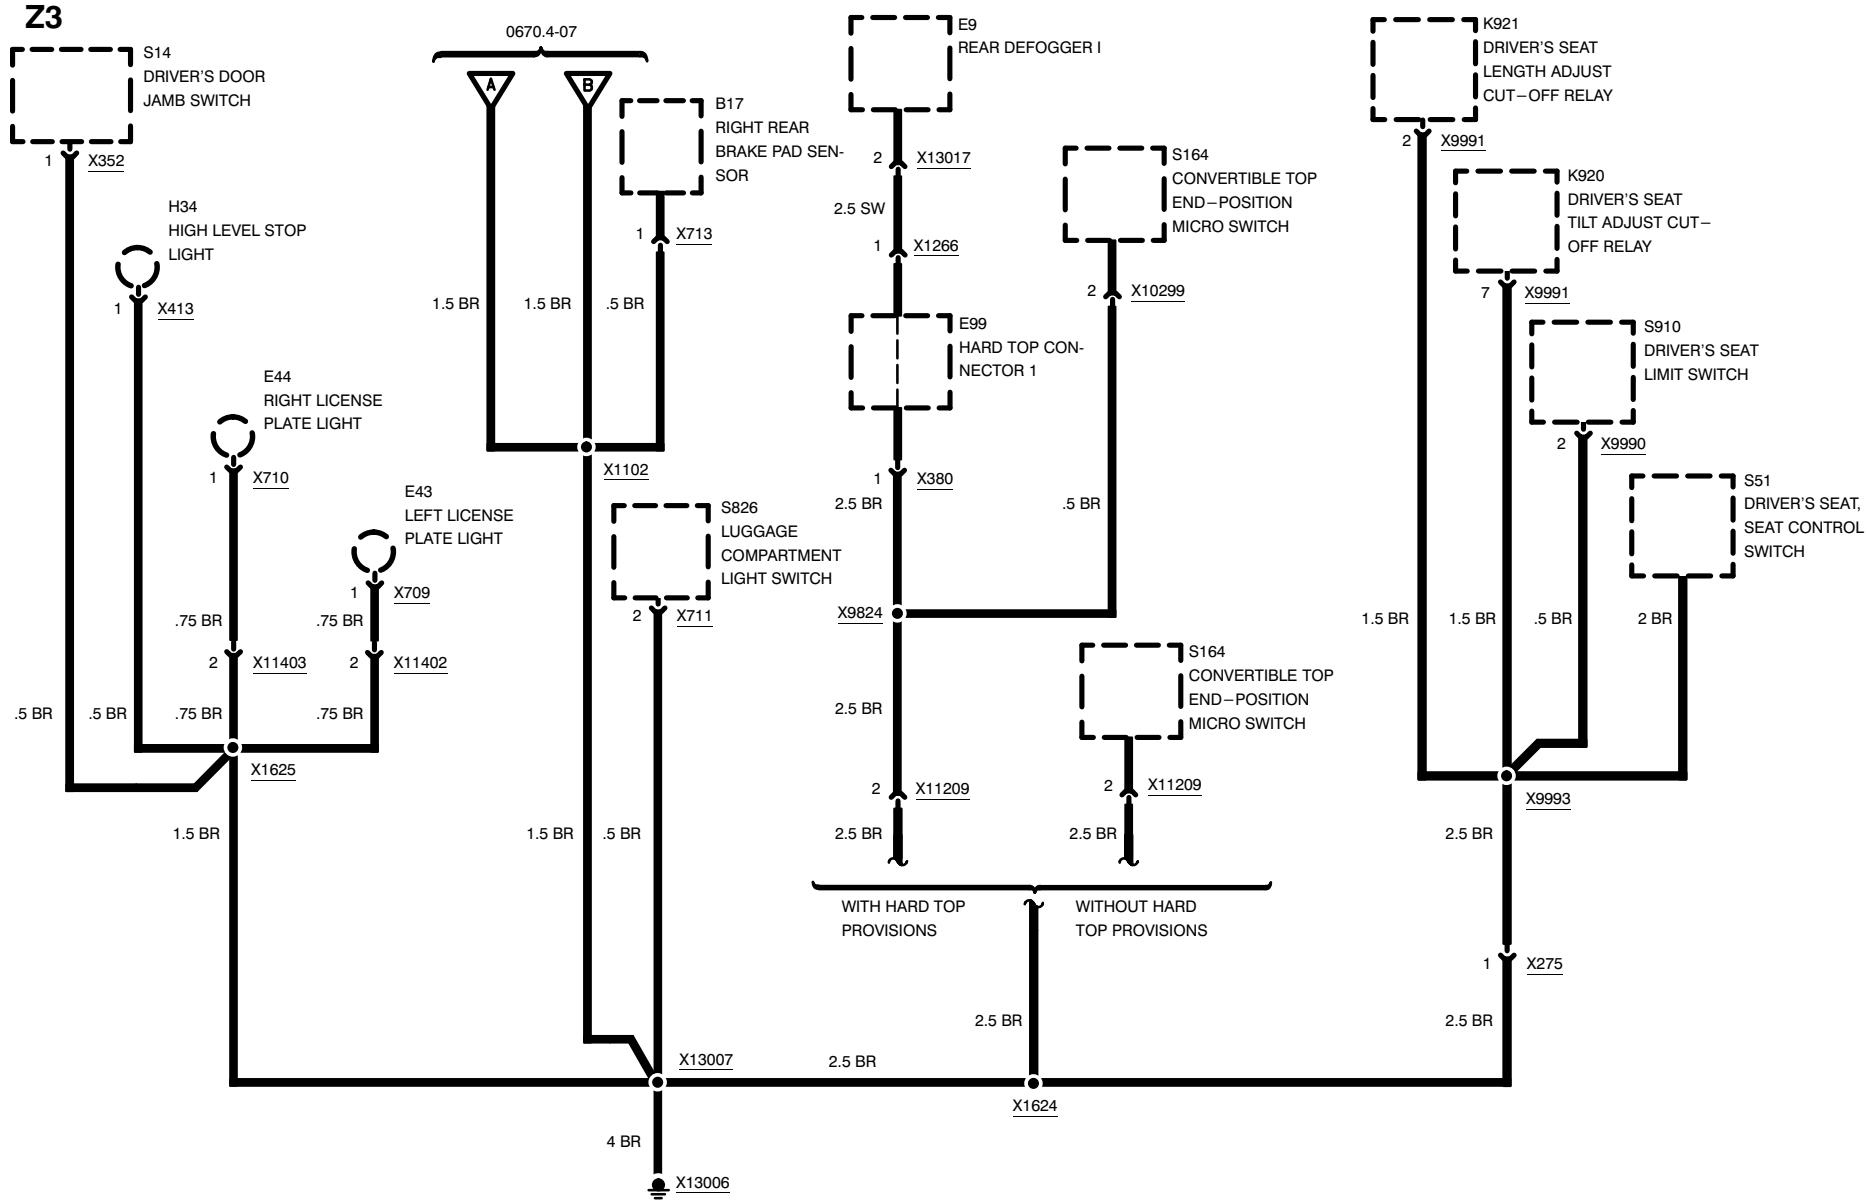


02/98

0670.4-08

1998


GROUND DISTRIBUTION


GROUND X18170

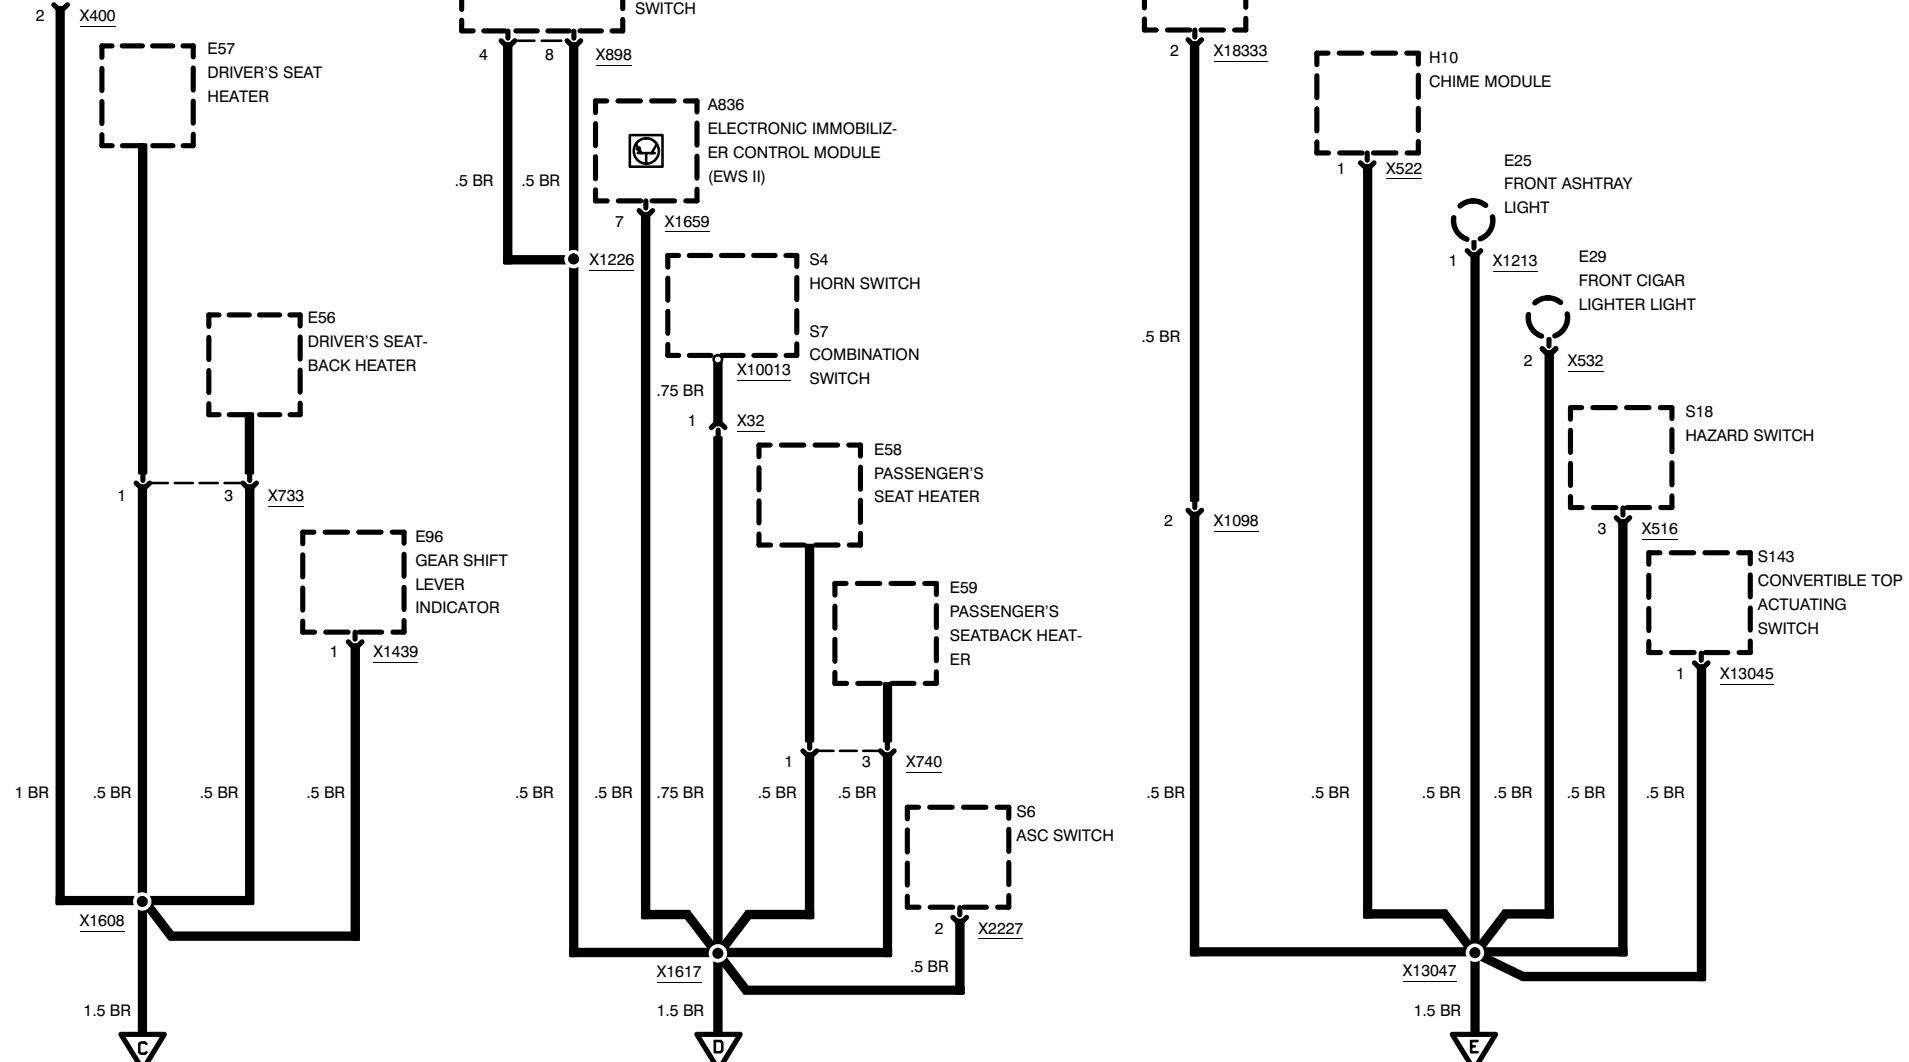
TELEPHONE CON-
NECTOR

GROUND DISTRIBUTION

GROUND X18170

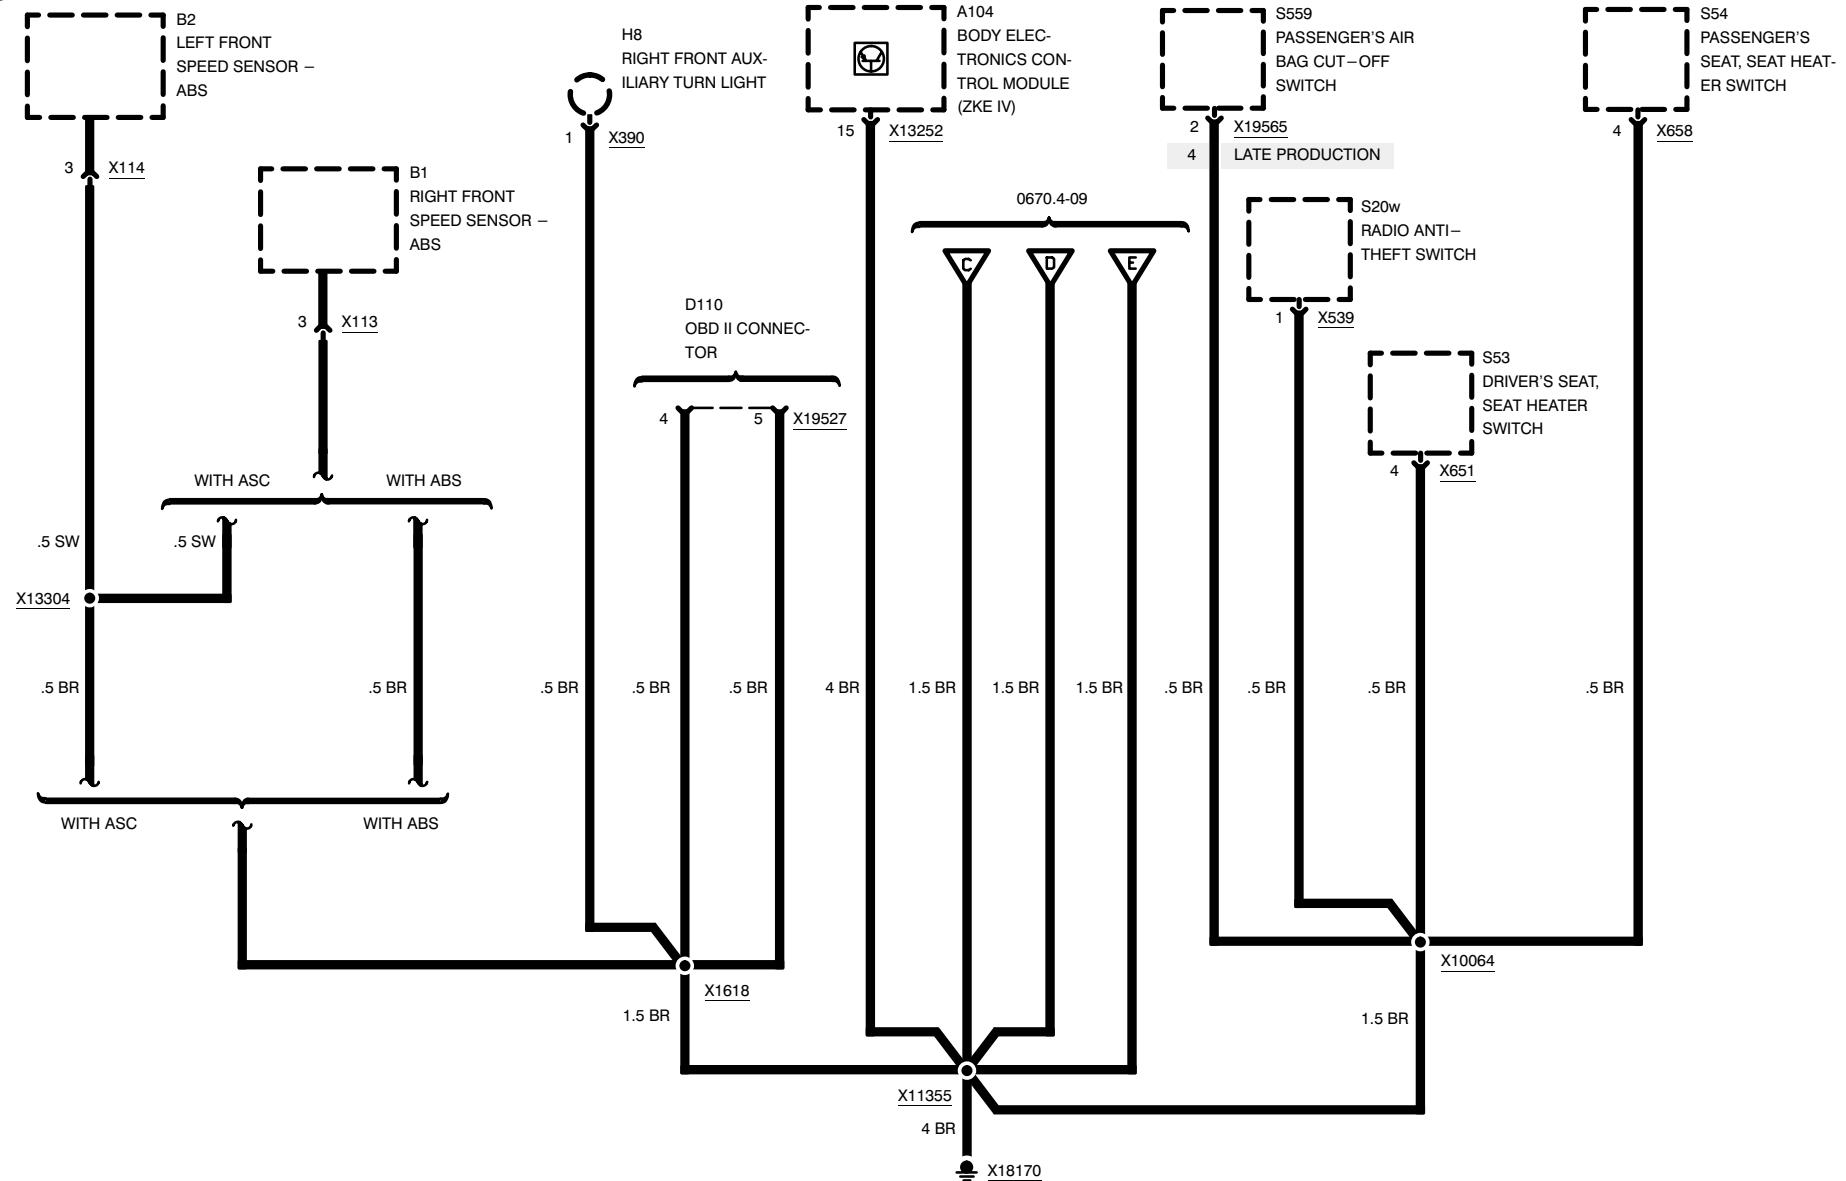

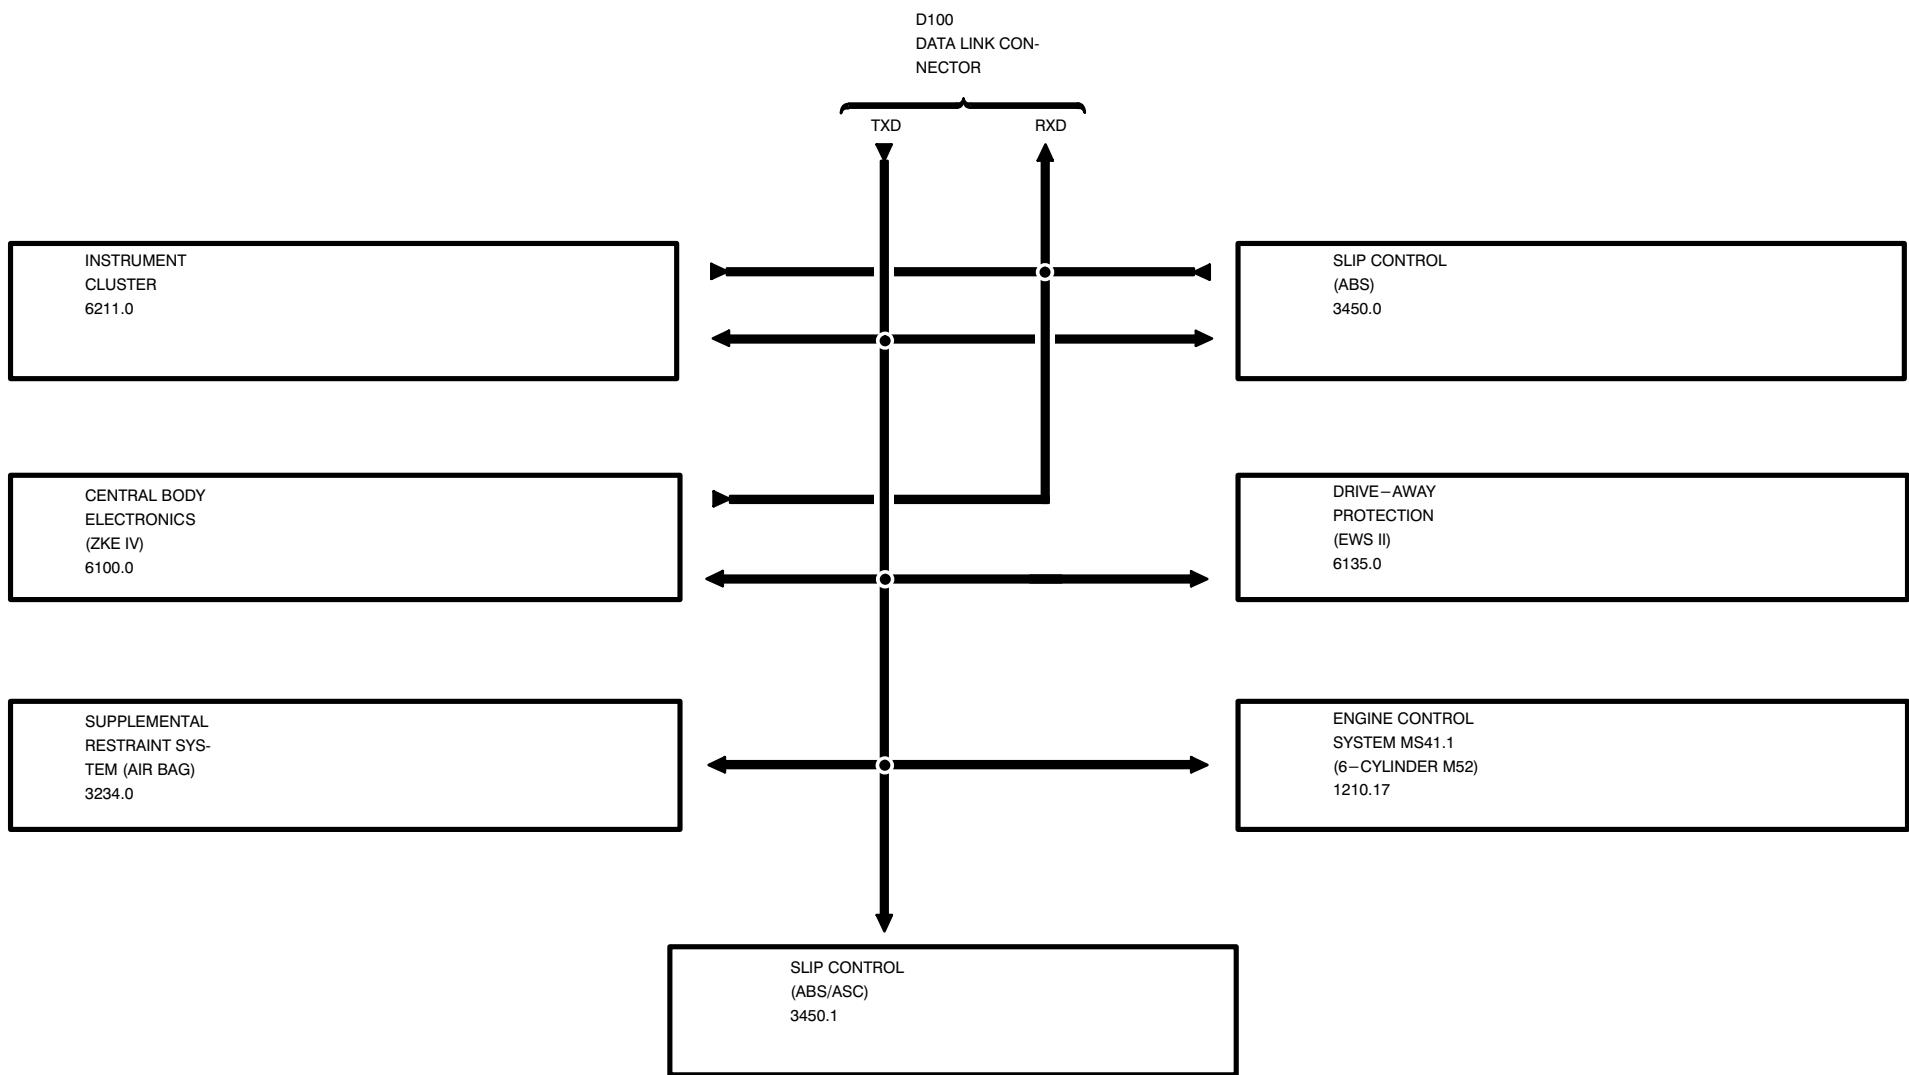

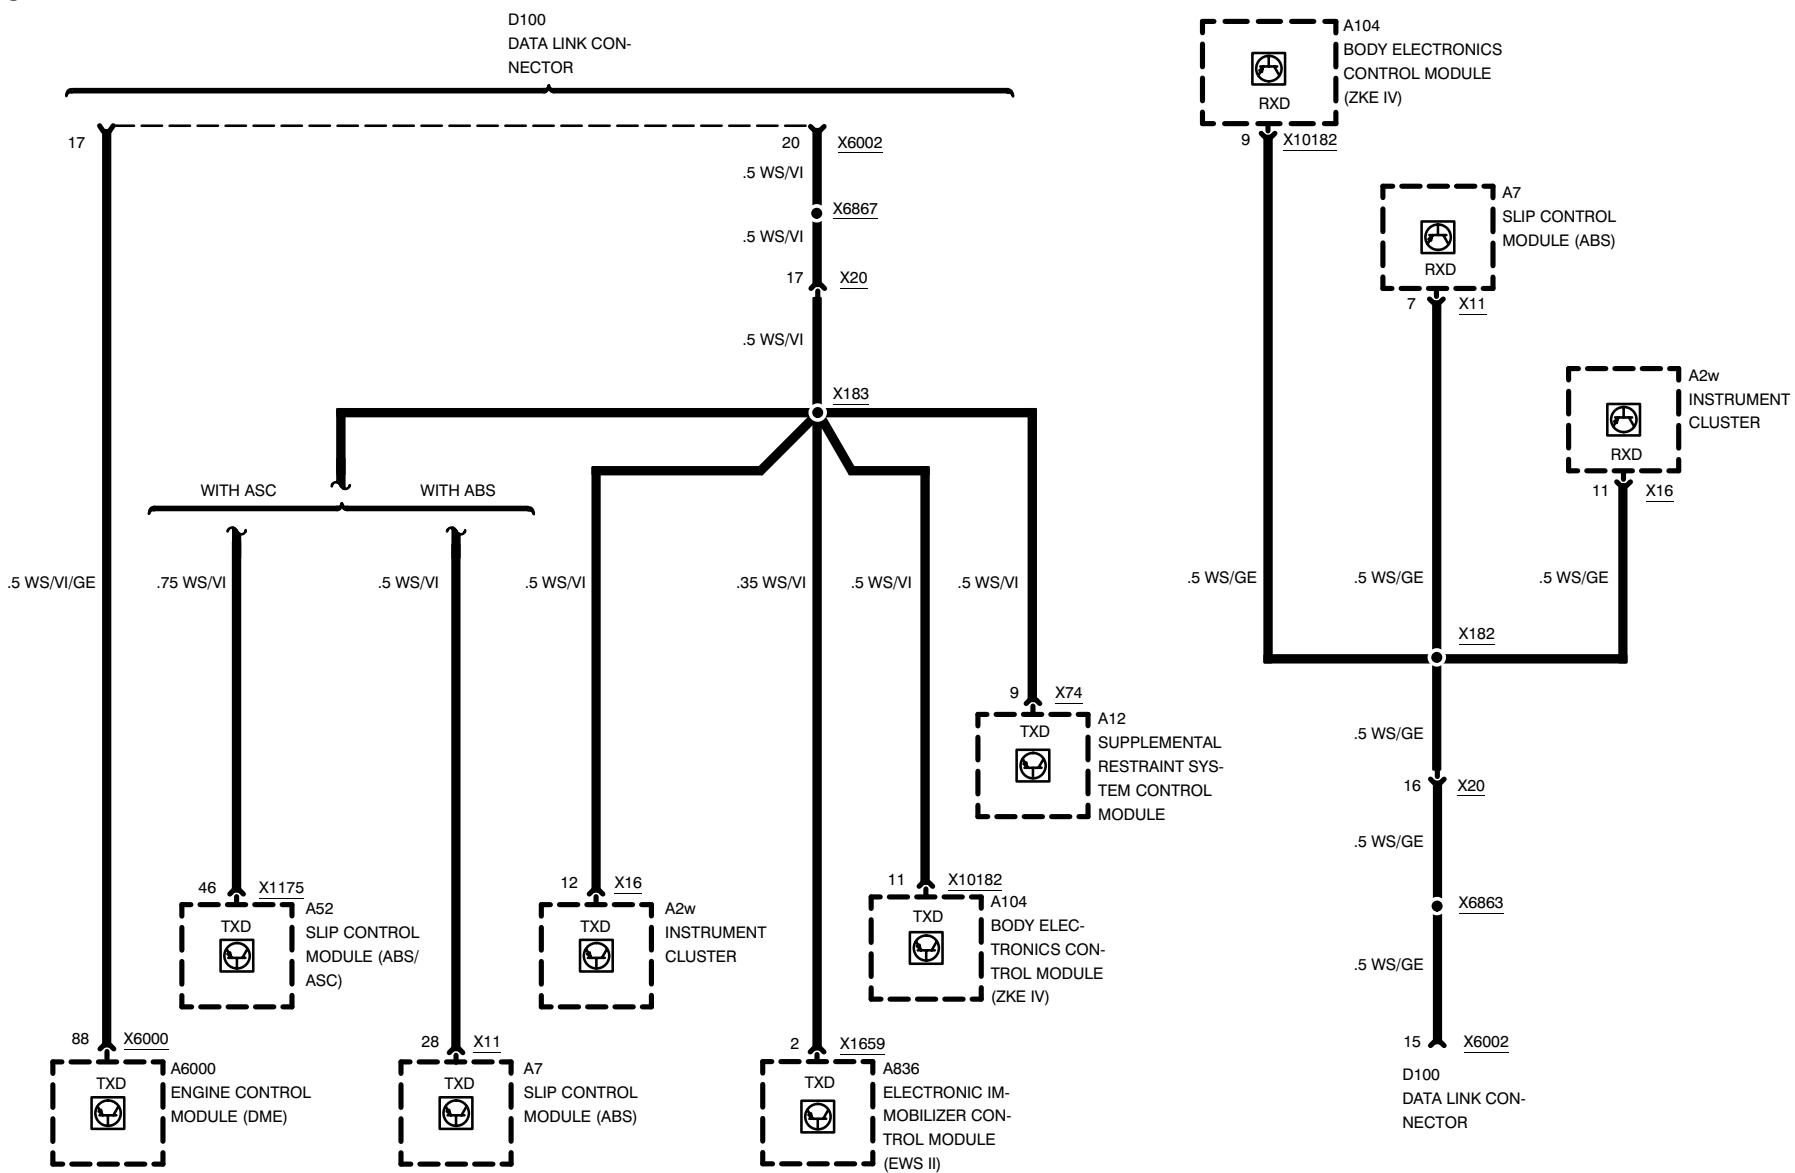
DATA LINK
TXD AND RXD

DATA LINK**DATA LINK CONNECTOR, PINS 1, 7, 16, 4, 12, AND 14**

03/98

0670.5-02

1998

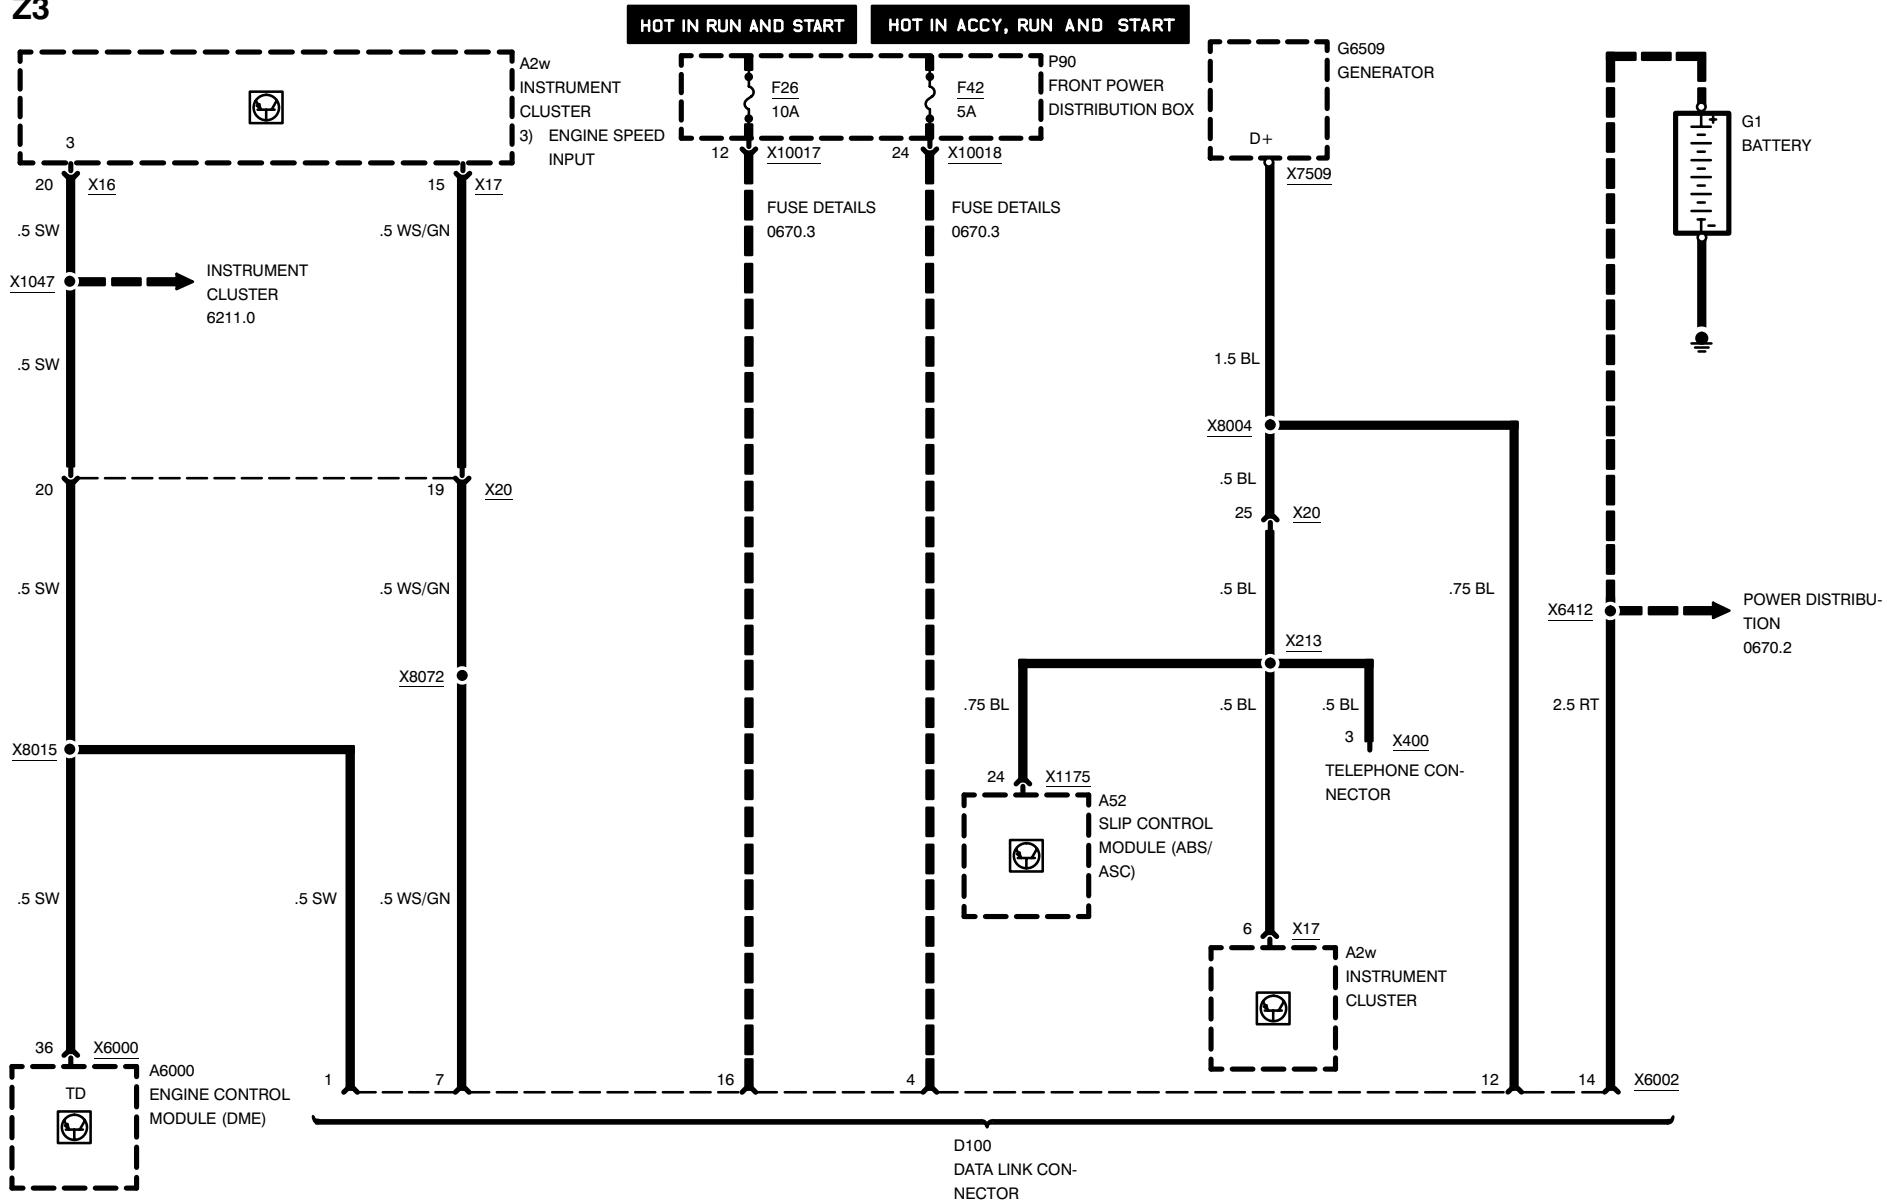


DATA LINK**DATA LINK CONNECTOR, PINS 19, 18, 2, AND OBD II CONNECTOR**

02/98

0670.5-03



1998

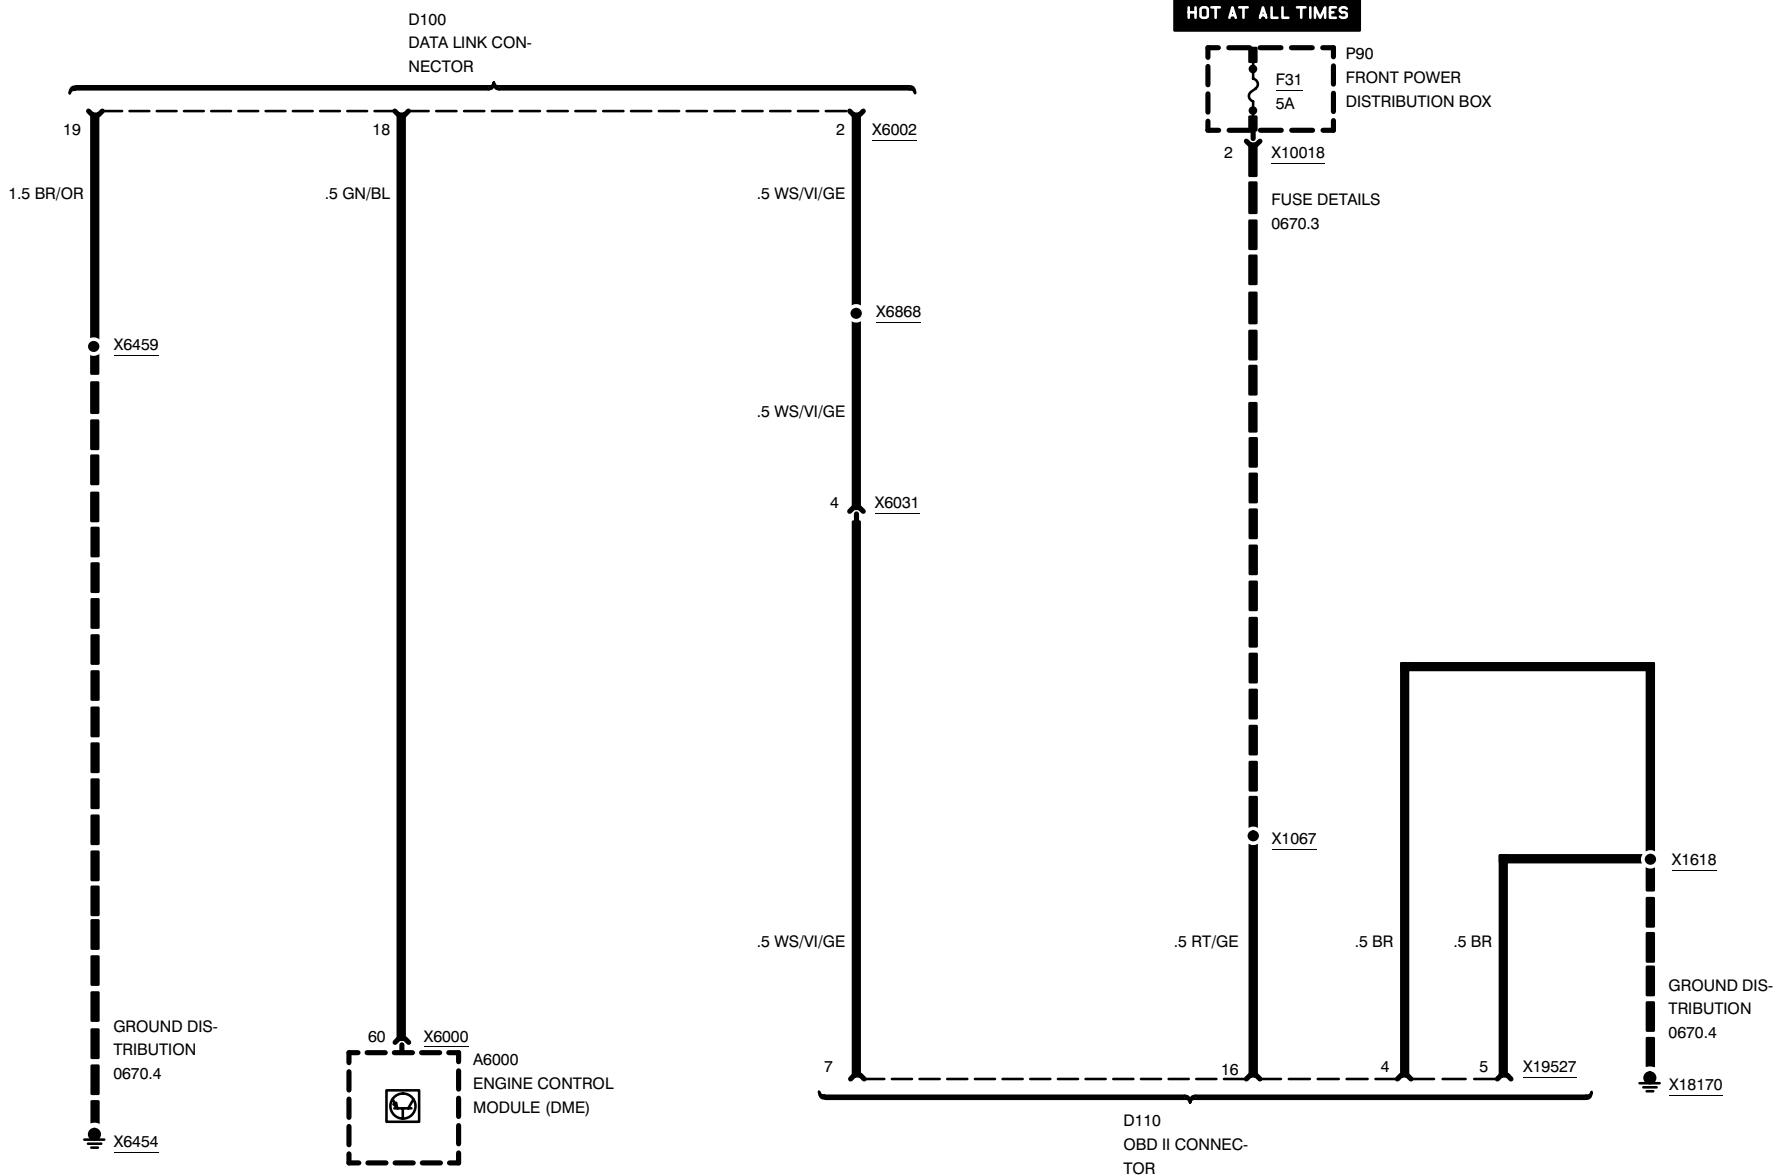


DATA LINK**DATA LINK CONNECTOR (X6002)**

02/98


0670-5-04

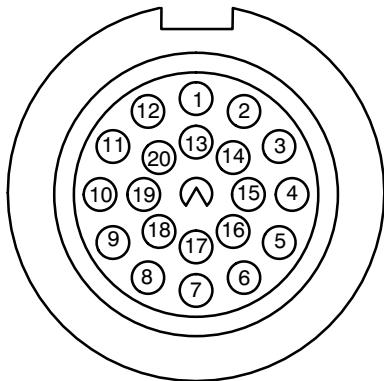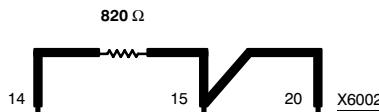BRIDGES IN CAP OF D100 DATA
LINK CONNECTOR

| PIN NUMBER | TERMINAL NUMBER | TERMINAL DESCRIPTION | WIRE COLOR |
|------------|-----------------|--|------------|
| 1 | TD | ENGINE | SW |
| 2 | TXD2 | DIAGNOSTIC DATA LINK | WS/VI/GE |
| 3 | - | NOT OCCUPIED | |
| 4 | R | VOLTAGE: HOT IN ACCY, RUN AND START | VI/GN |
| 5 | - | NOT OCCUPIED | |
| 6 | - | NOT OCCUPIED | |
| 7 | SI | SERVICE INTERVAL RESET | WS/GN |
| 8 | - | NOT OCCUPIED | |
| 9 | - | NOT OCCUPIED | |
| 10 | - | NOT OCCUPIED | |
| 11 | - | NOT OCCUPIED | |
| 12 | 61(D+) | GENERATOR CHARGE INDICATOR | BL |
| 13 | - | NOT OCCUPIED | |
| 14 | 30 | VOLTAGE: HOT AT ALL TIMES | RT |
| 15 | RXD | DIAGNOSTIC DATA LINK | WS/GE |
| 16 | 15S | VOLTAGE: IGNITION SWITCH IN RUN AND START | GN/WS |
| 17 | TXD | DIAGNOSTIC DATA LINK | WS/VI/GE |
| 18 | PGSP | PROGRAM SELECT FOR ENGINE CONTROL MODULE (DME) | GN/BL |
| 19 | 31 | GROUND | BR/OR |
| 20 | TXD | DIAGNOSTIC DATA LINK | WS/VI |

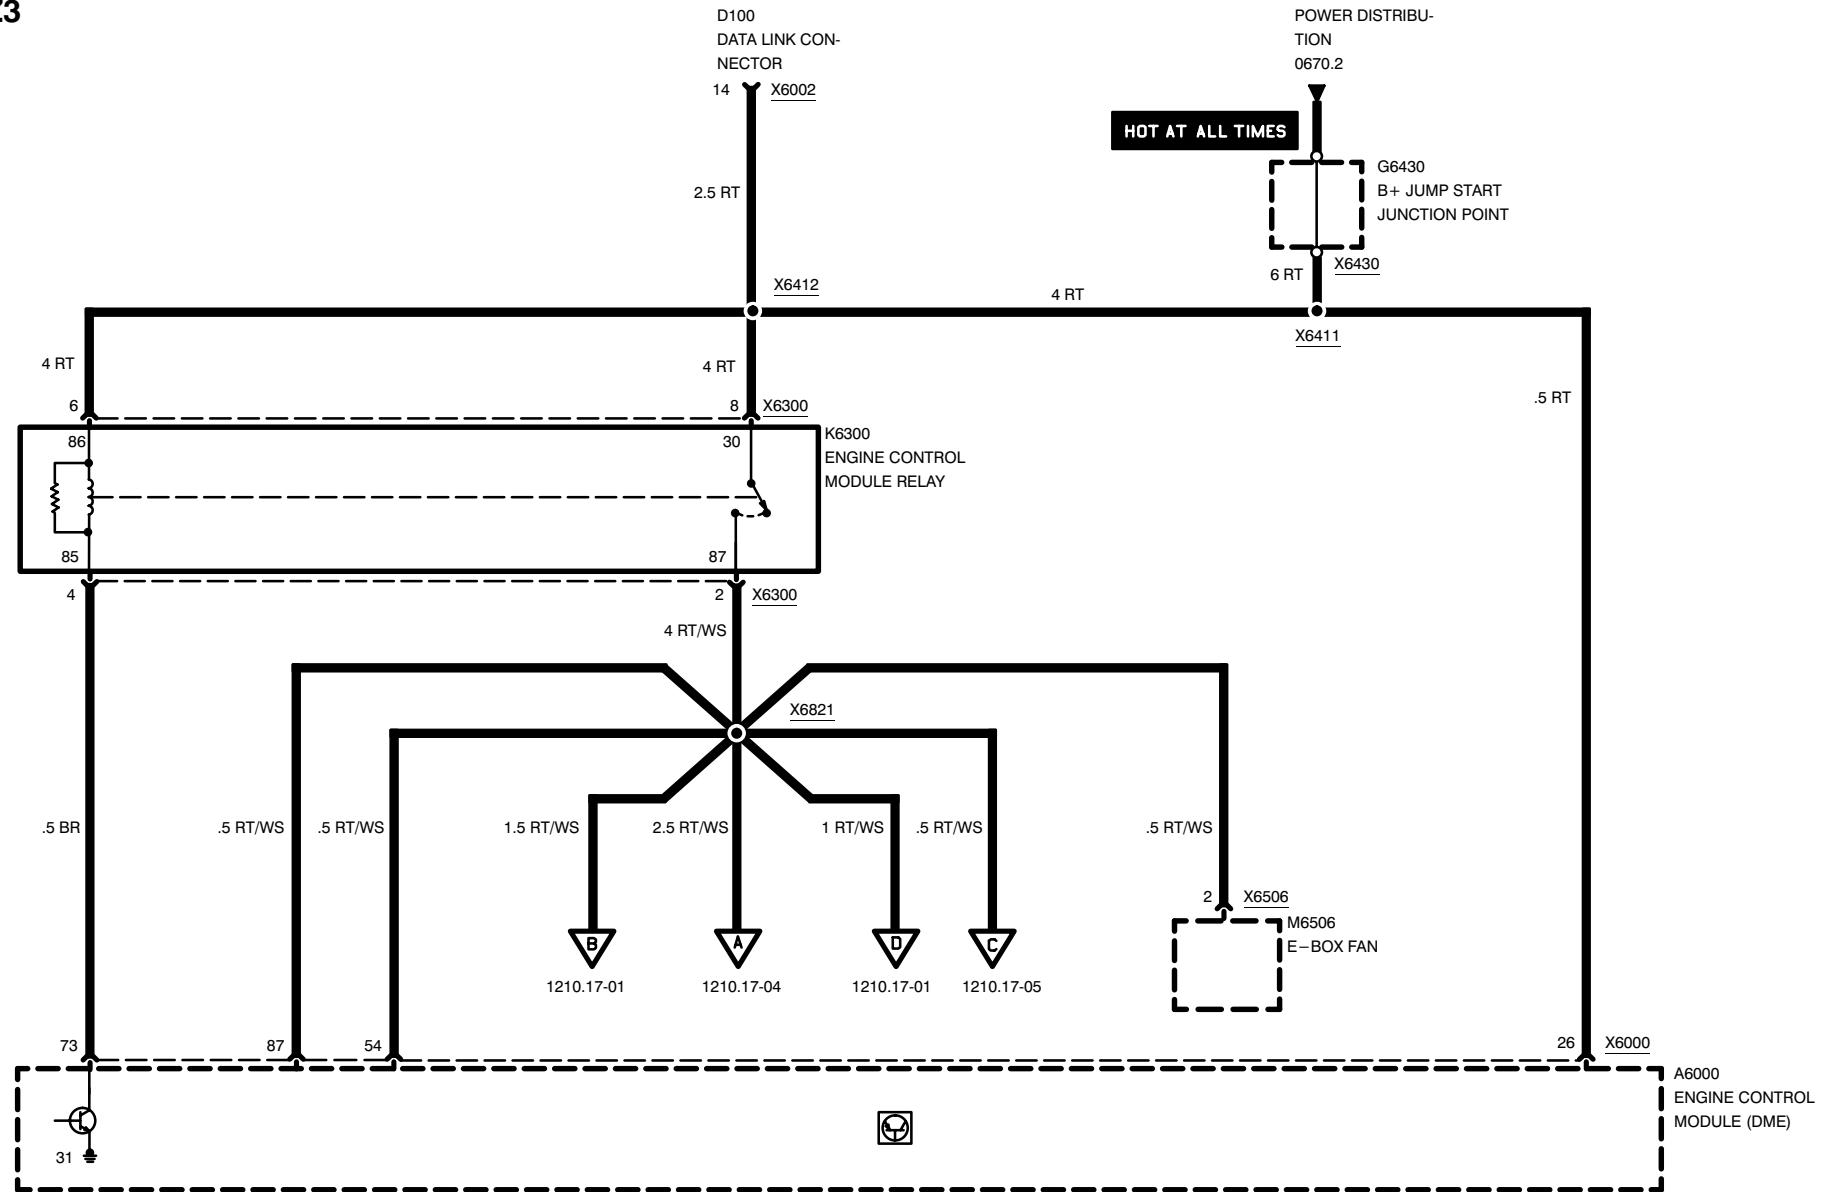


ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)

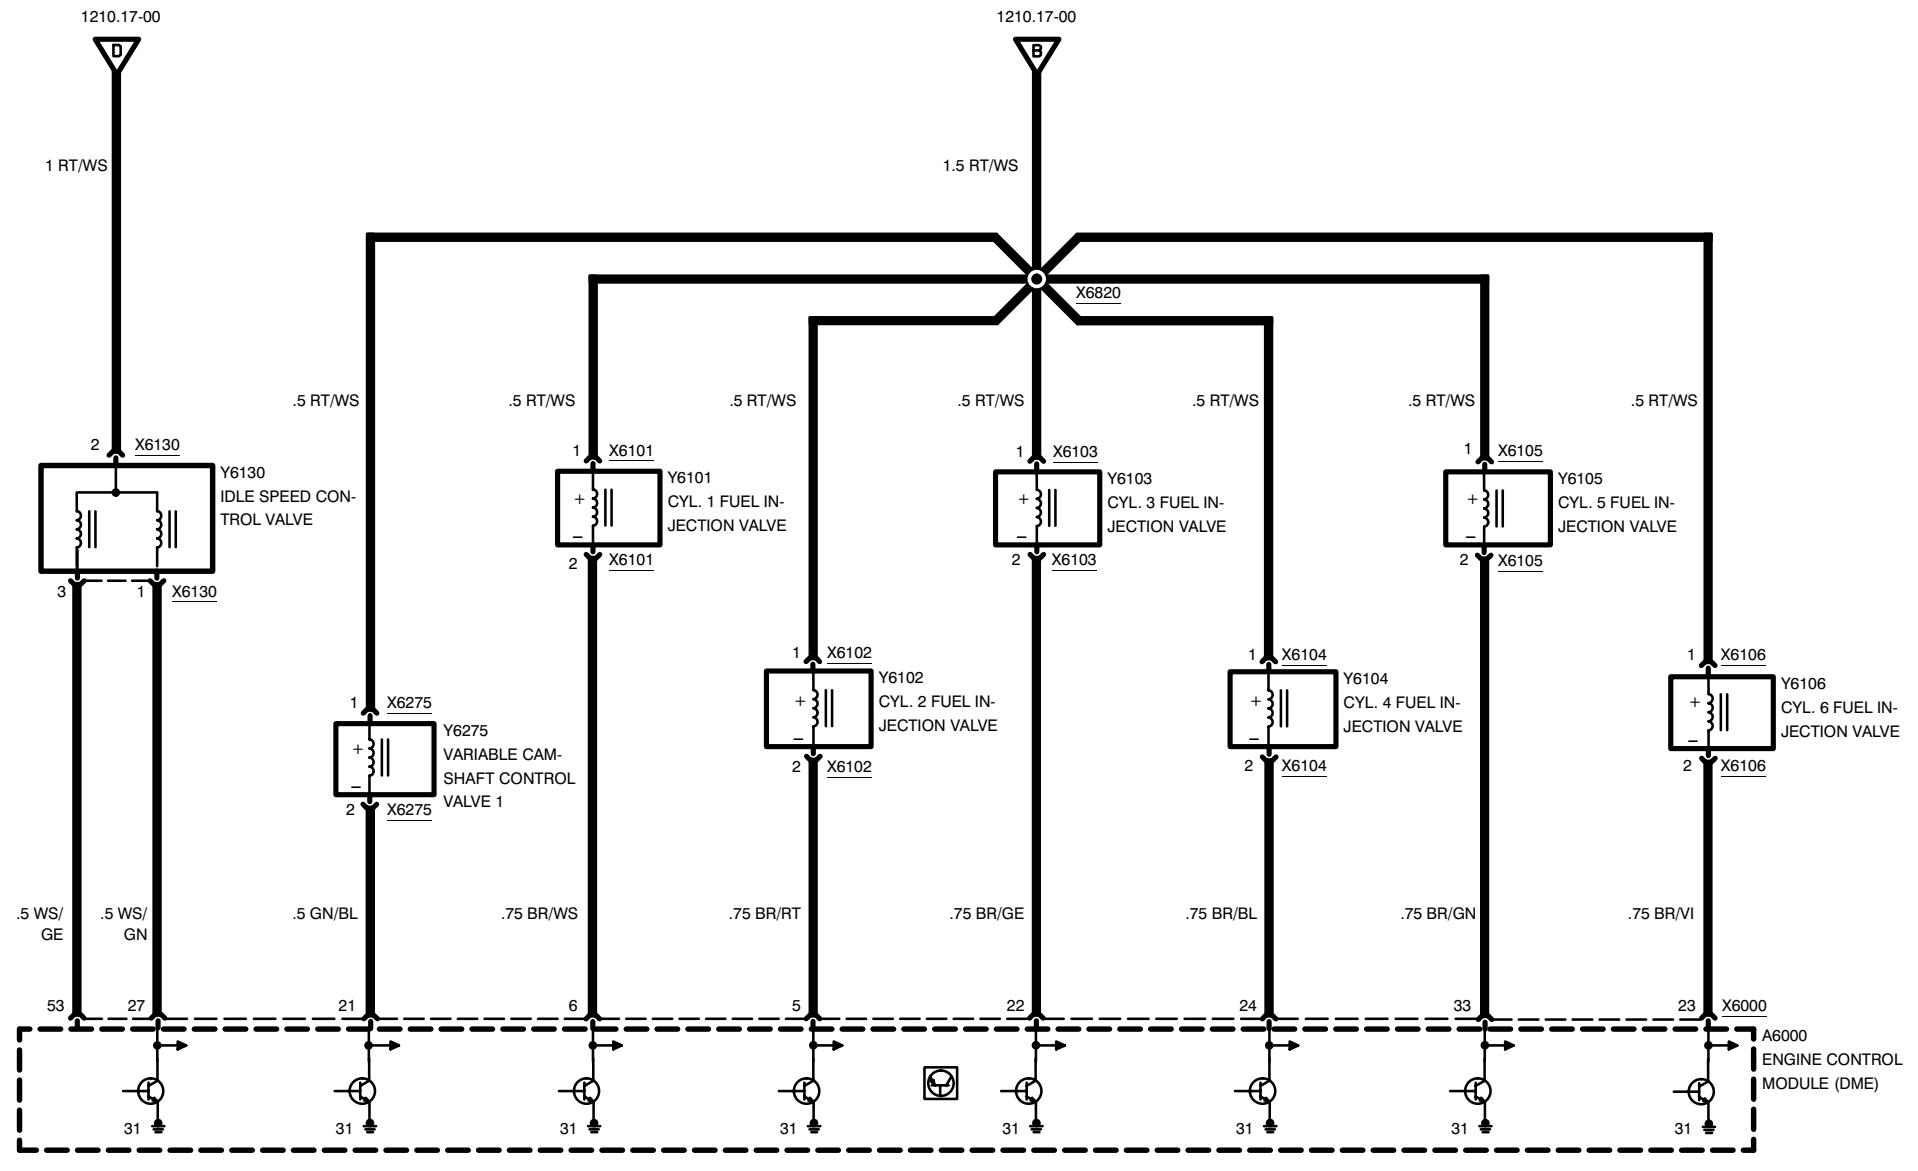


ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)

02/98


1210.17-02

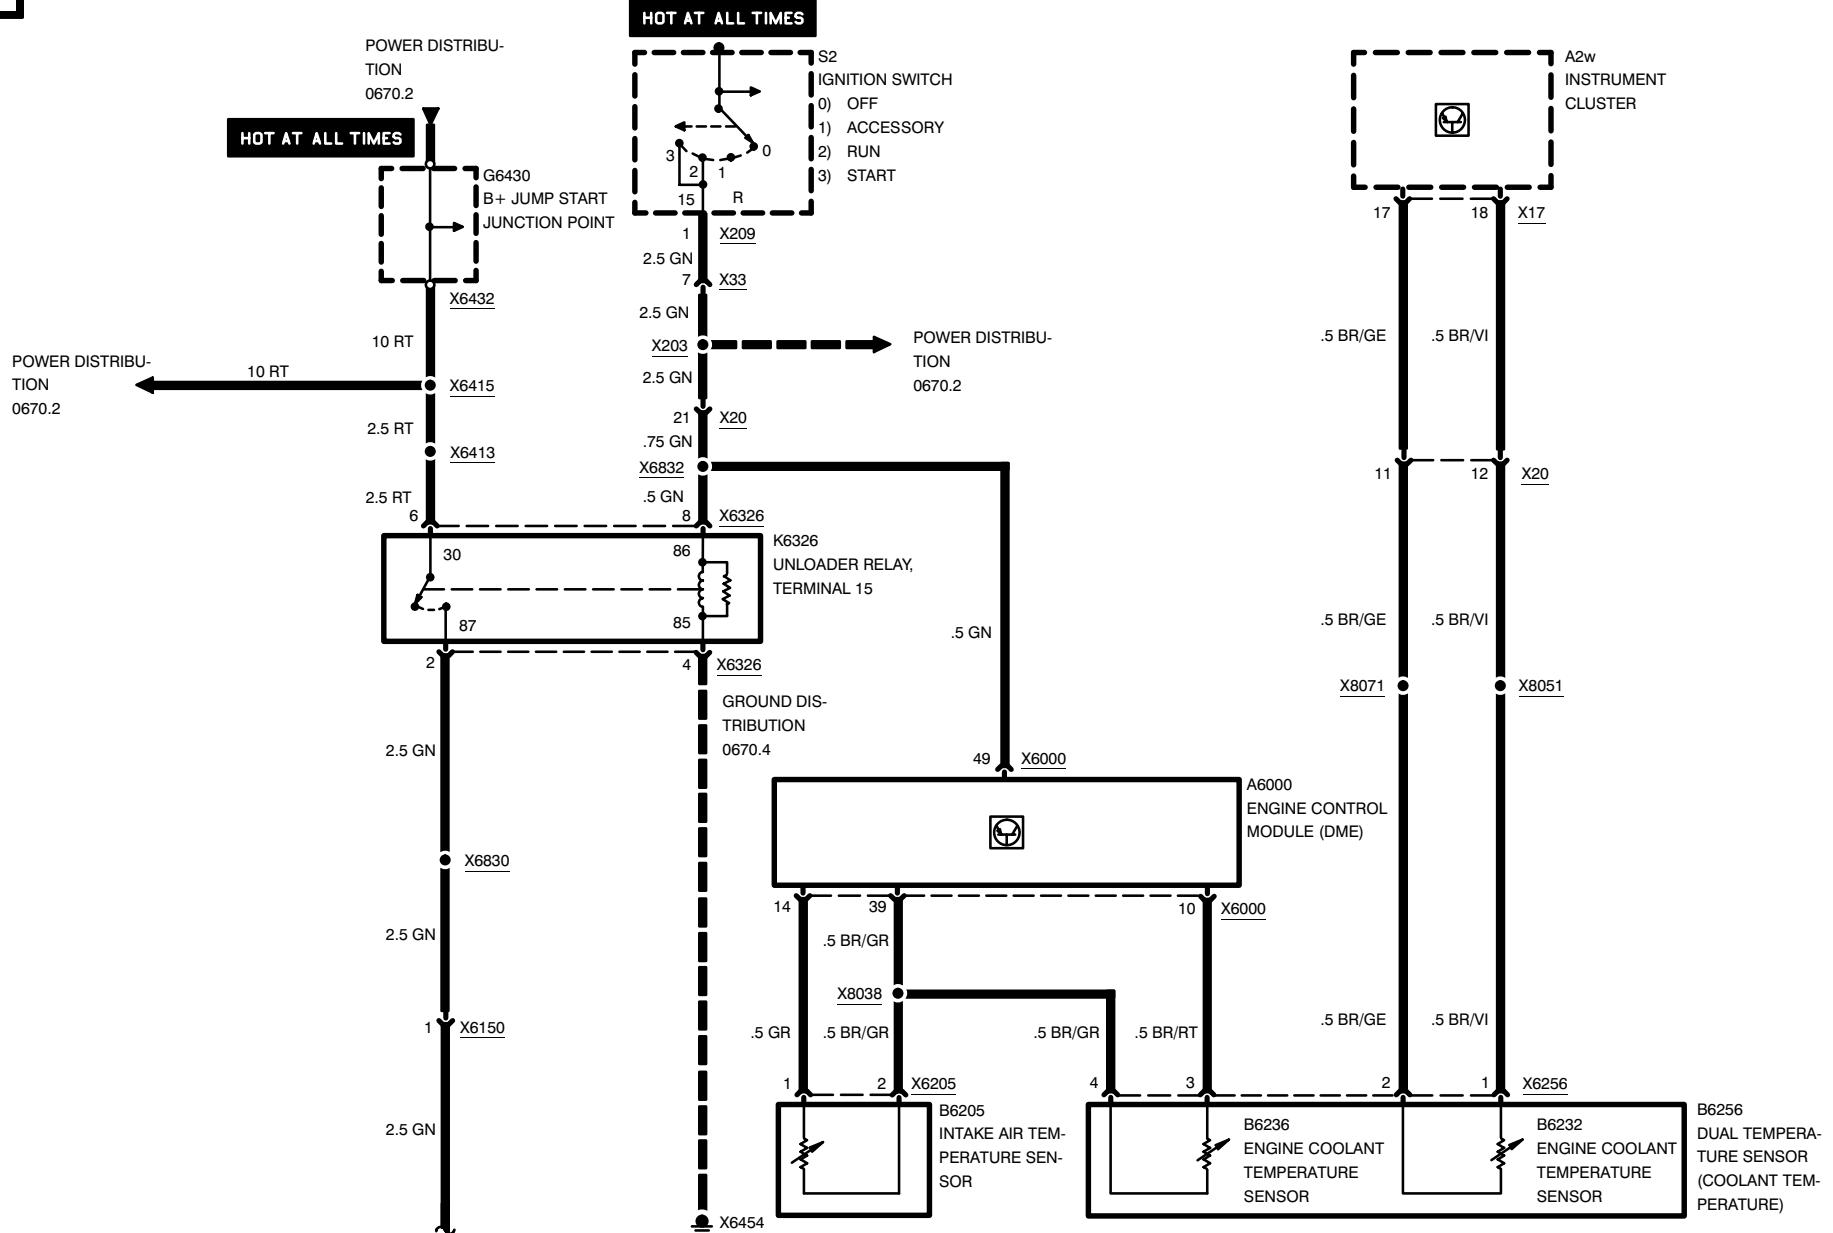


1998

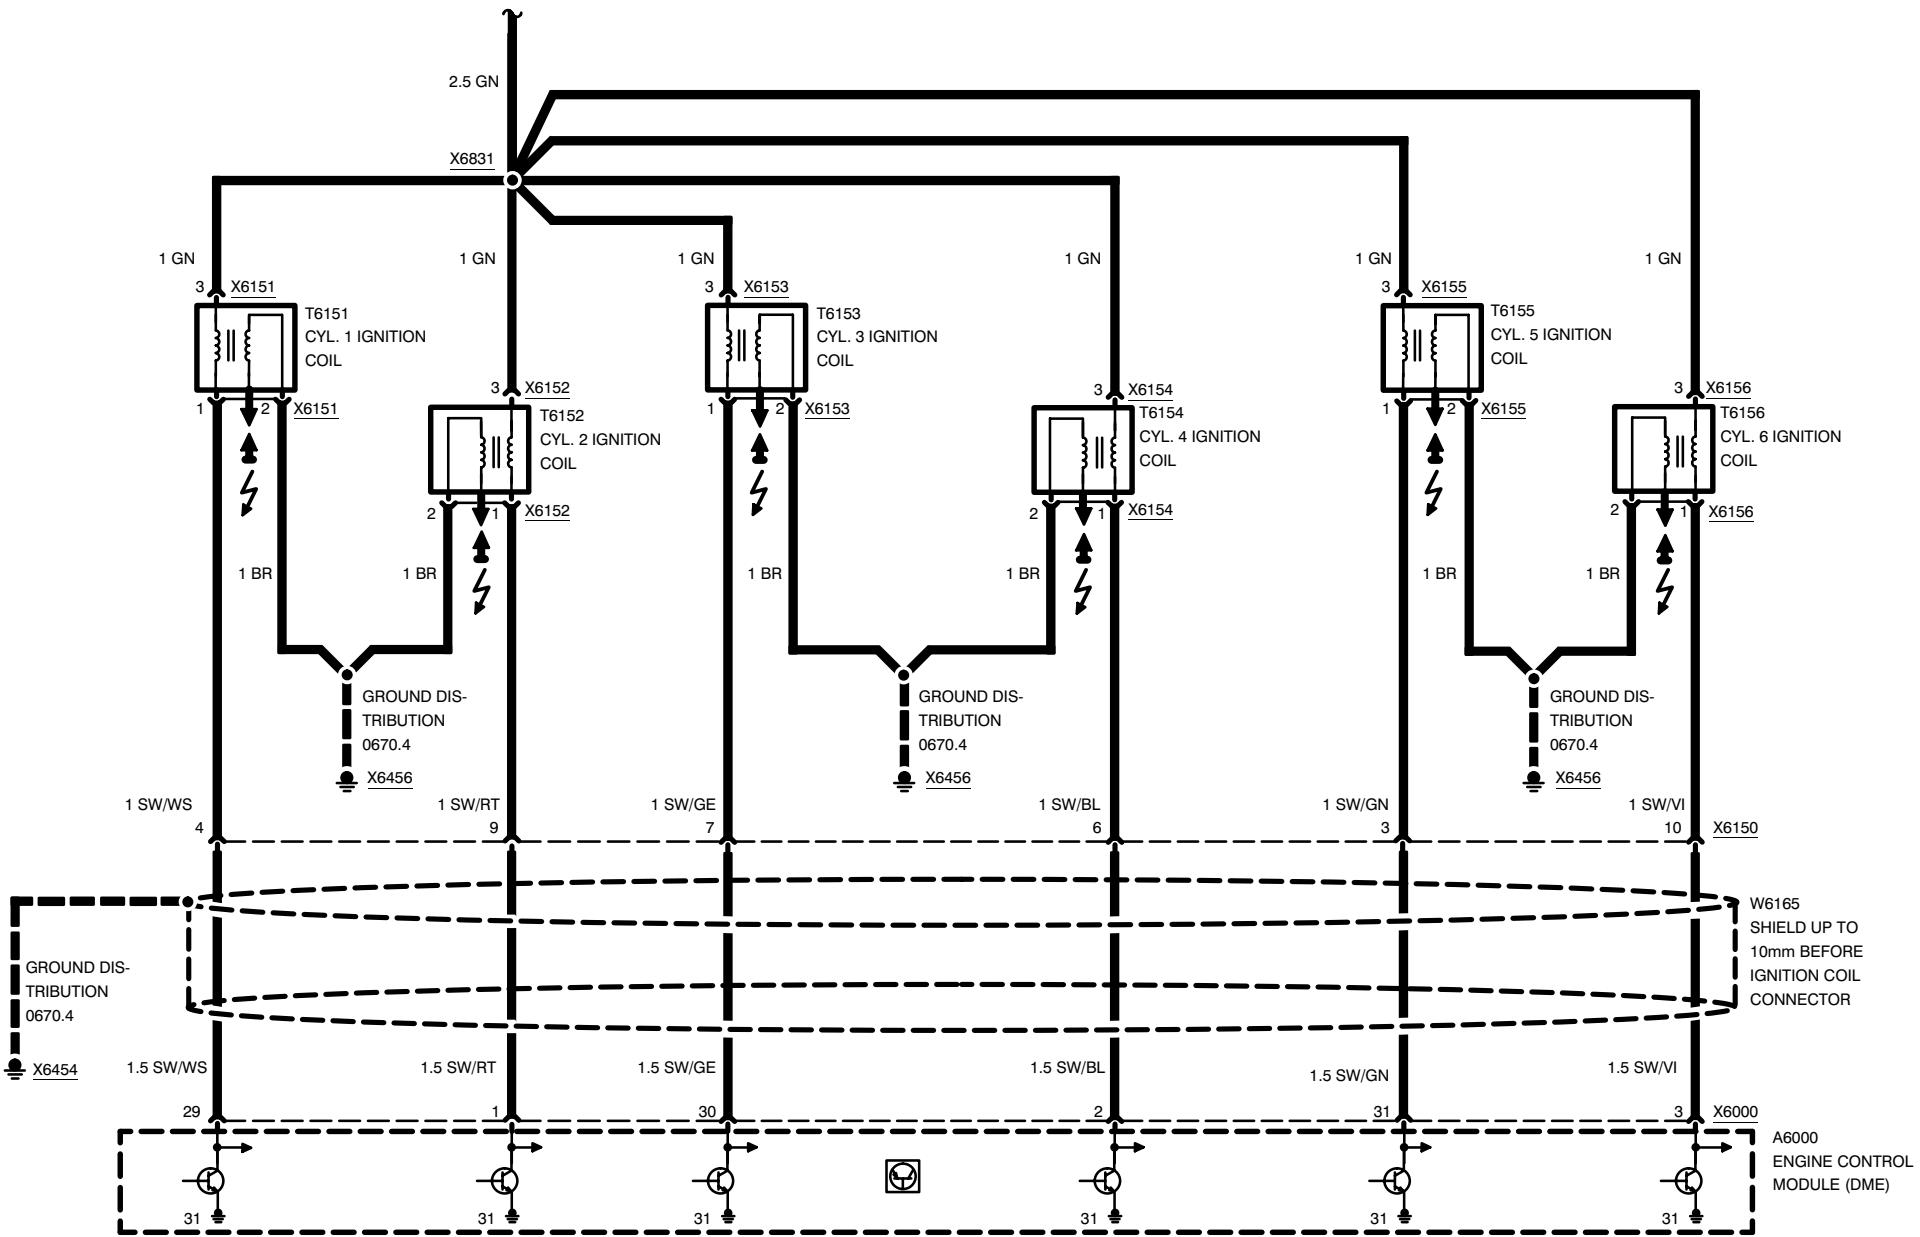

ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)

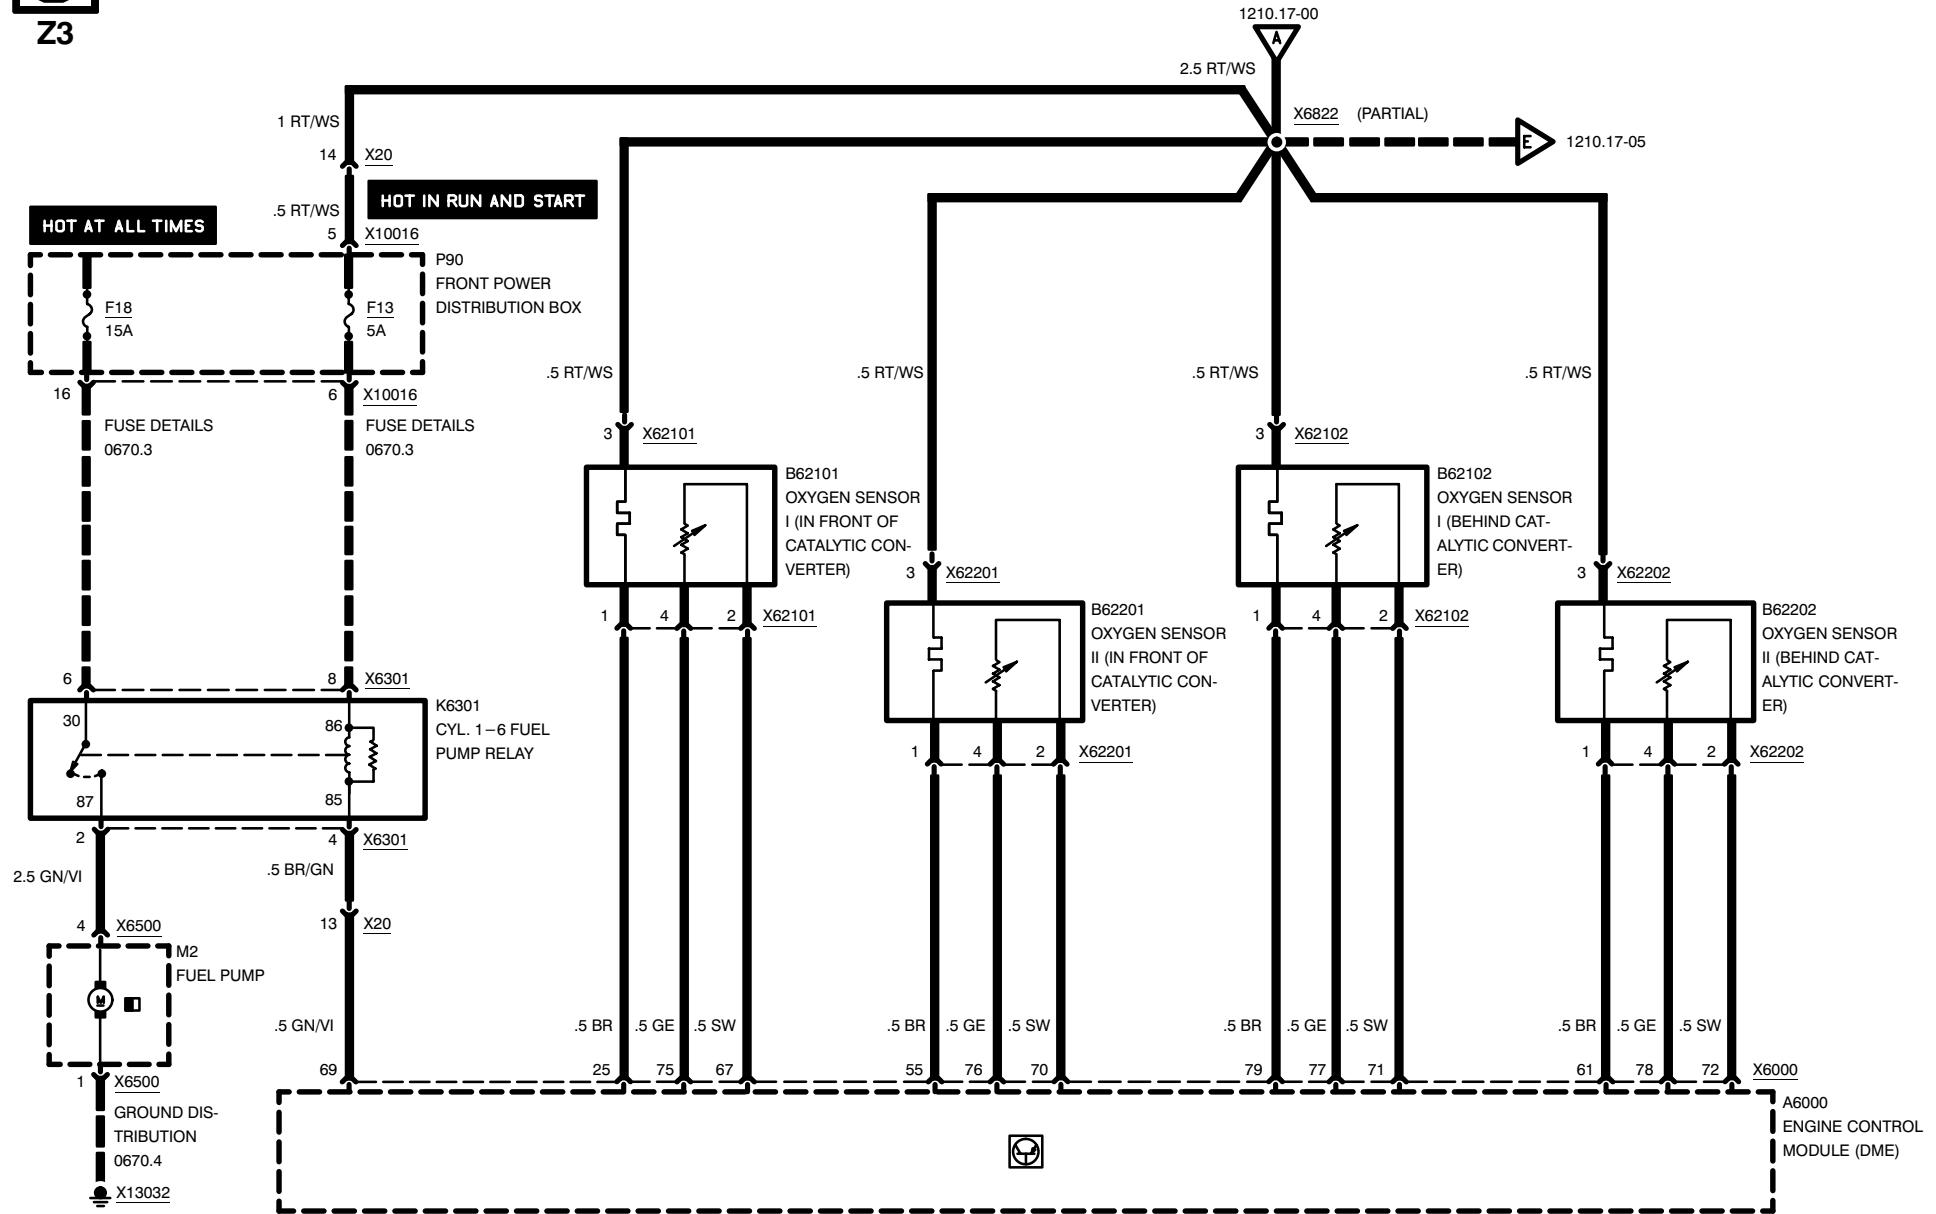

ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)

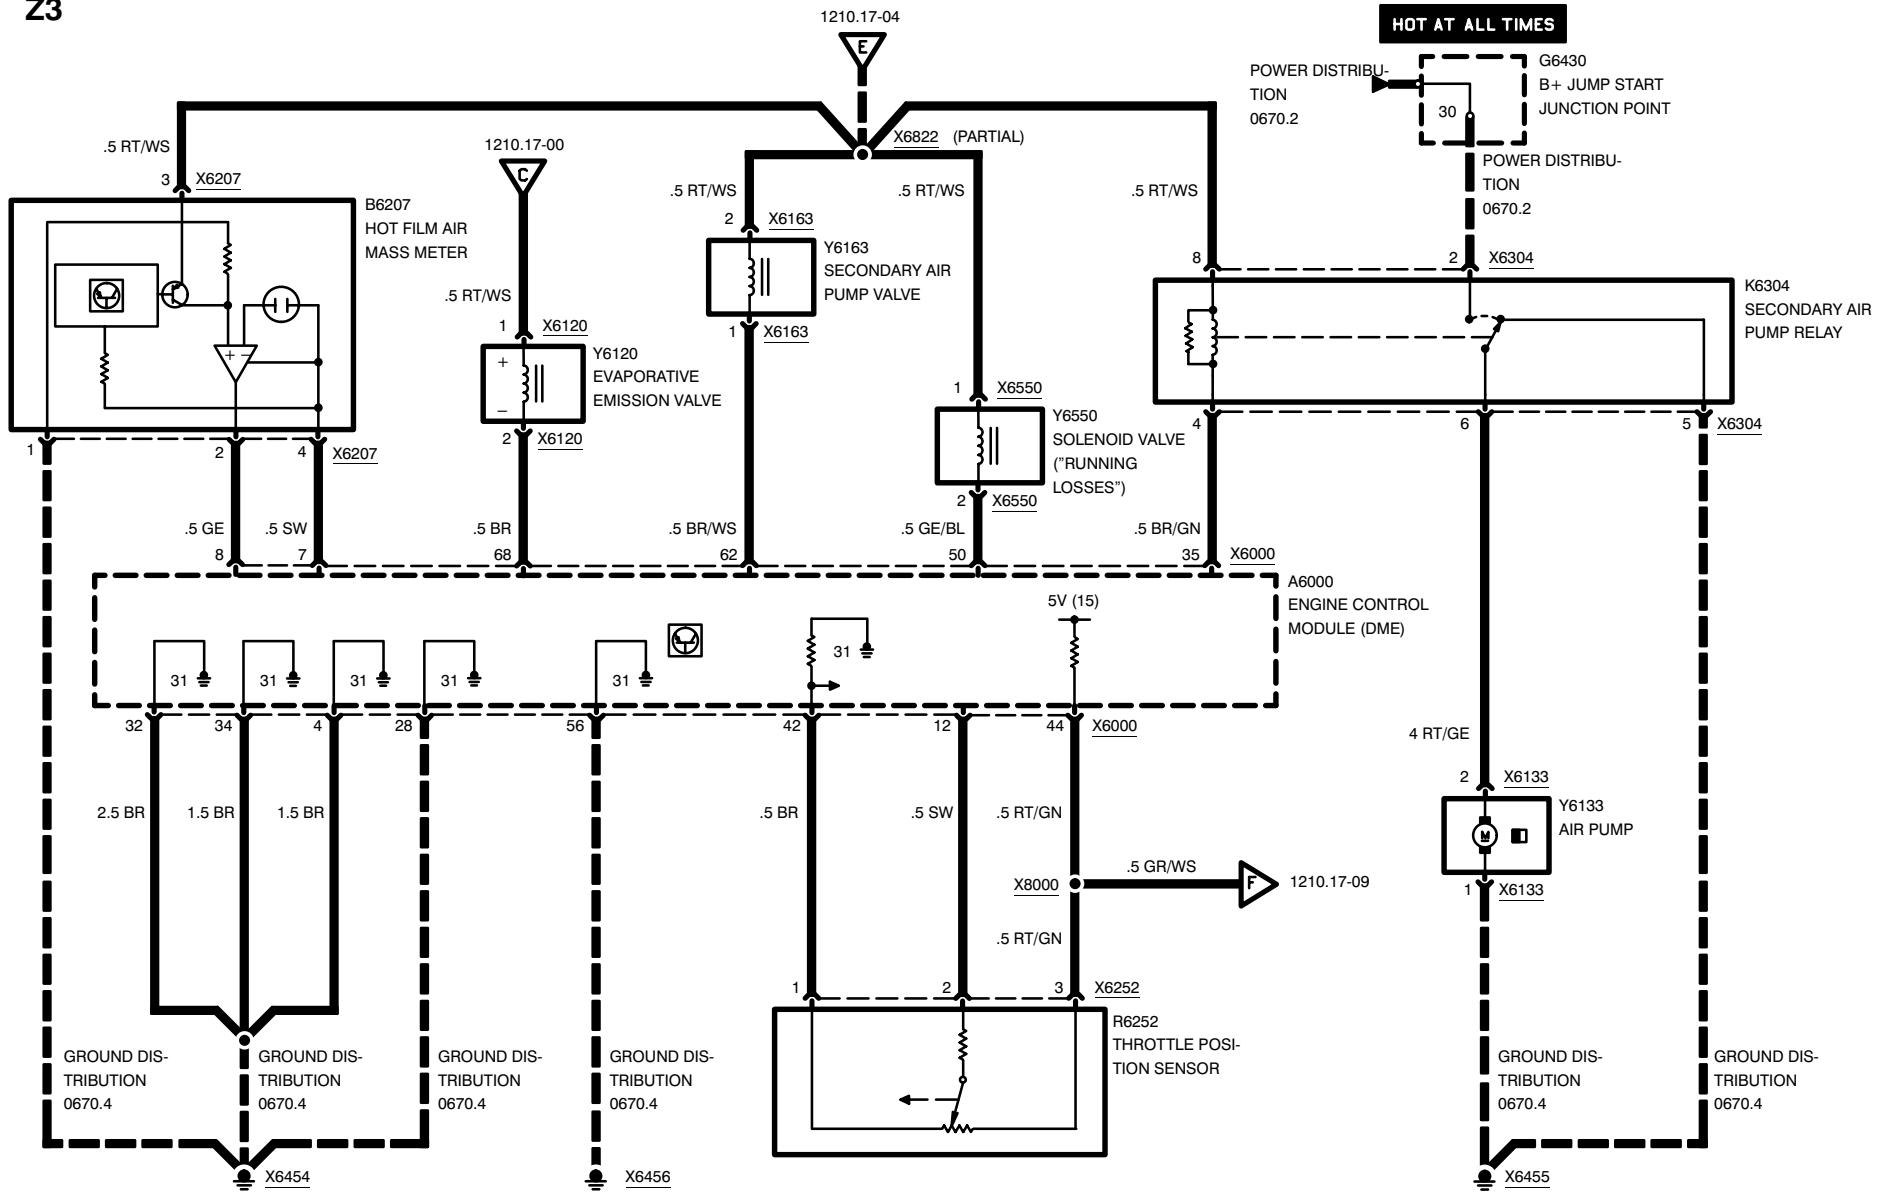


ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)

Z3

02/98


1210.17-06

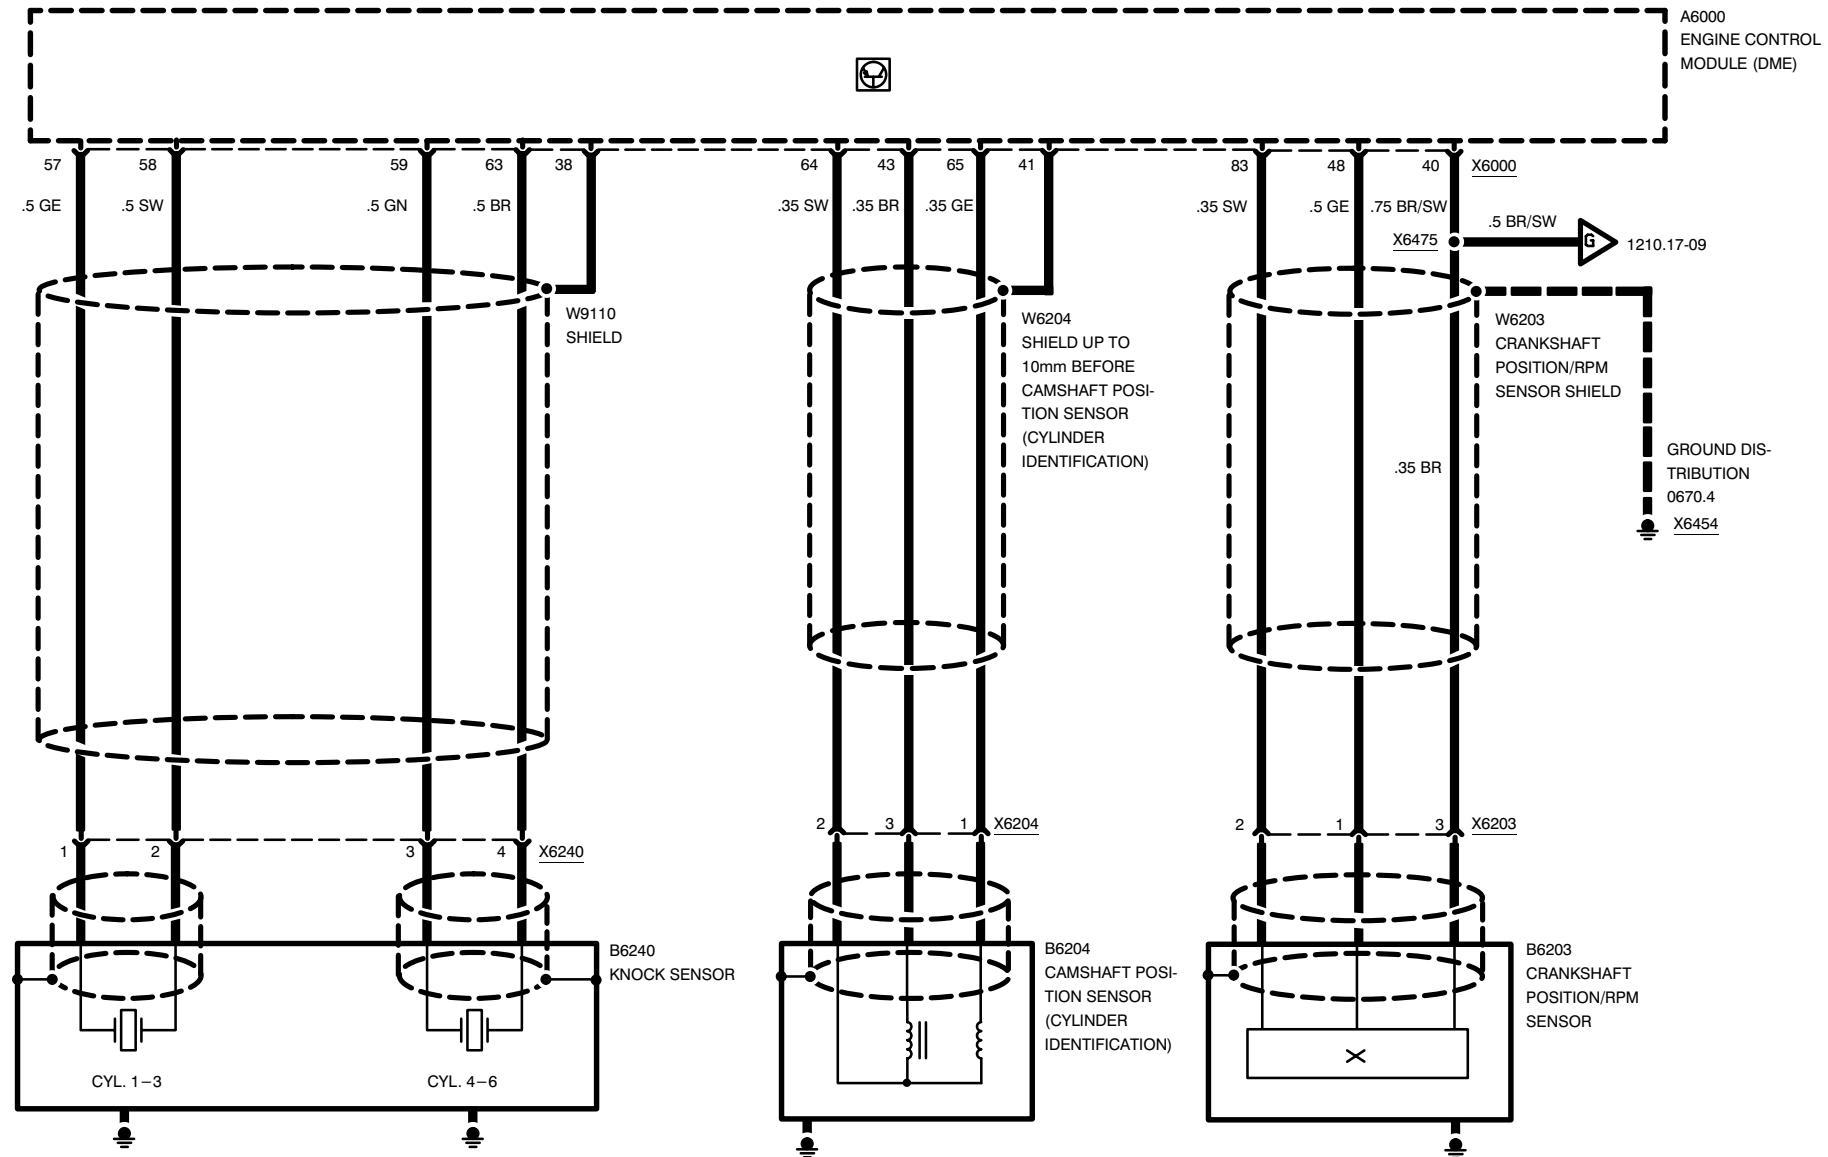

ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)

02/98

1210.17-07

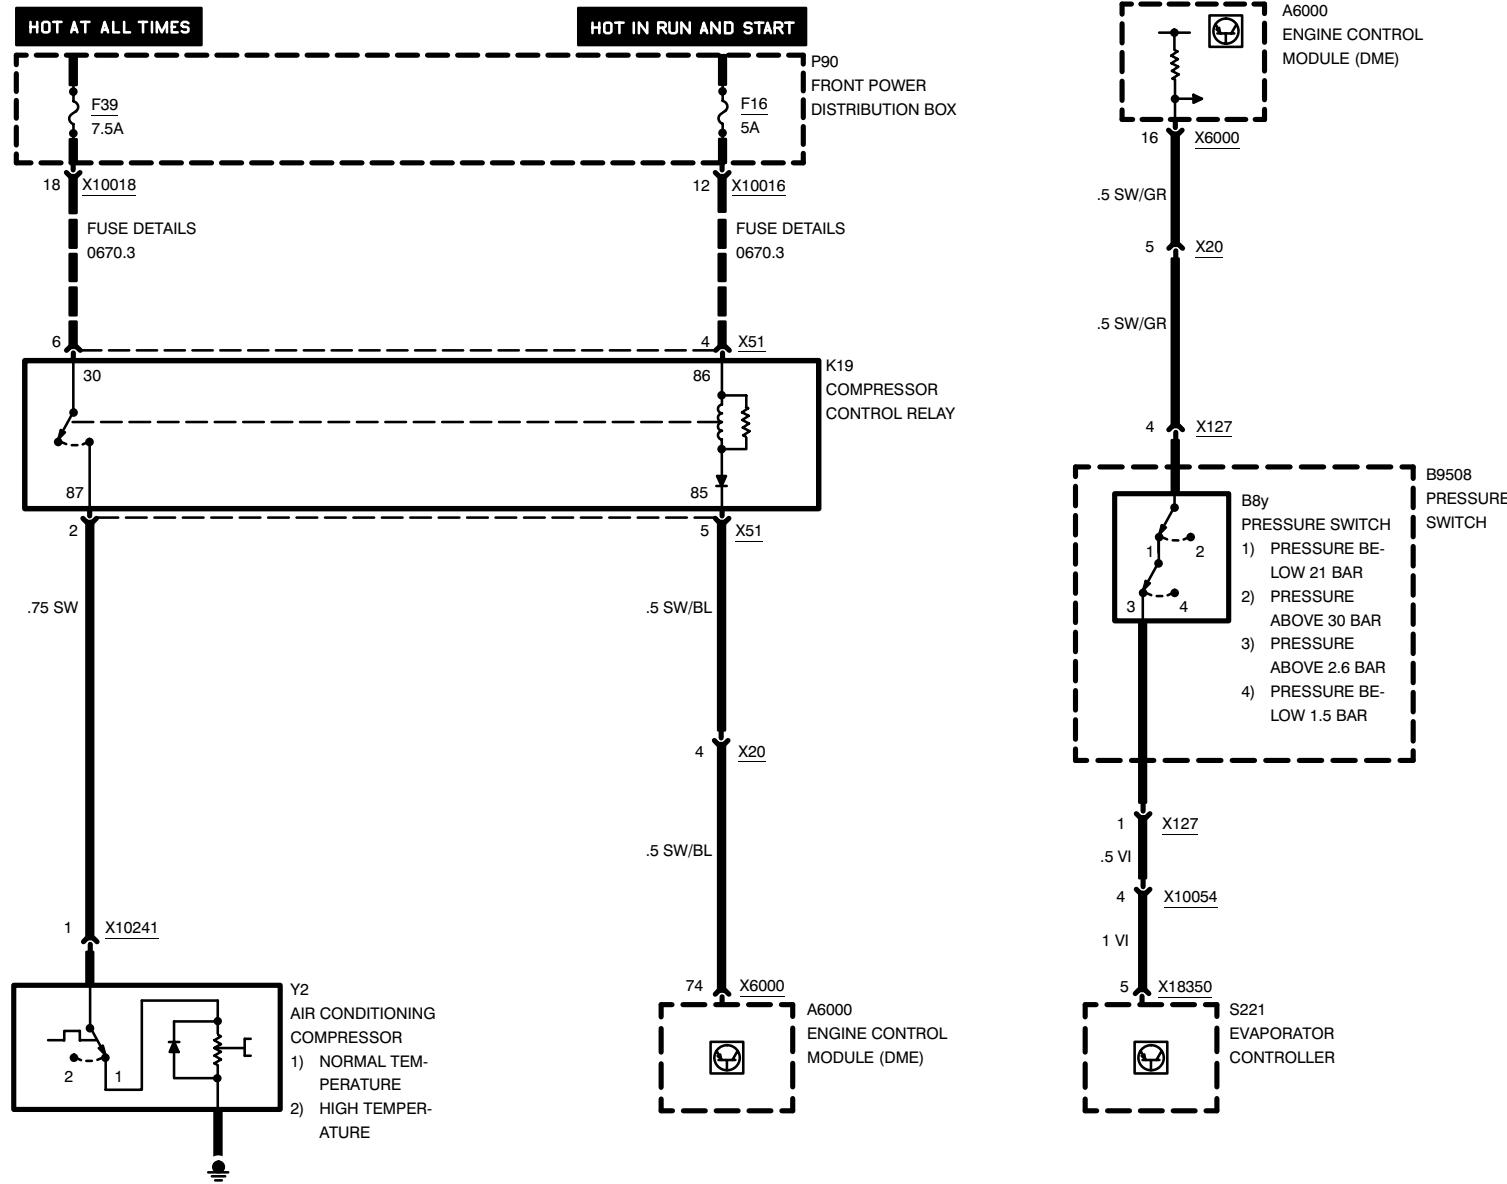


1998



ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)

03/98

1210.17-08

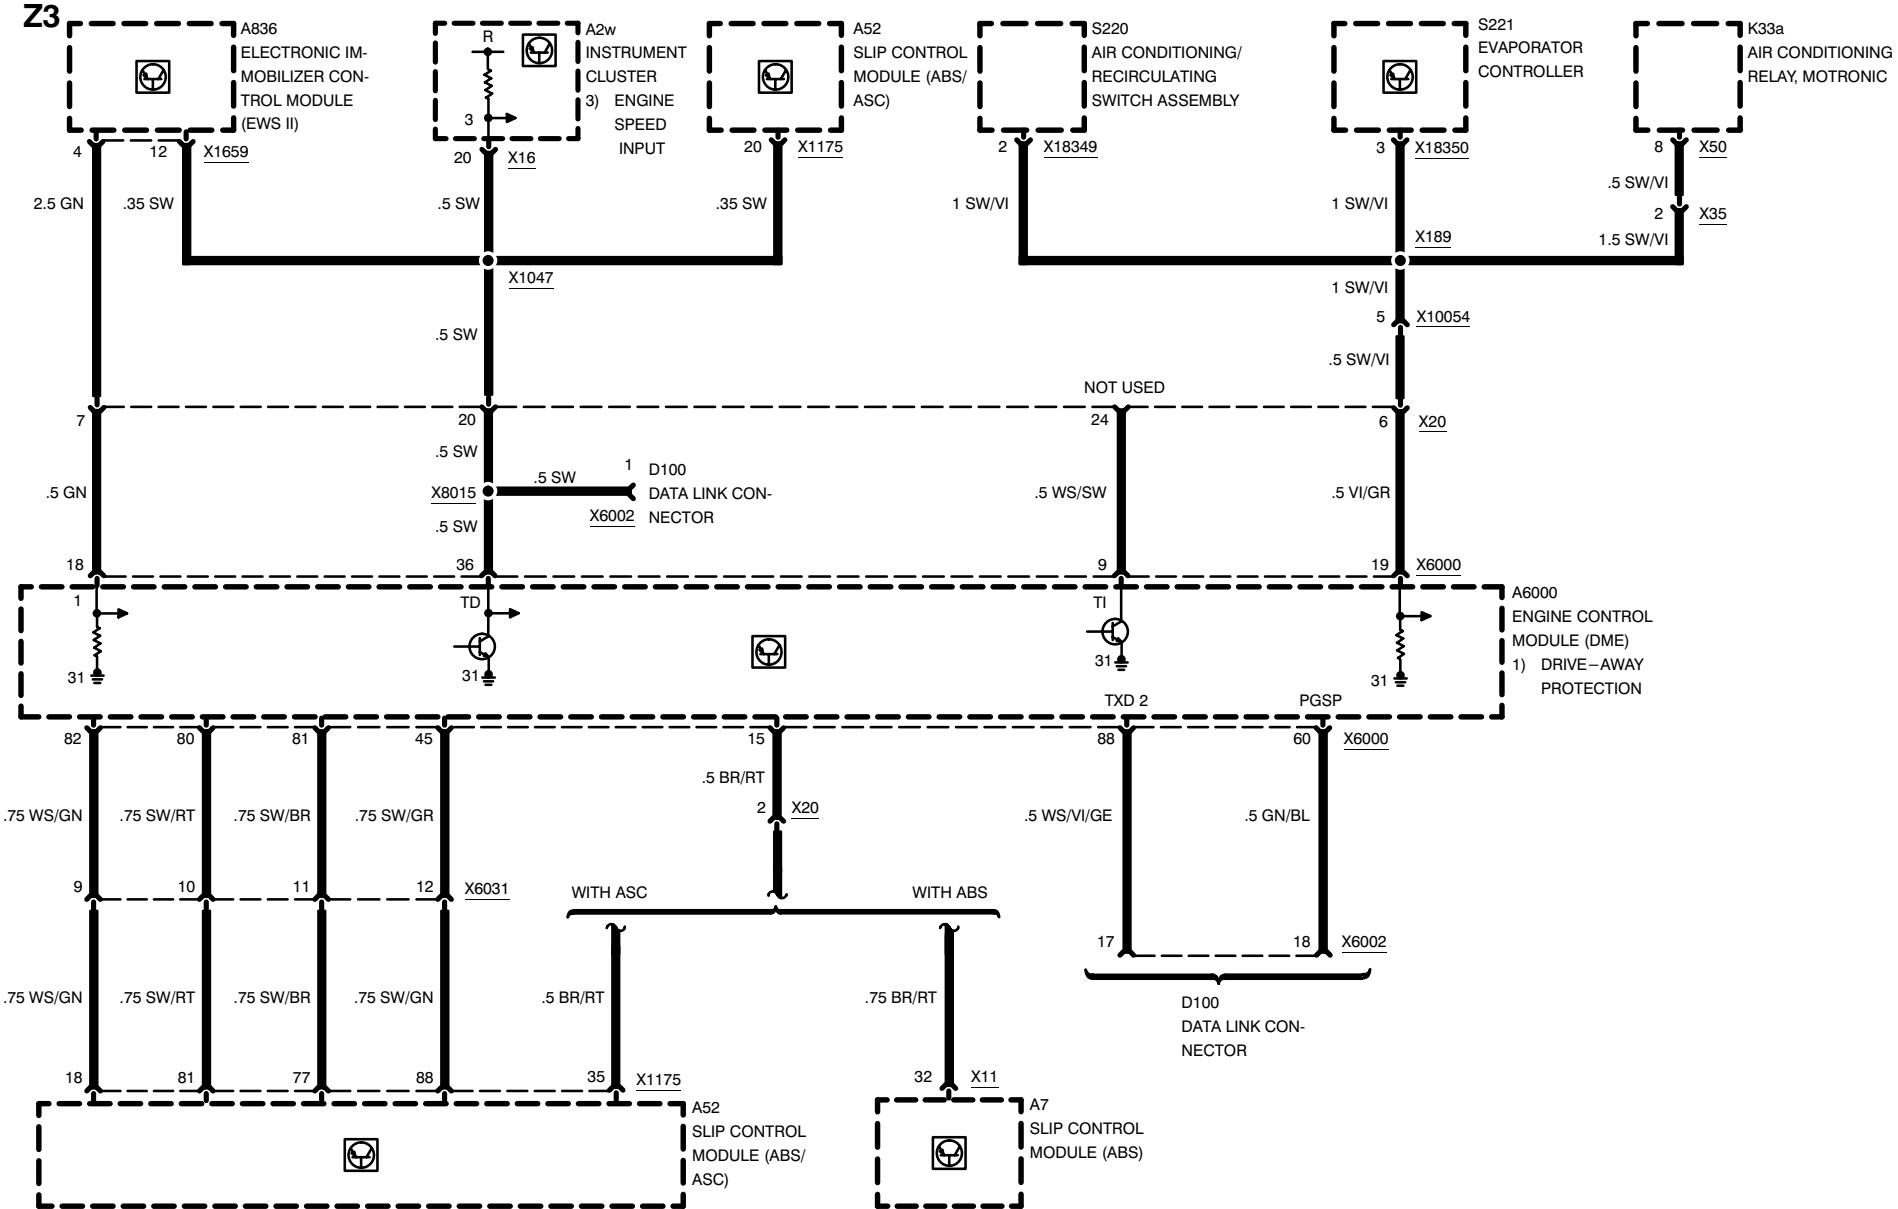


1998

ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)

OBD II DIAGNOSIS

HOT IN ACCY RUN AND START

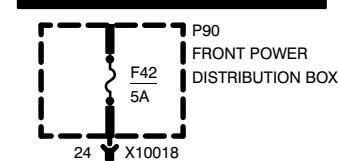

FUSE DETAILS
0670.3

D110
OBD II CONNEC-
TOR

7 X19527

.5 WS/VI/GE

8 X6031

.5 VI/GN

4 X8103

.5 WS/VI/GE

2 X6868

.5 VI/GN

4 X6002


.5 WS/VI/GE

2 X6002


D100
DATA LINK CON-
NECTOR

1210.17-05 F

1210.17-06 G

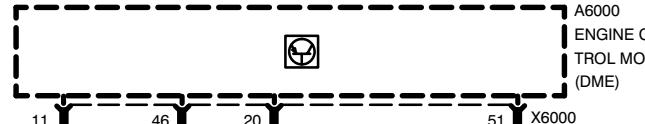

HOT IN RUN AND START

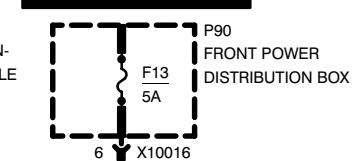


FUSE DETAILS
0670.3


CHARGING SYSTEM

03/98

1230.0-00

1998

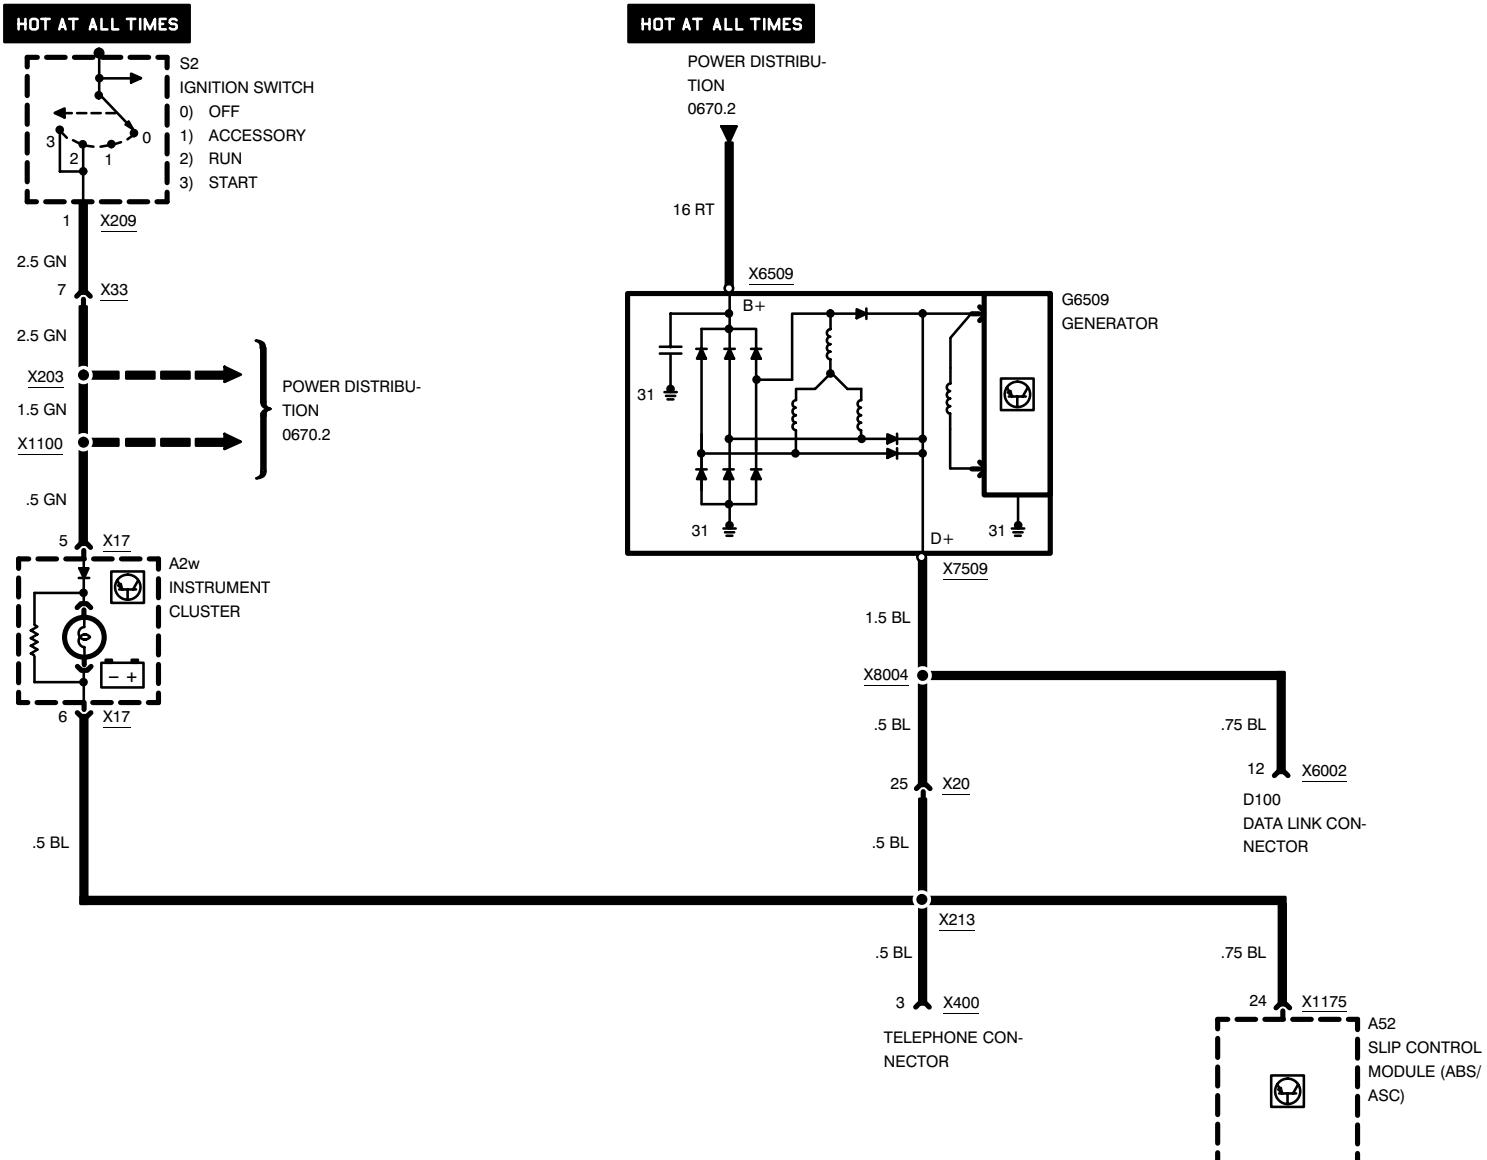


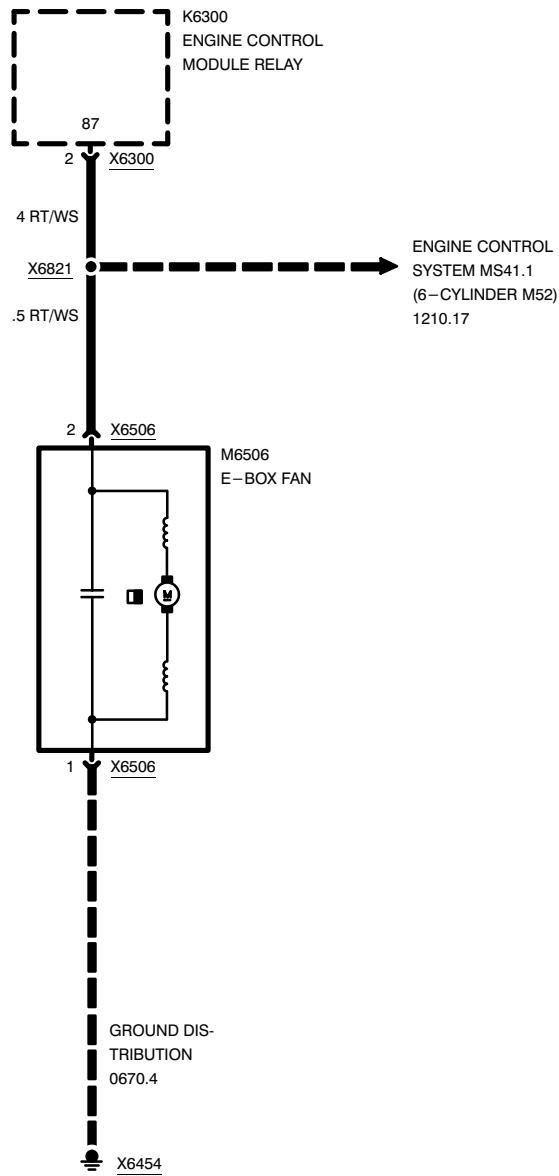


SLIP CONTROL (ABS)

02/98

3450.0-00

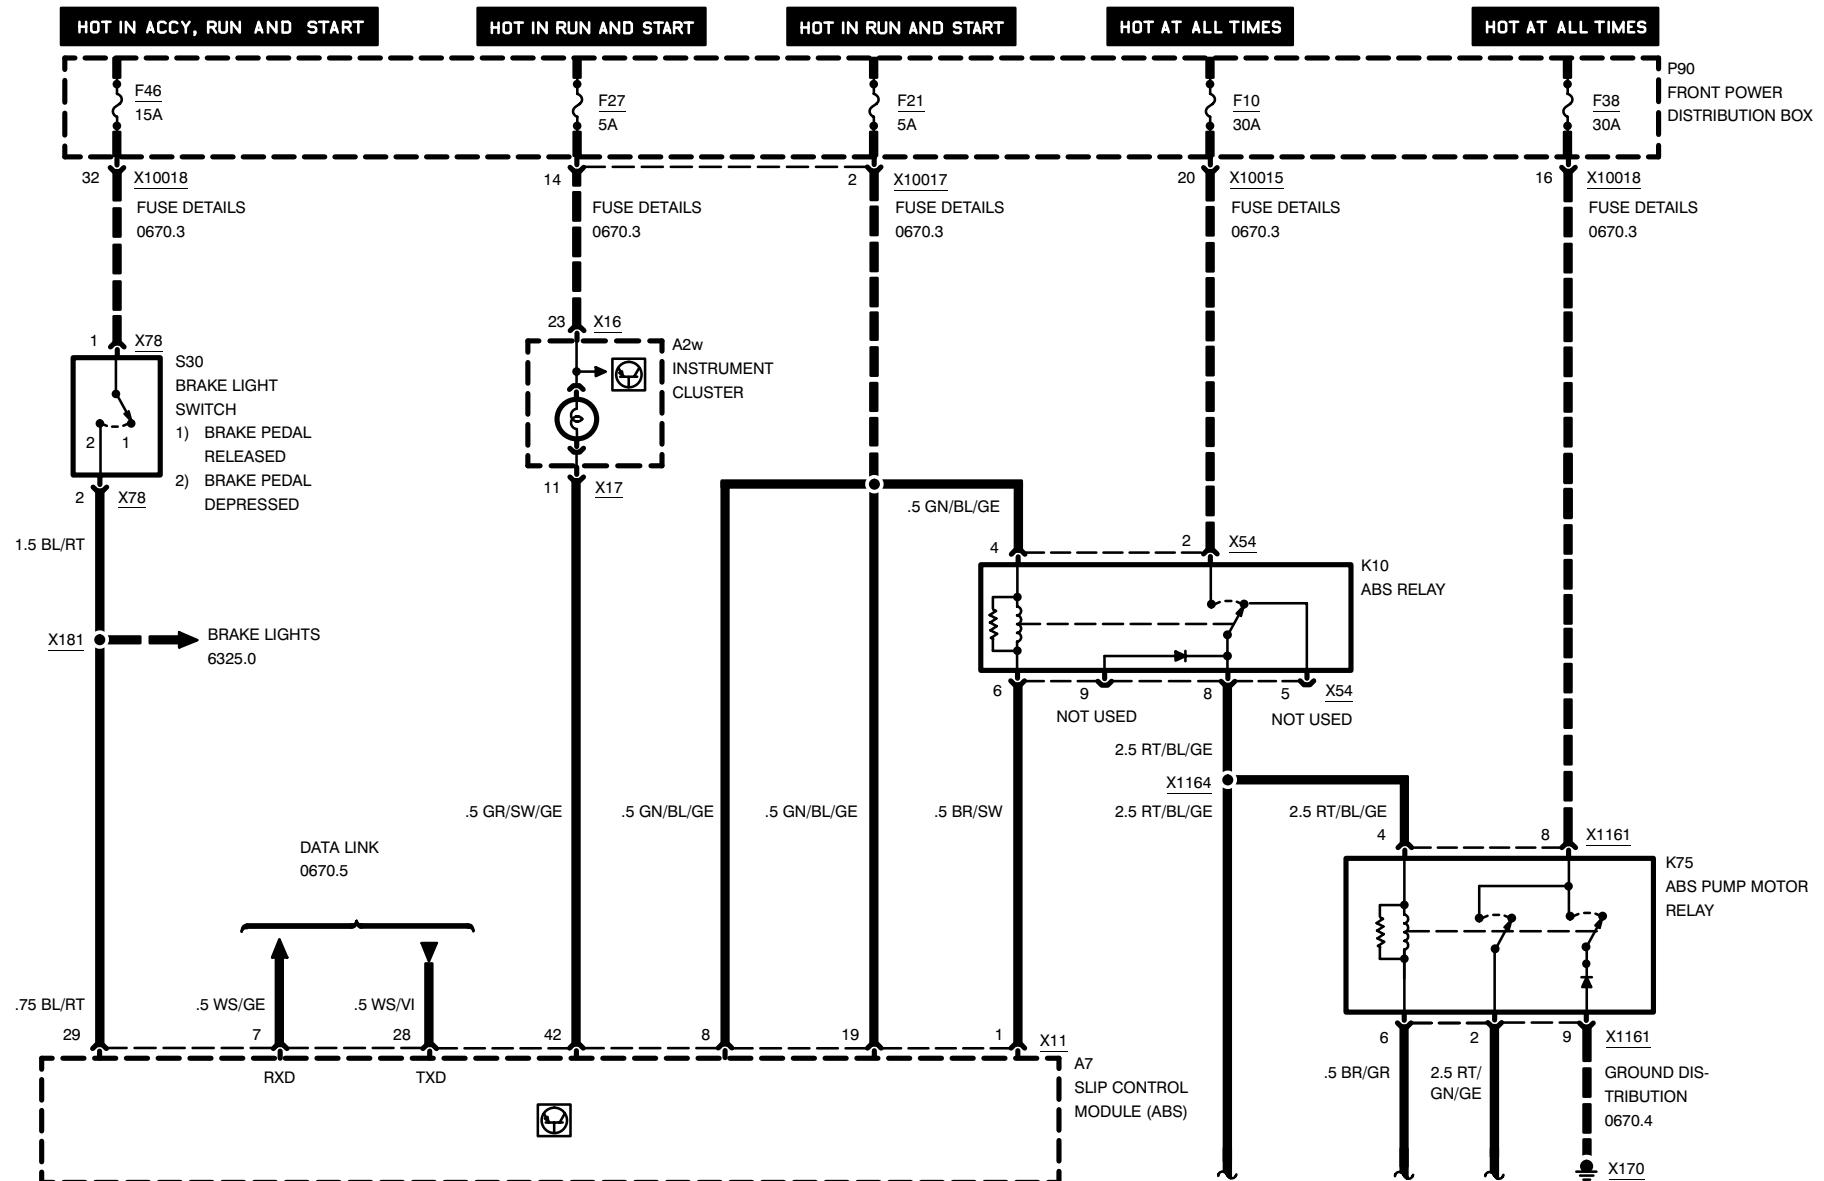


1998

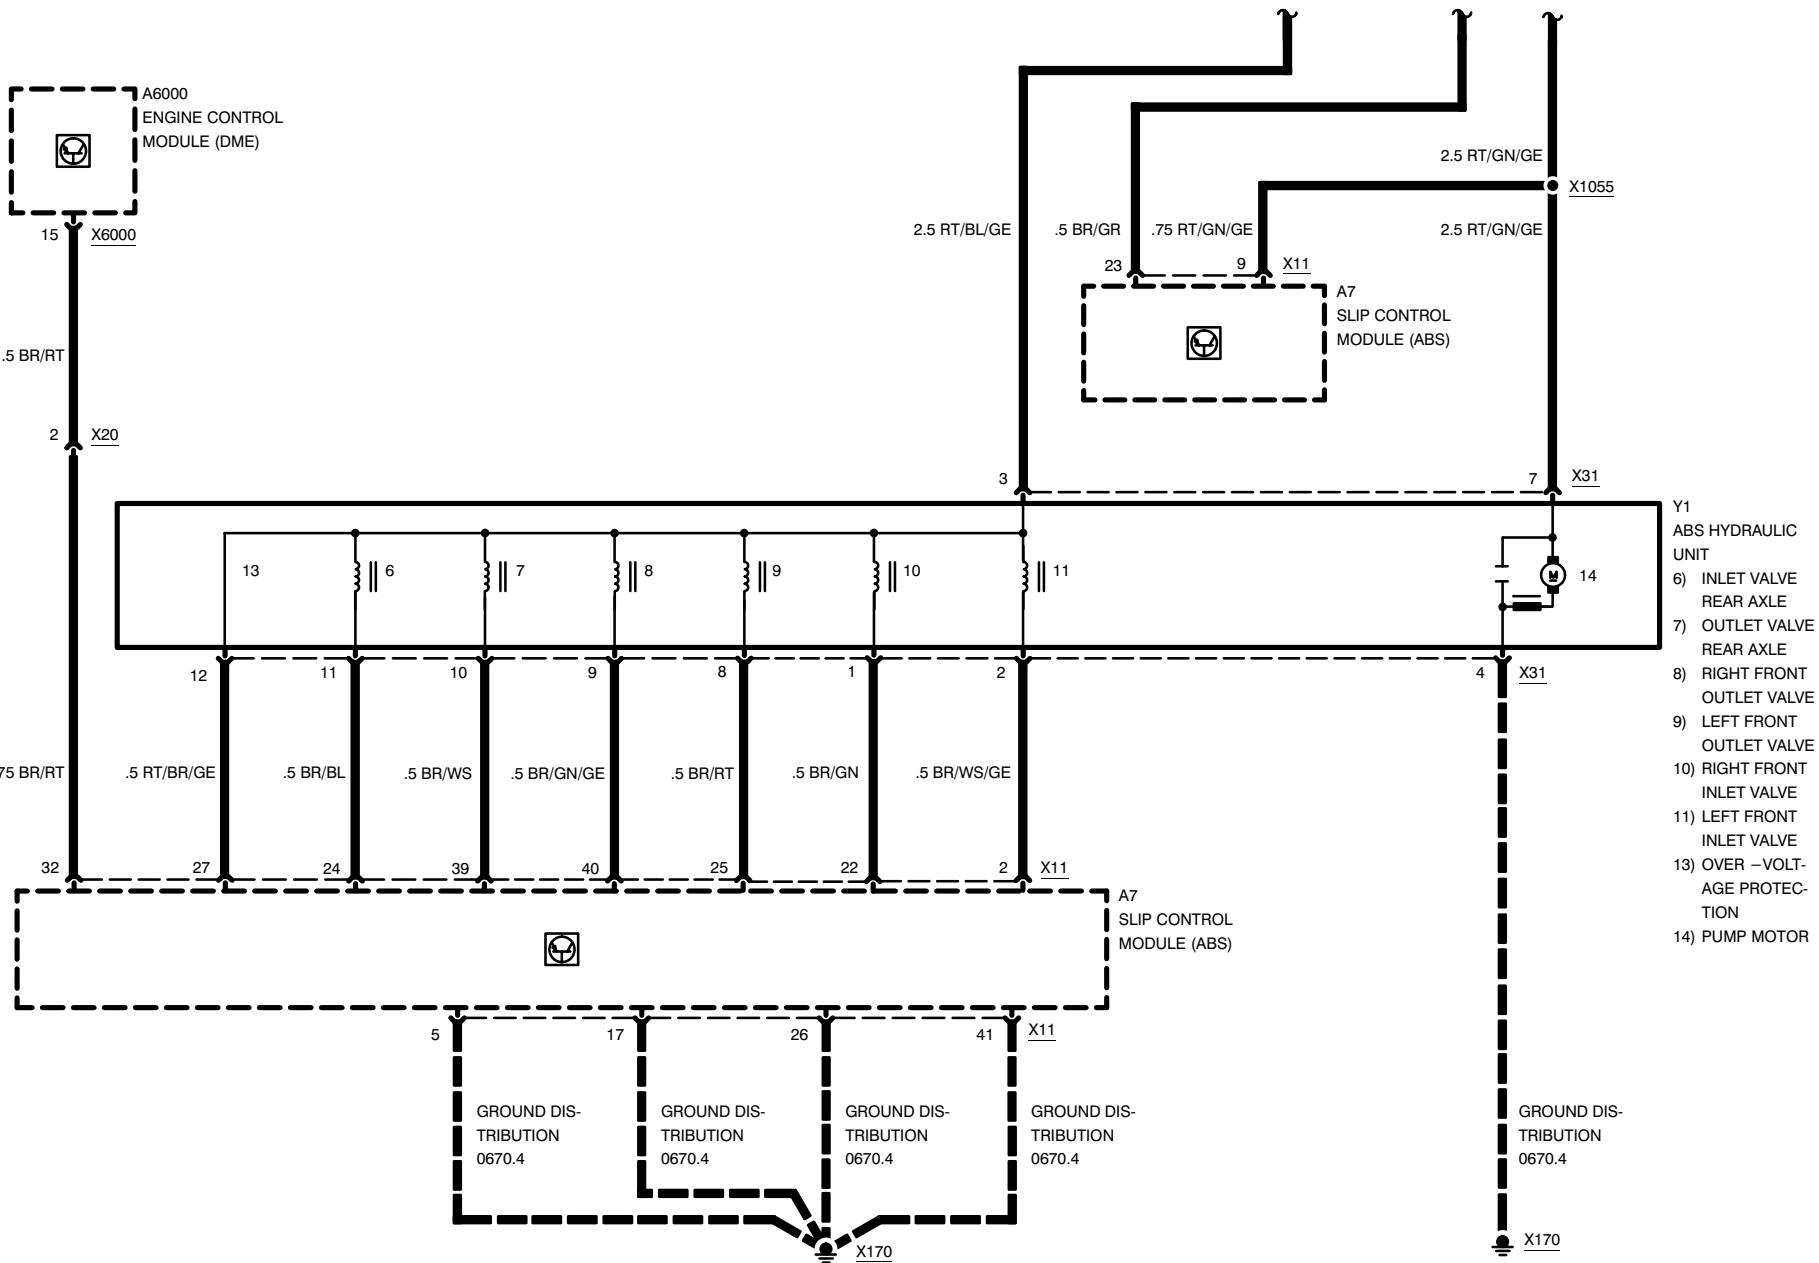

SLIP CONTROL (ABS)


02/98

3450.0-02 | 1998

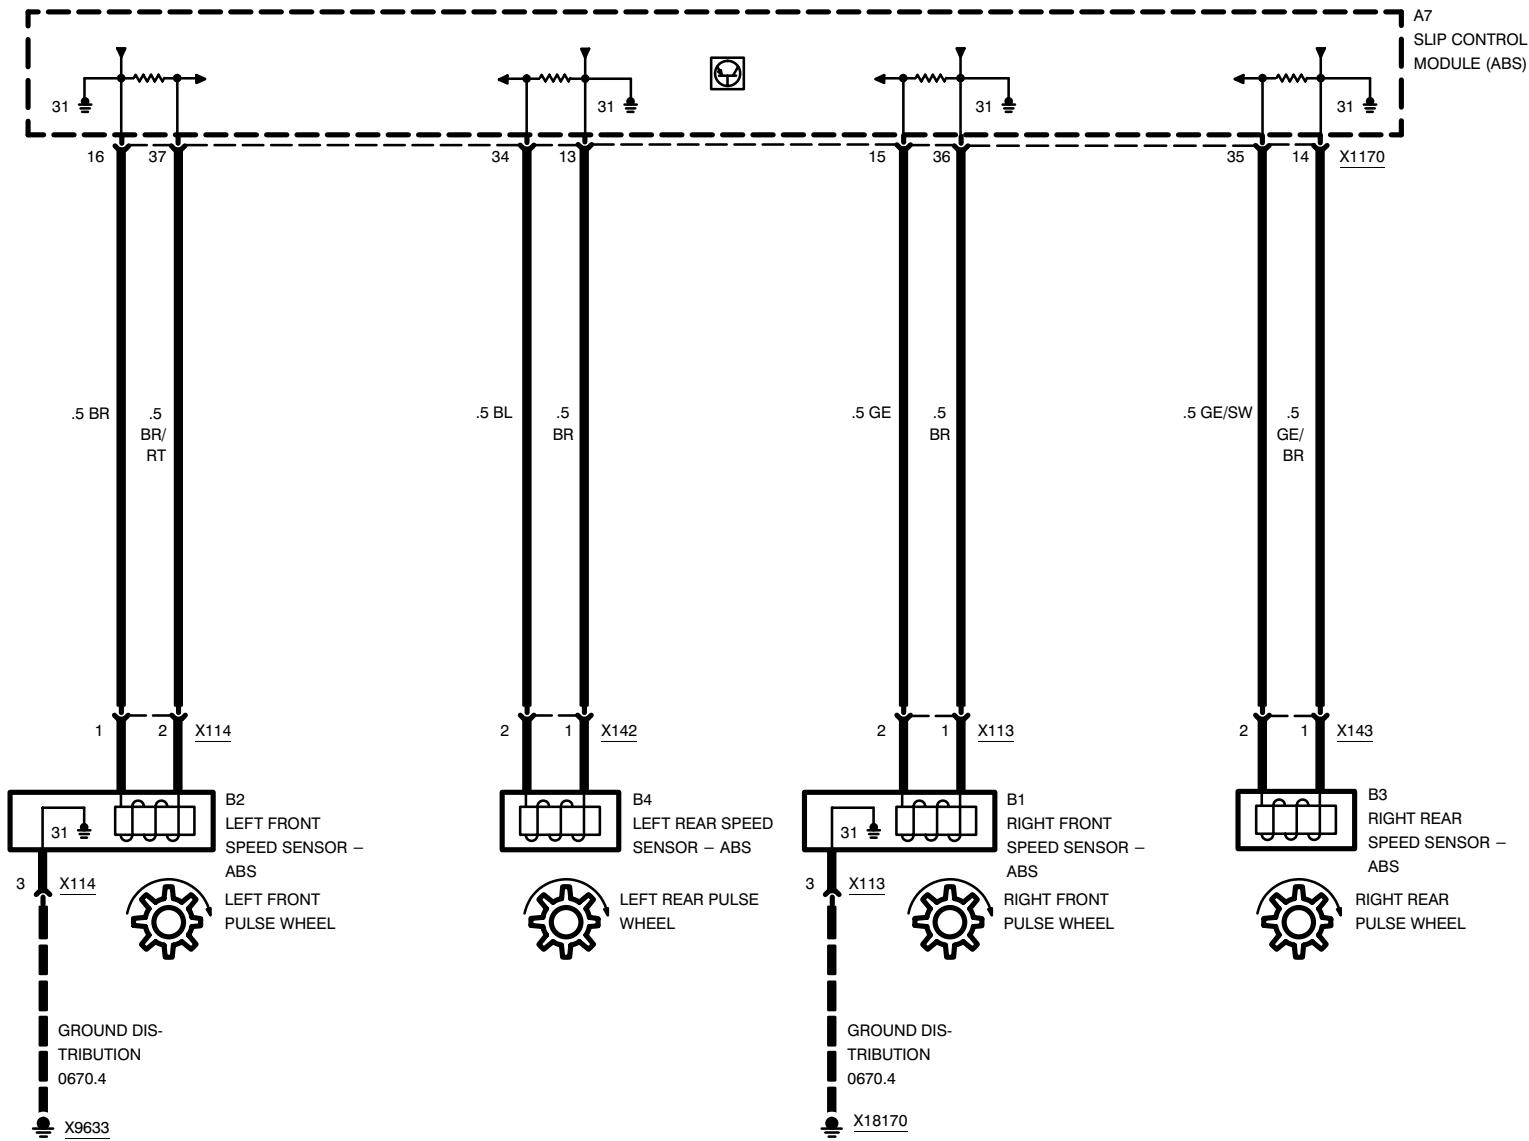

SLIP CONTROL (ABS/ASC)


Z3

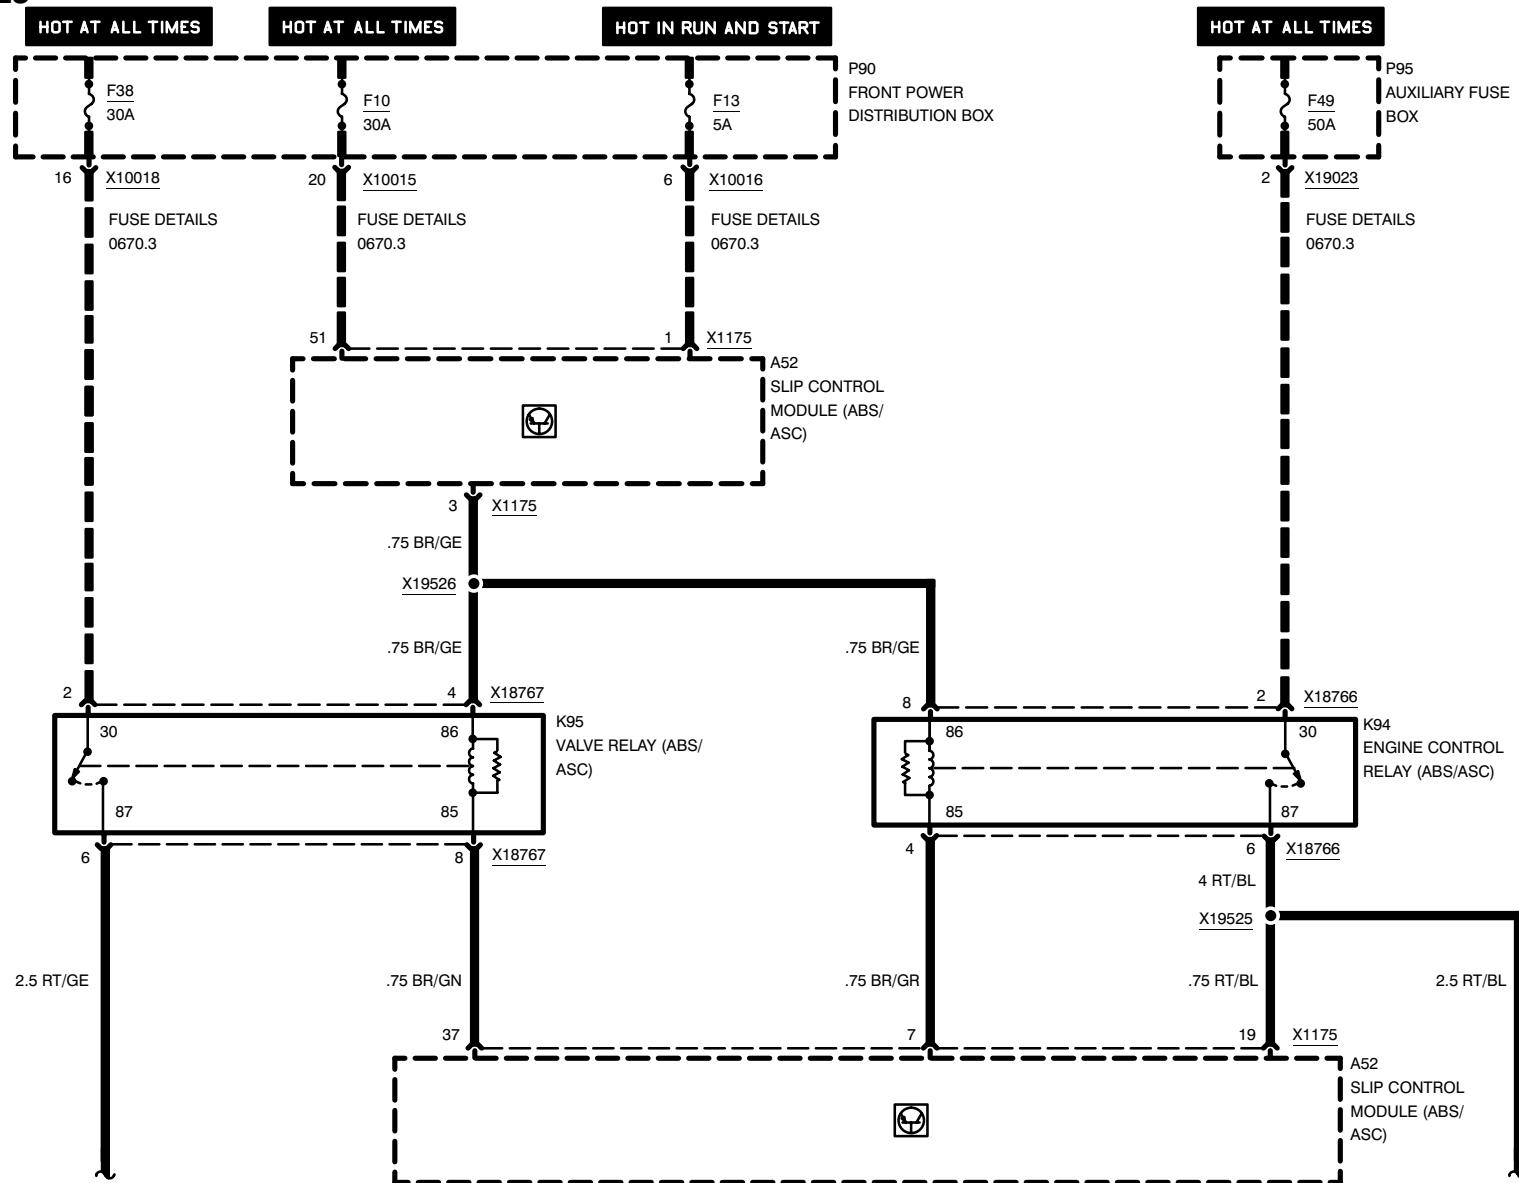

03/98


3450.1-01

1998

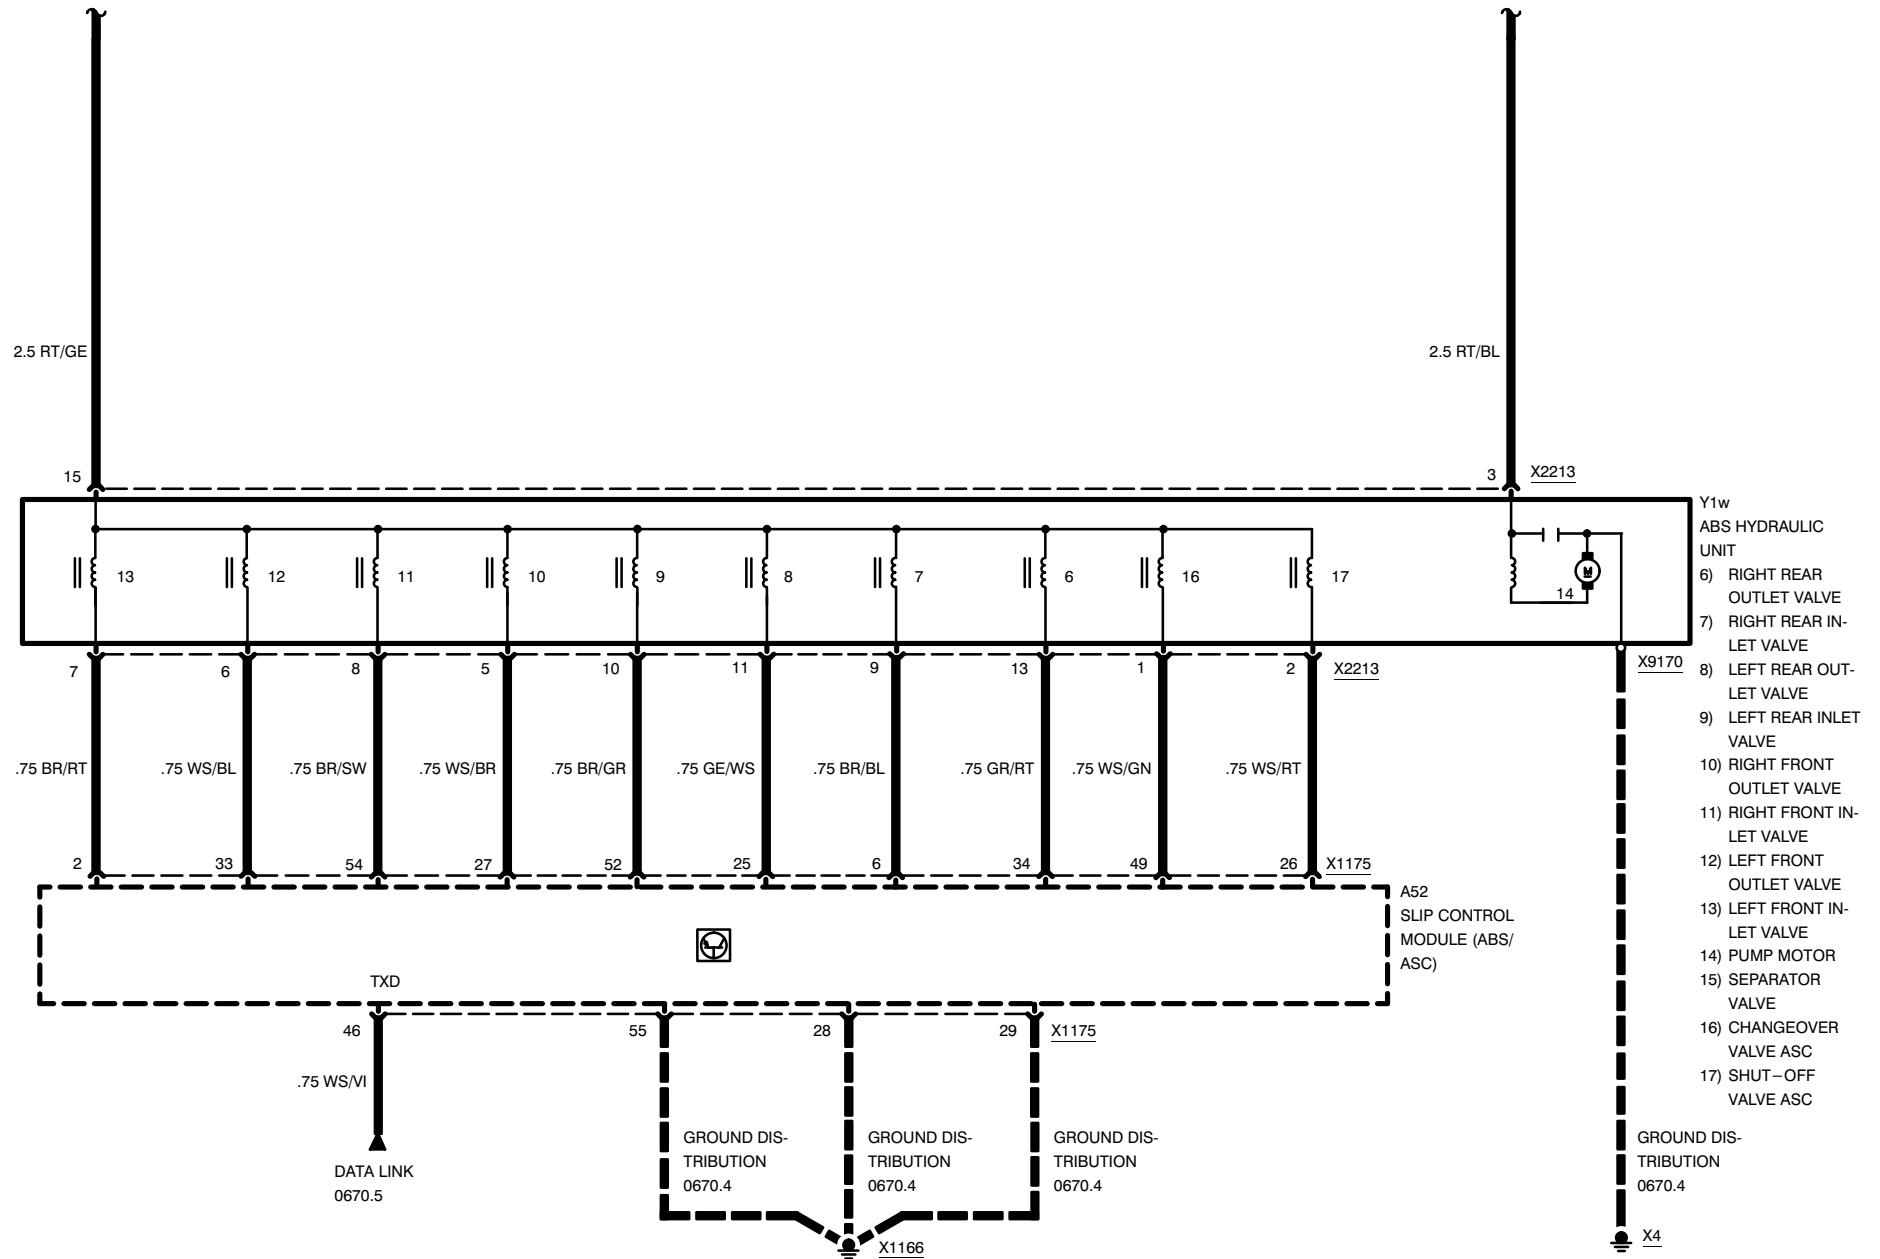


SLIP CONTROL (ABS/ASC)

Z3

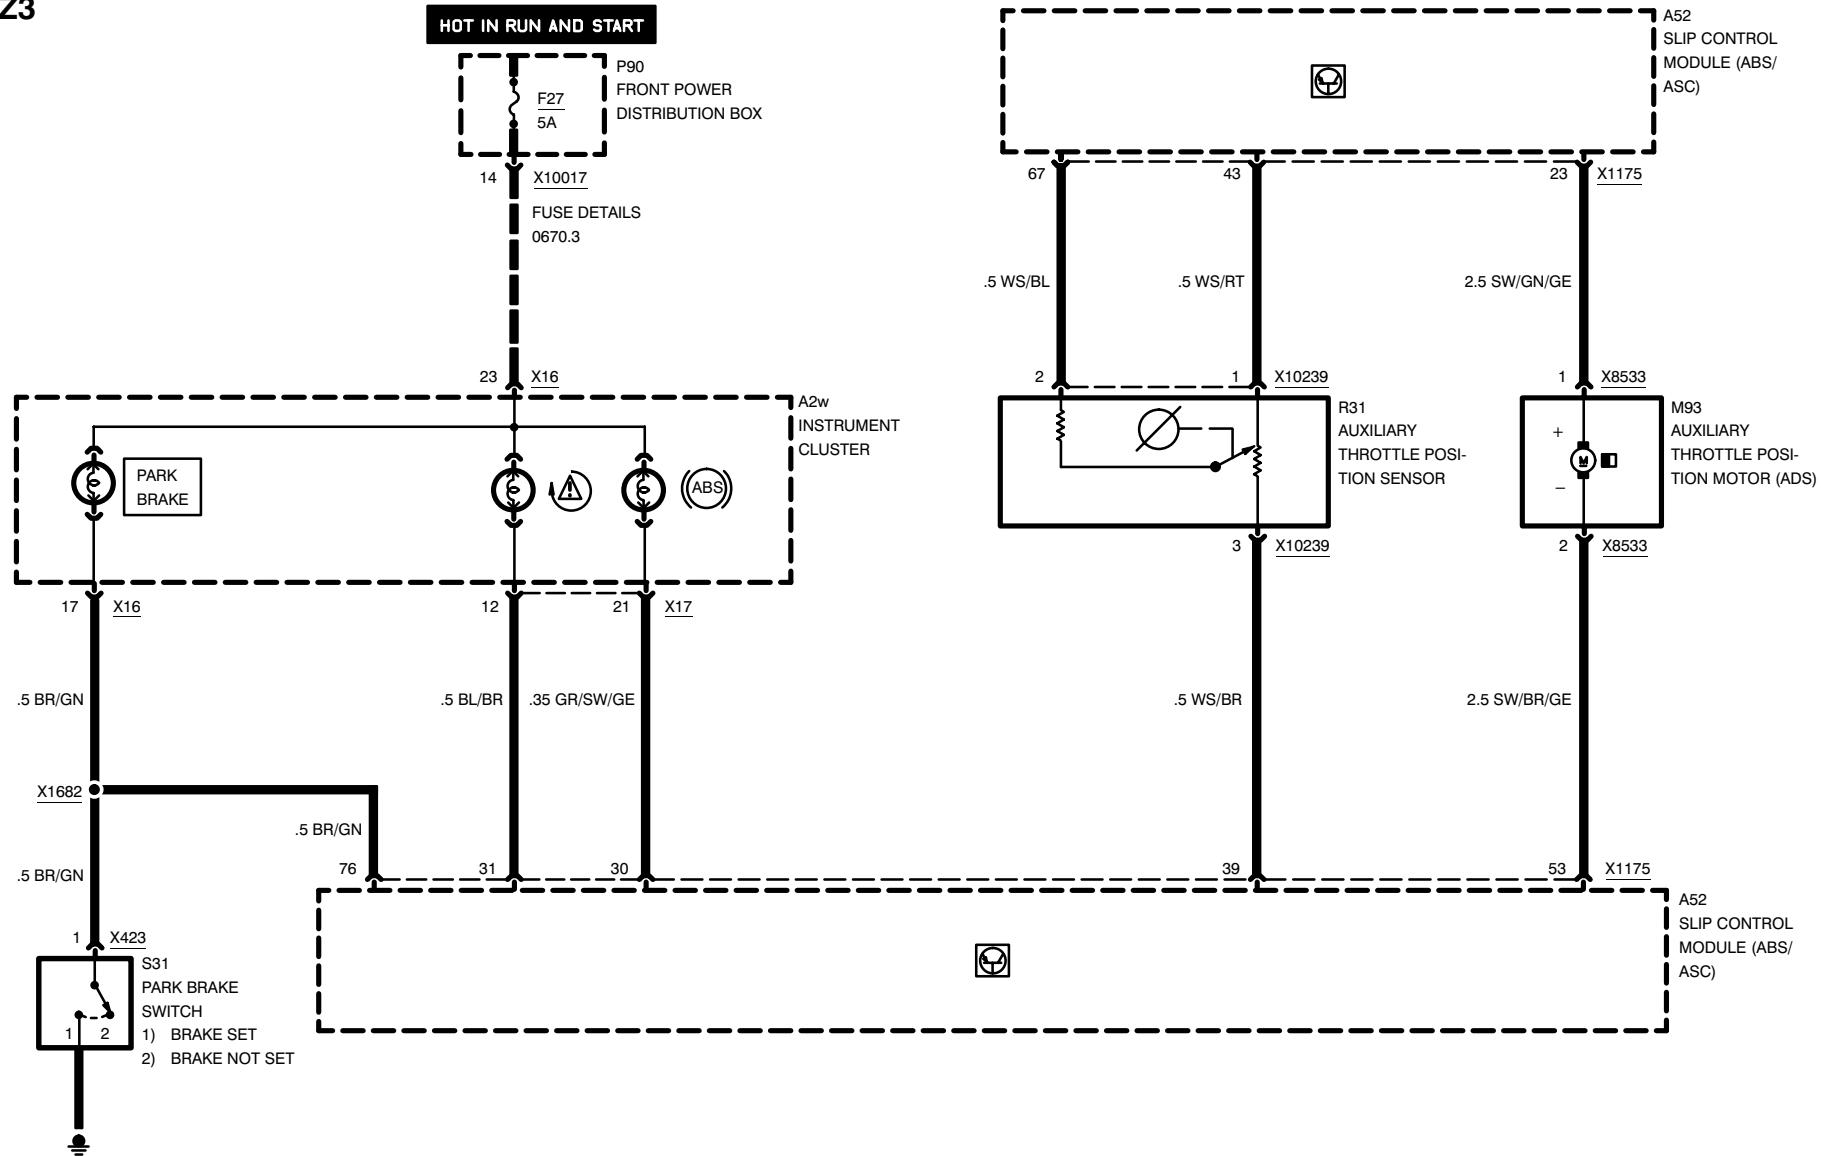

SLIP CONTROL (ABS/ASC)

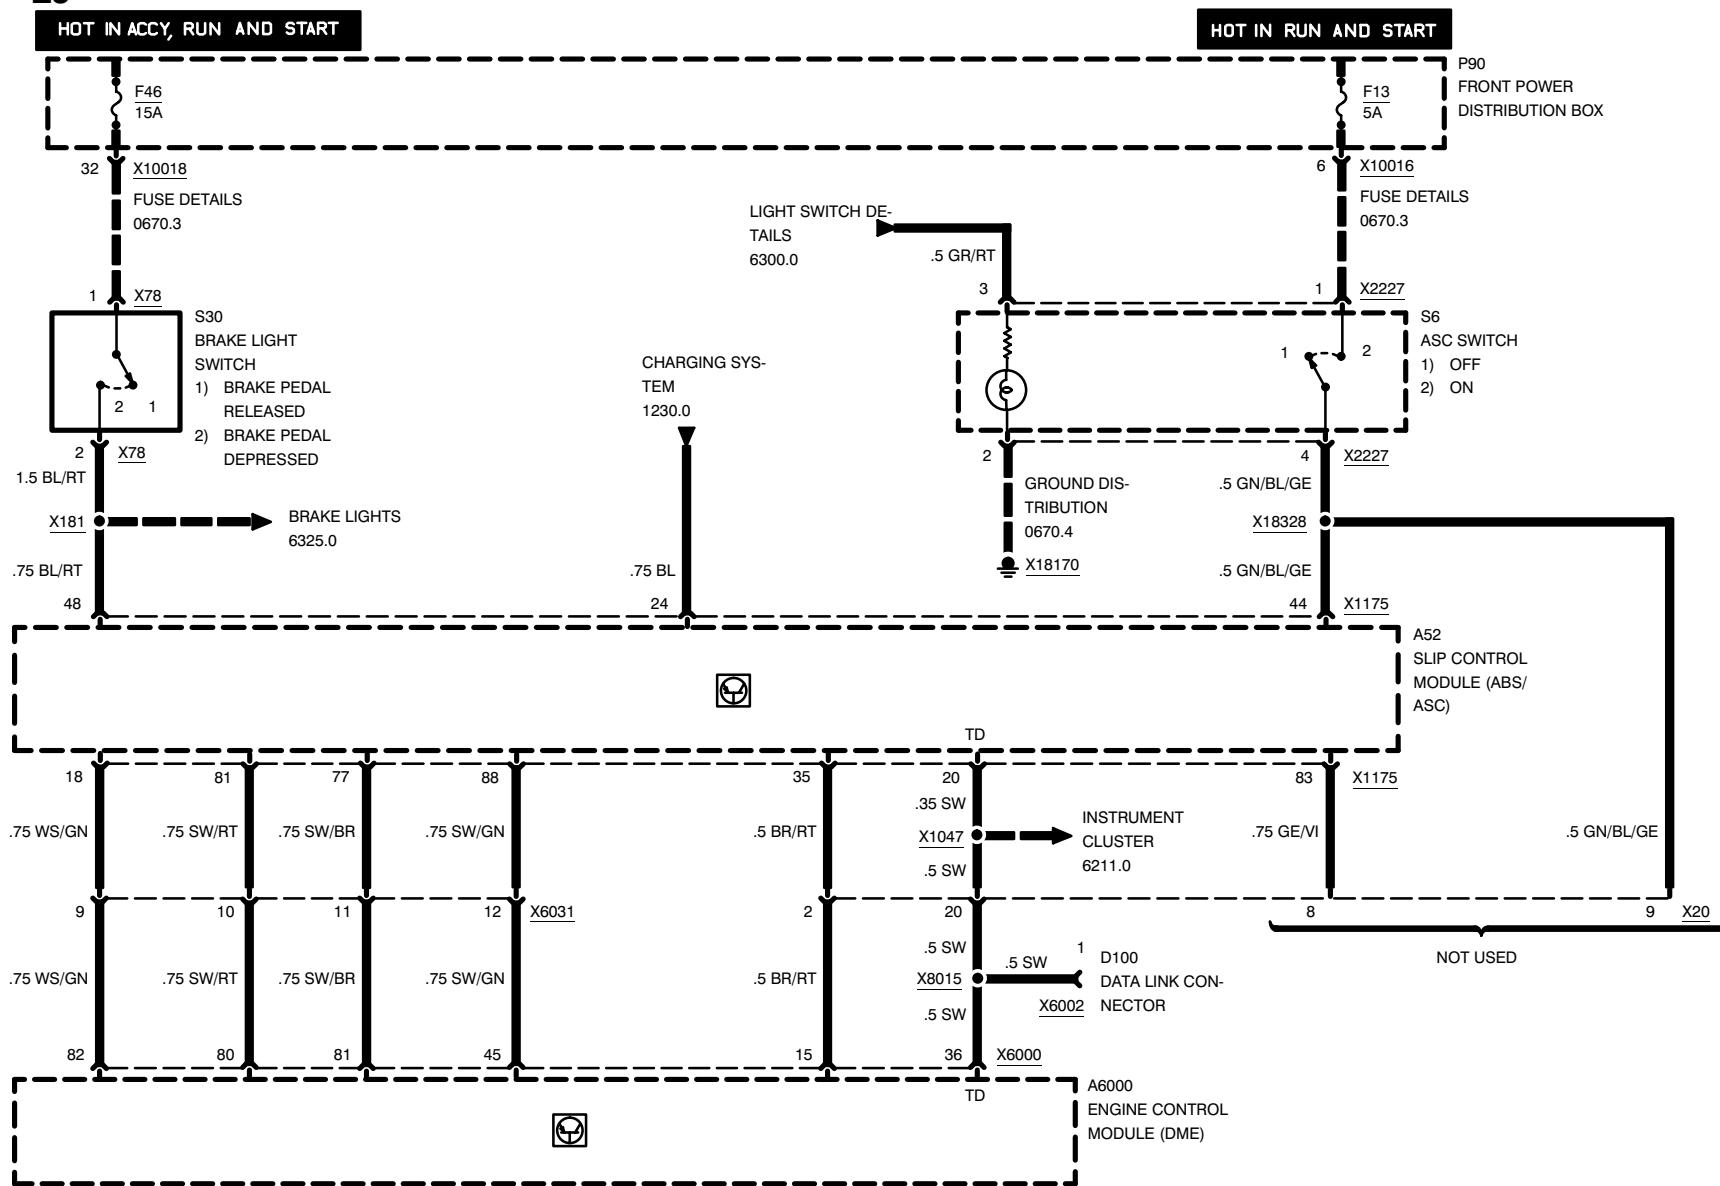



SLIP CONTROL (ABS/ASC)

03/98

3450.1-04


1998

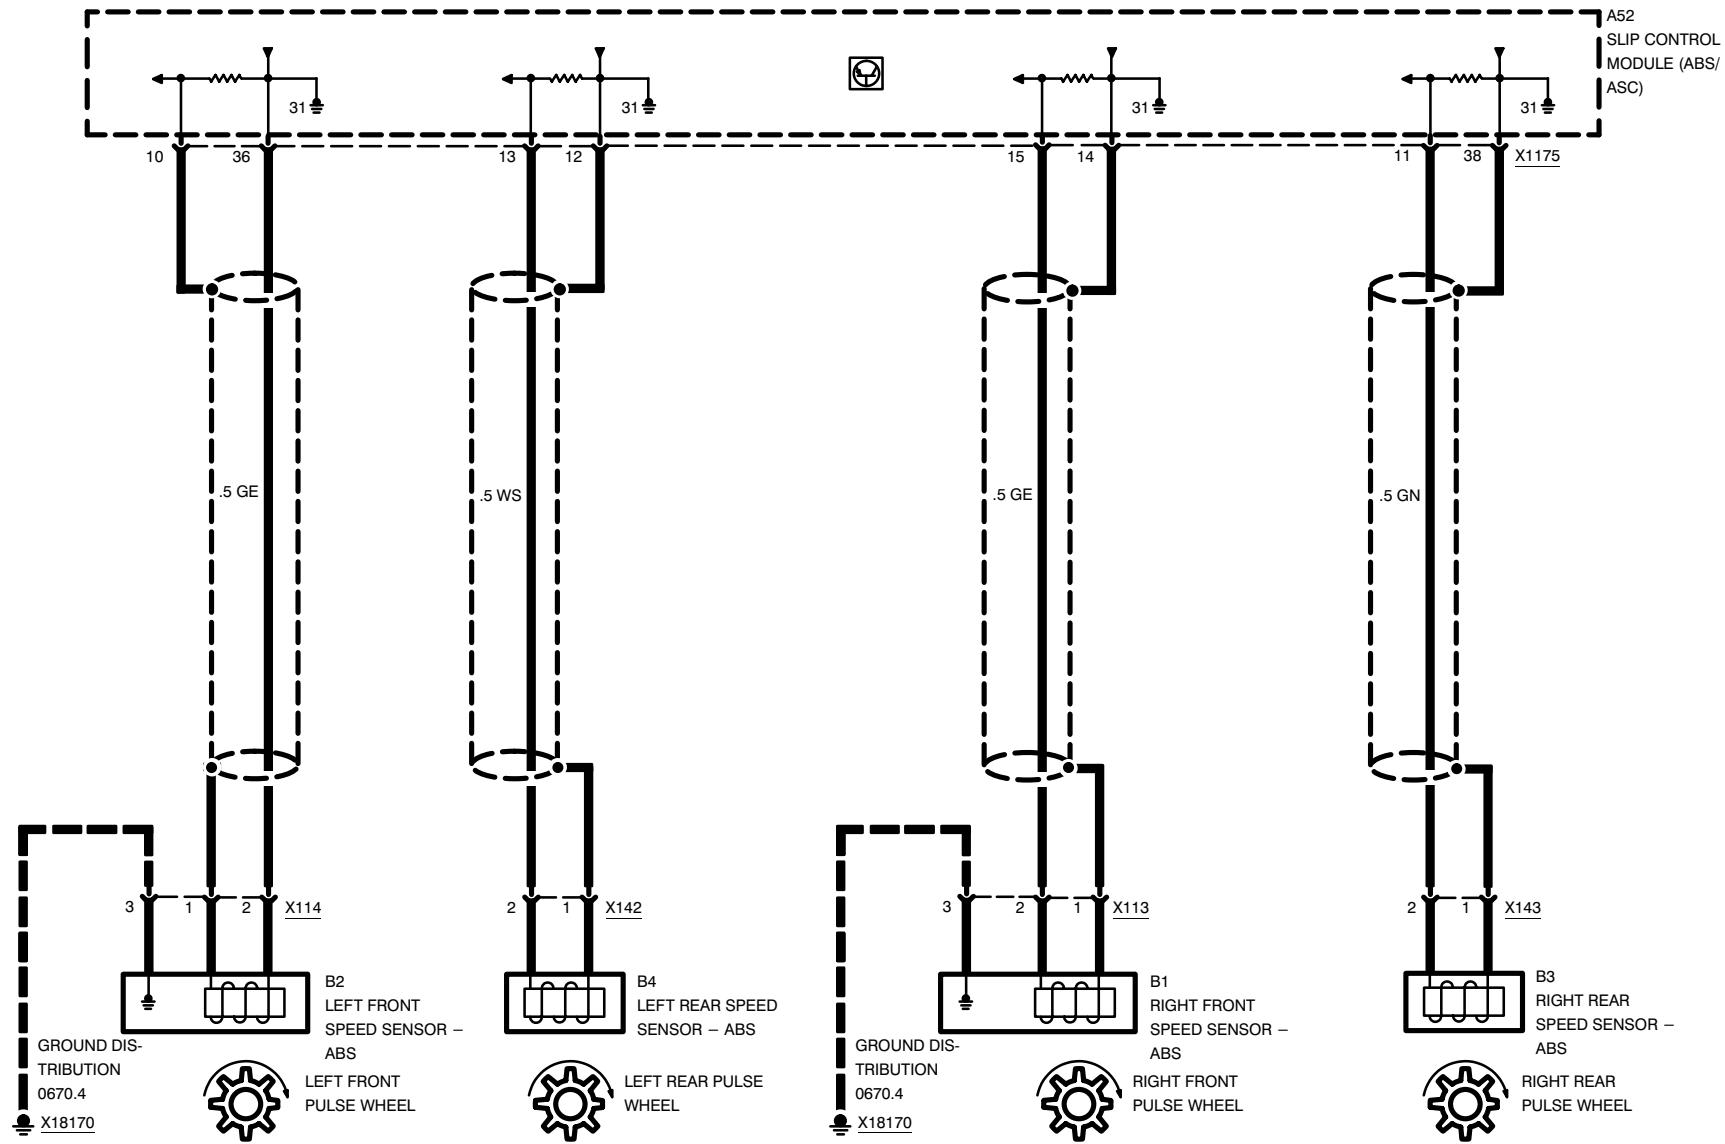

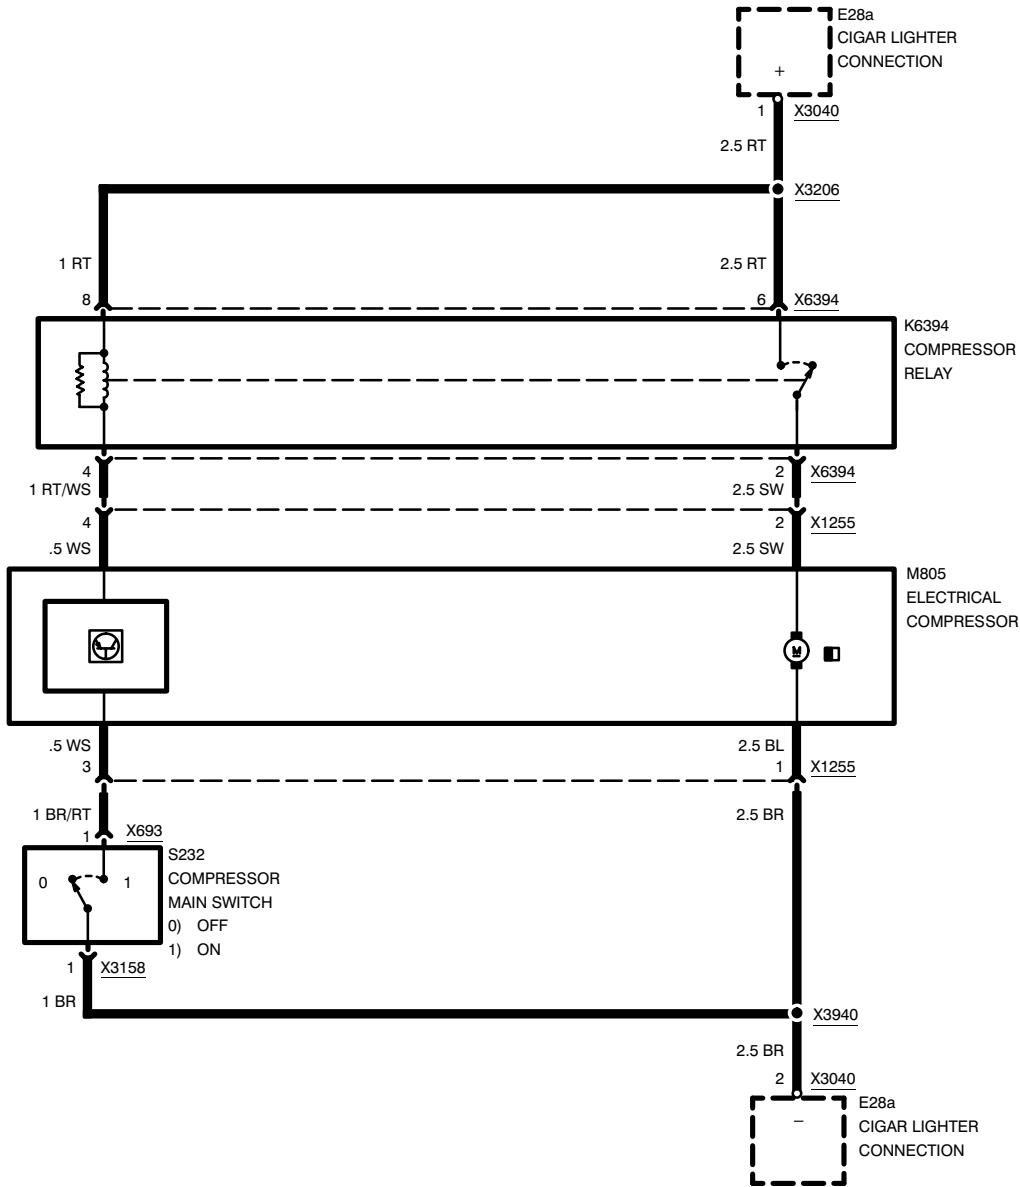

ZKE CENTRAL LOCKING (ZV)

INPUTS, DRIVE-AWAY PROTECTION

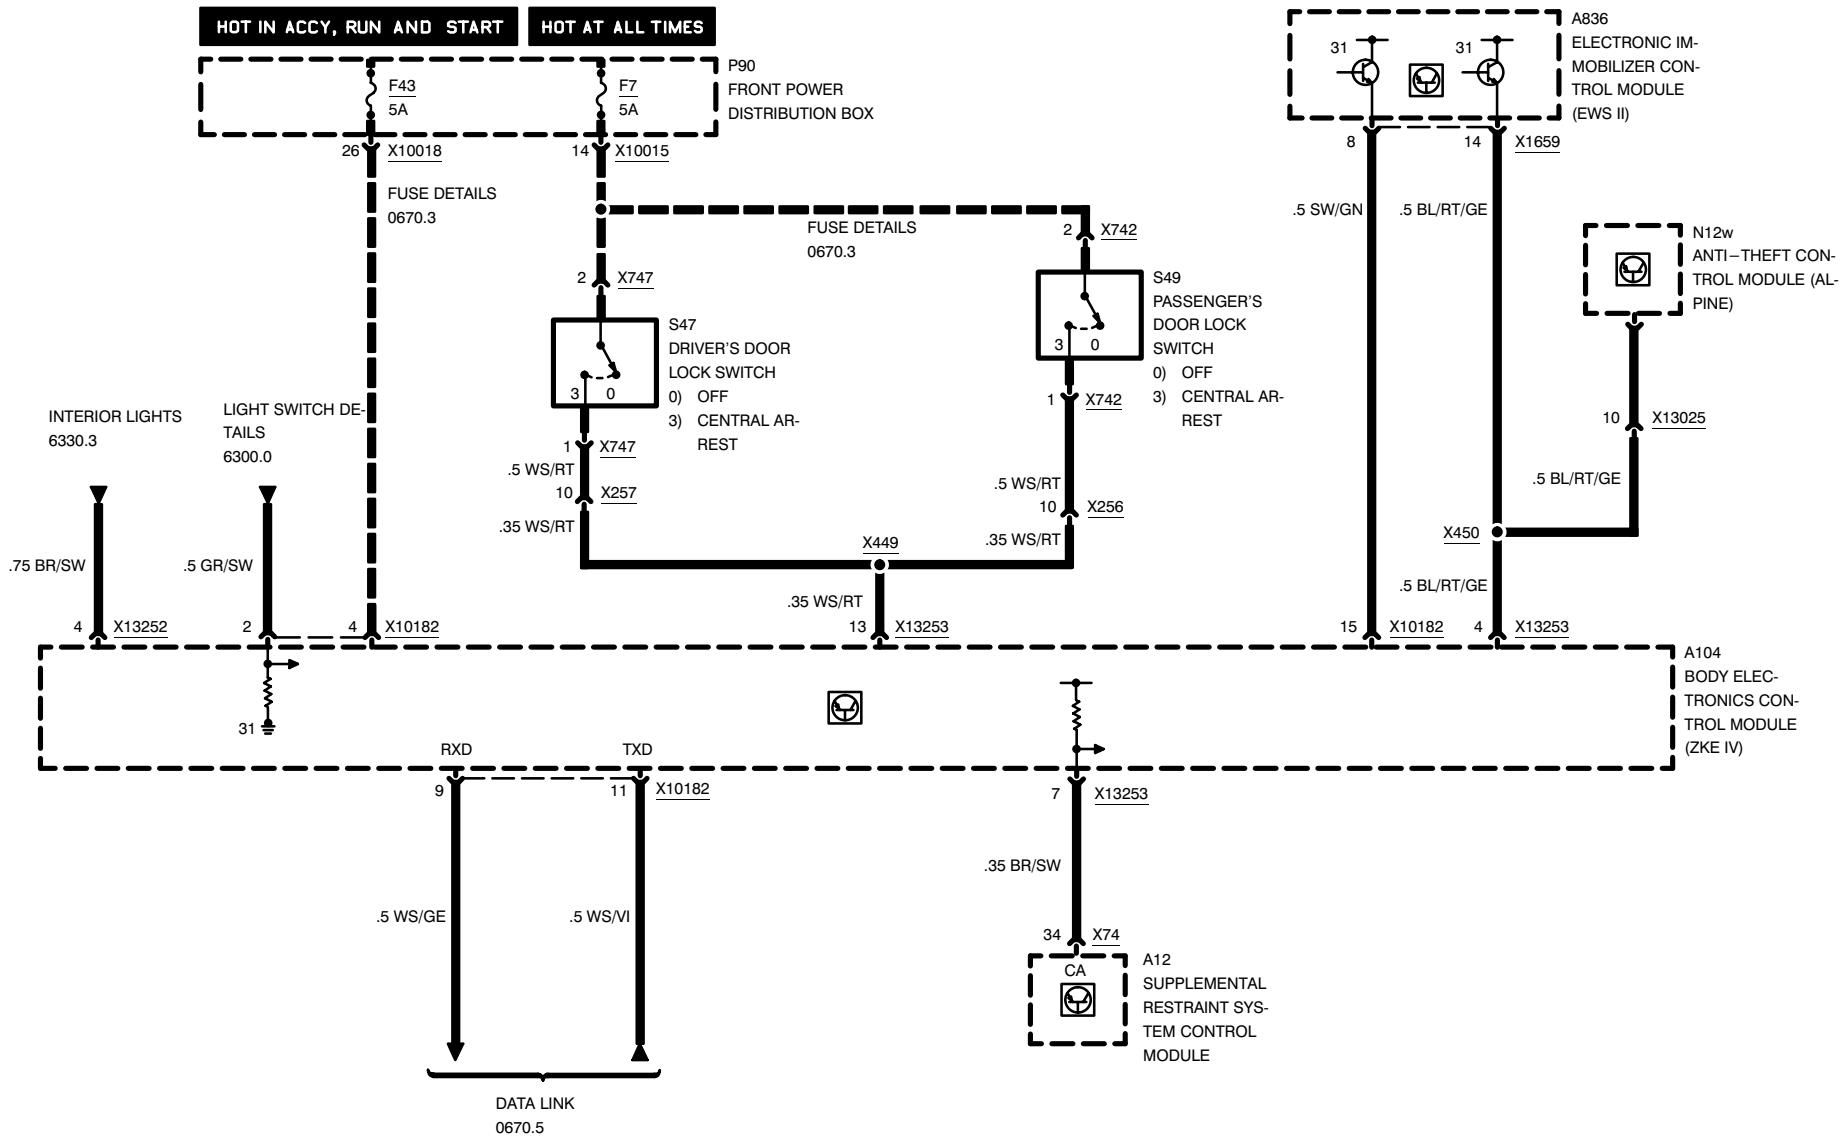



ZKE CENTRAL LOCKING (ZV)

INPUT DETAILS

02/98

5126.0-01 — 1998

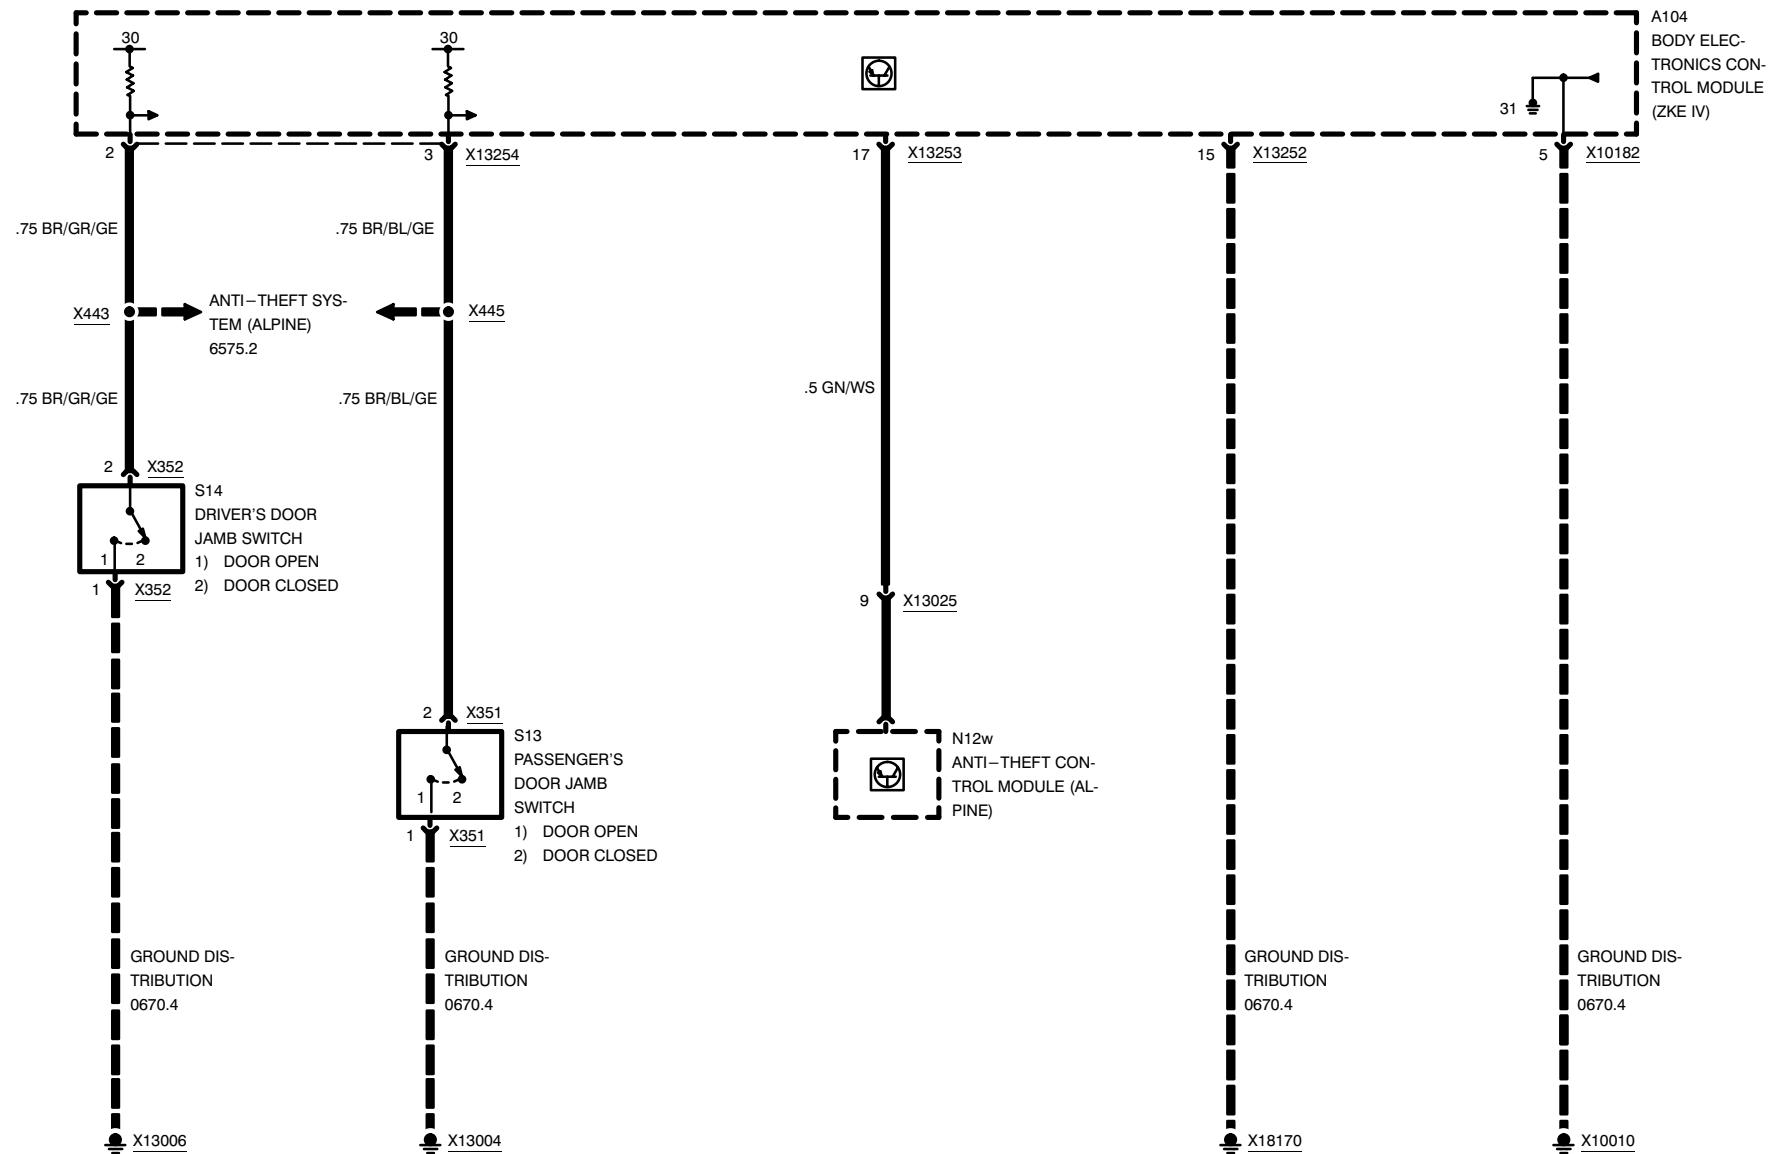


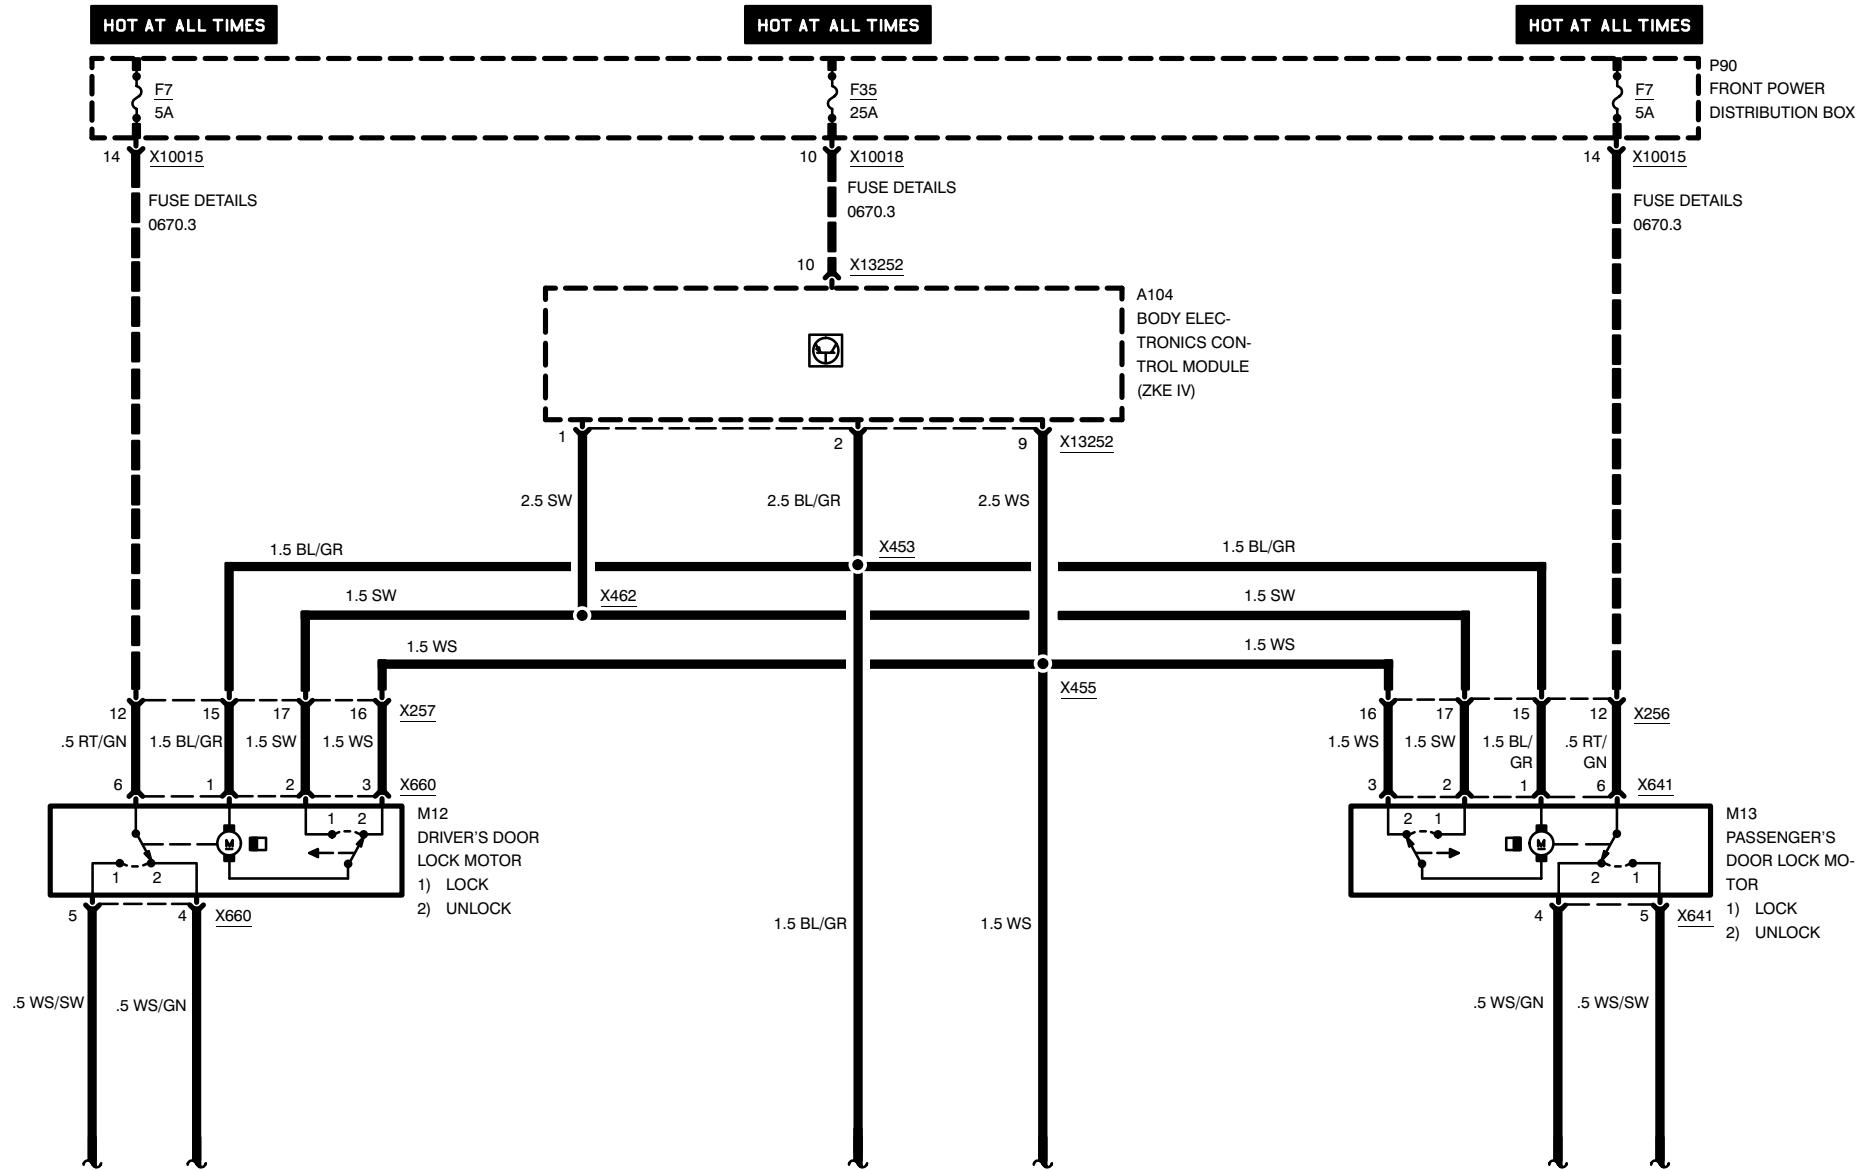

02/98


— 5126.0-03 —

1998

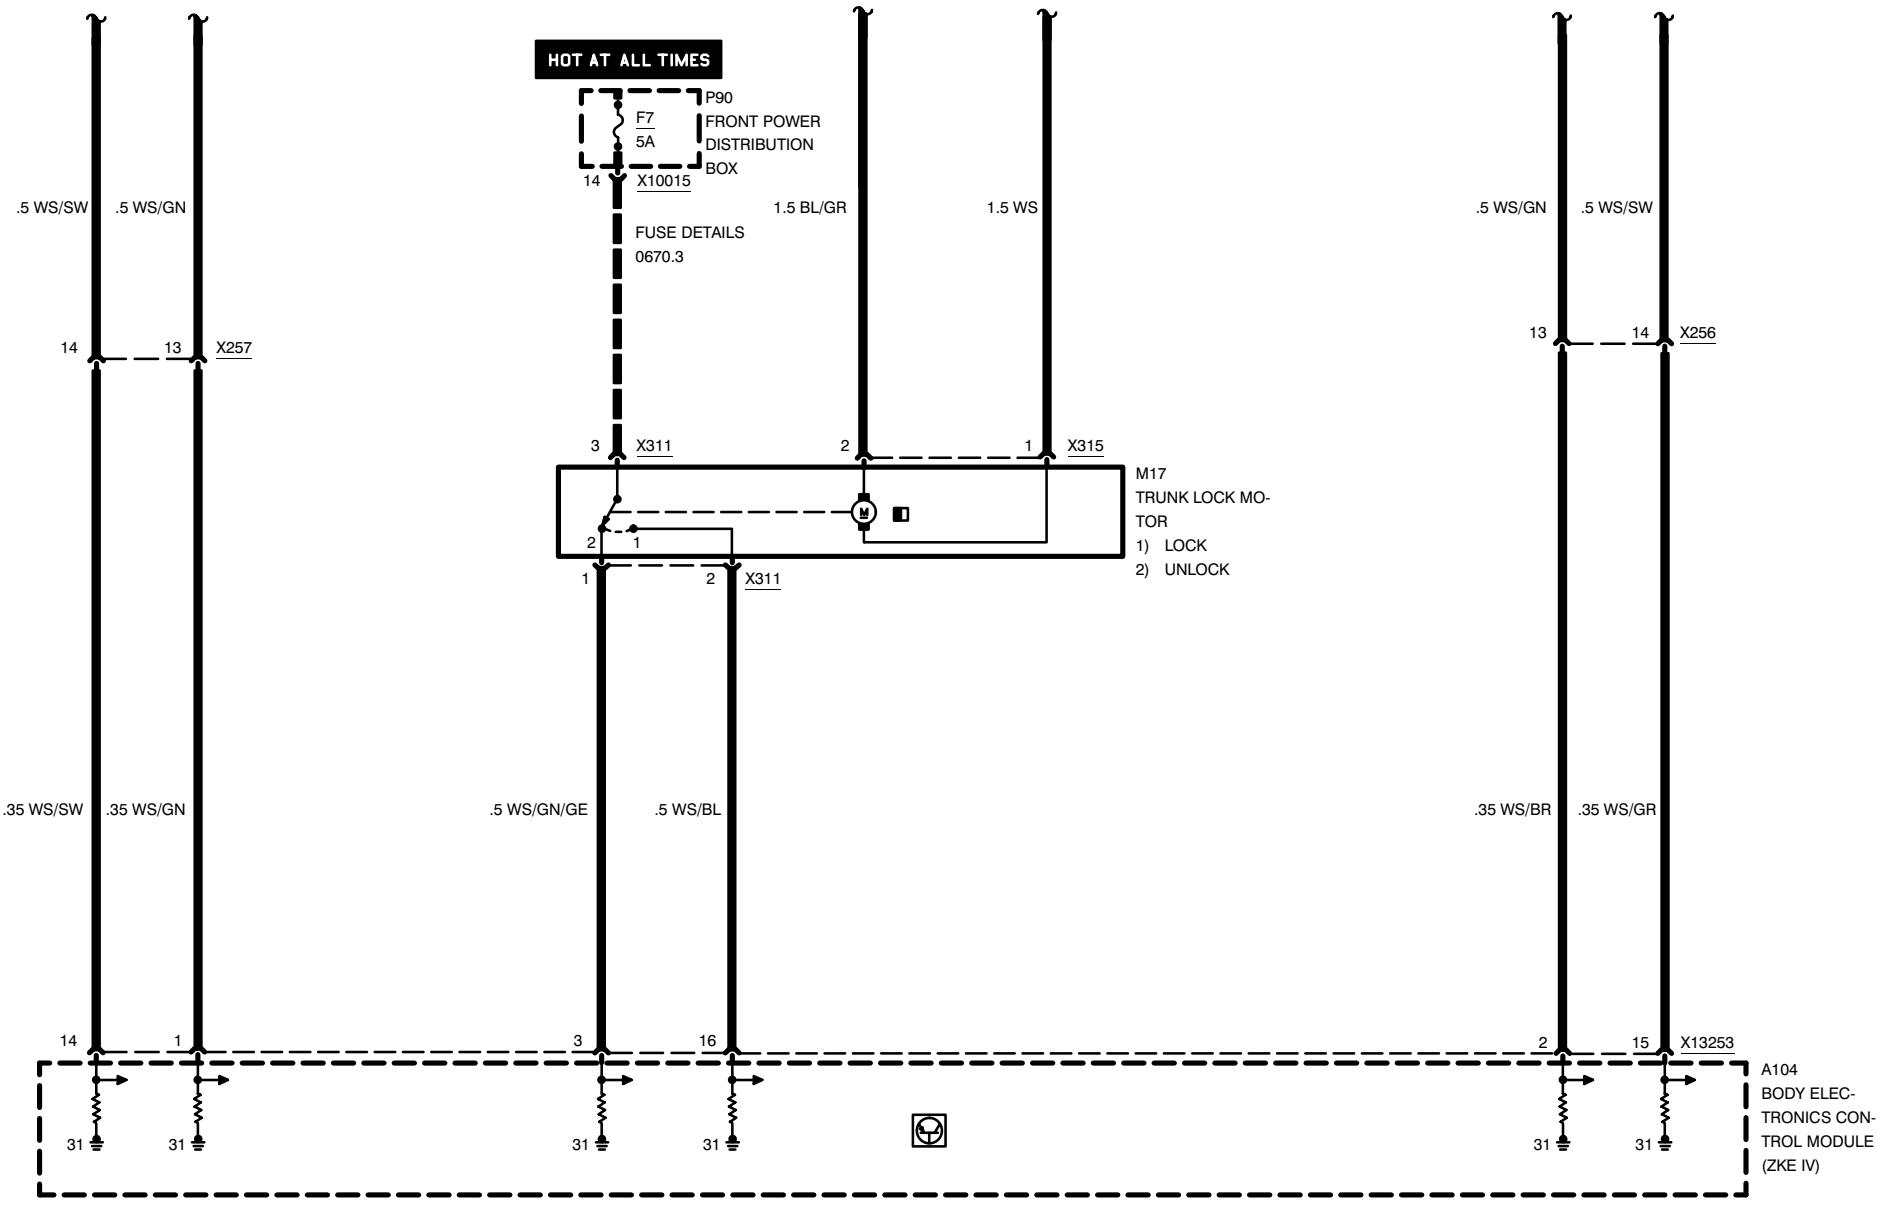


INSTRUMENT CLUSTER


INDICATORS

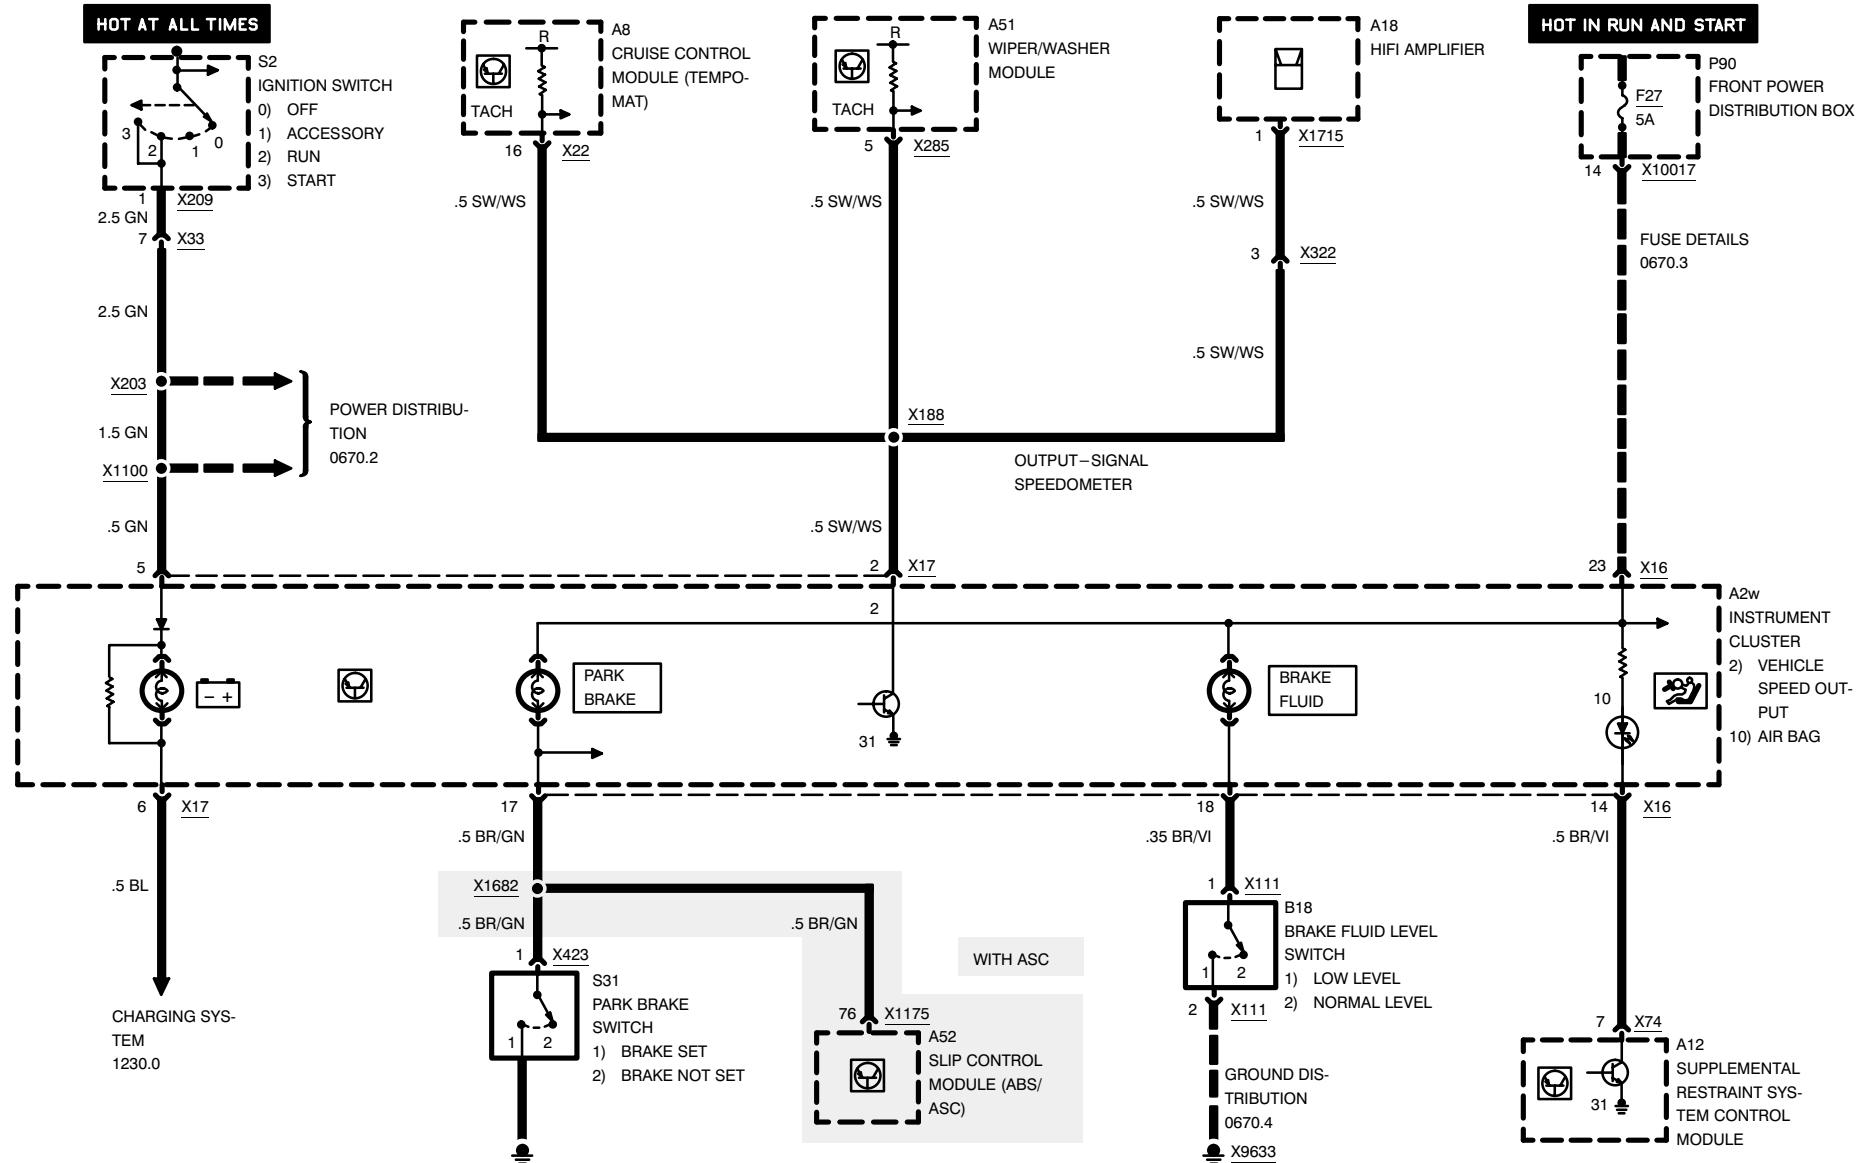

INSTRUMENT CLUSTER

INDICATORS

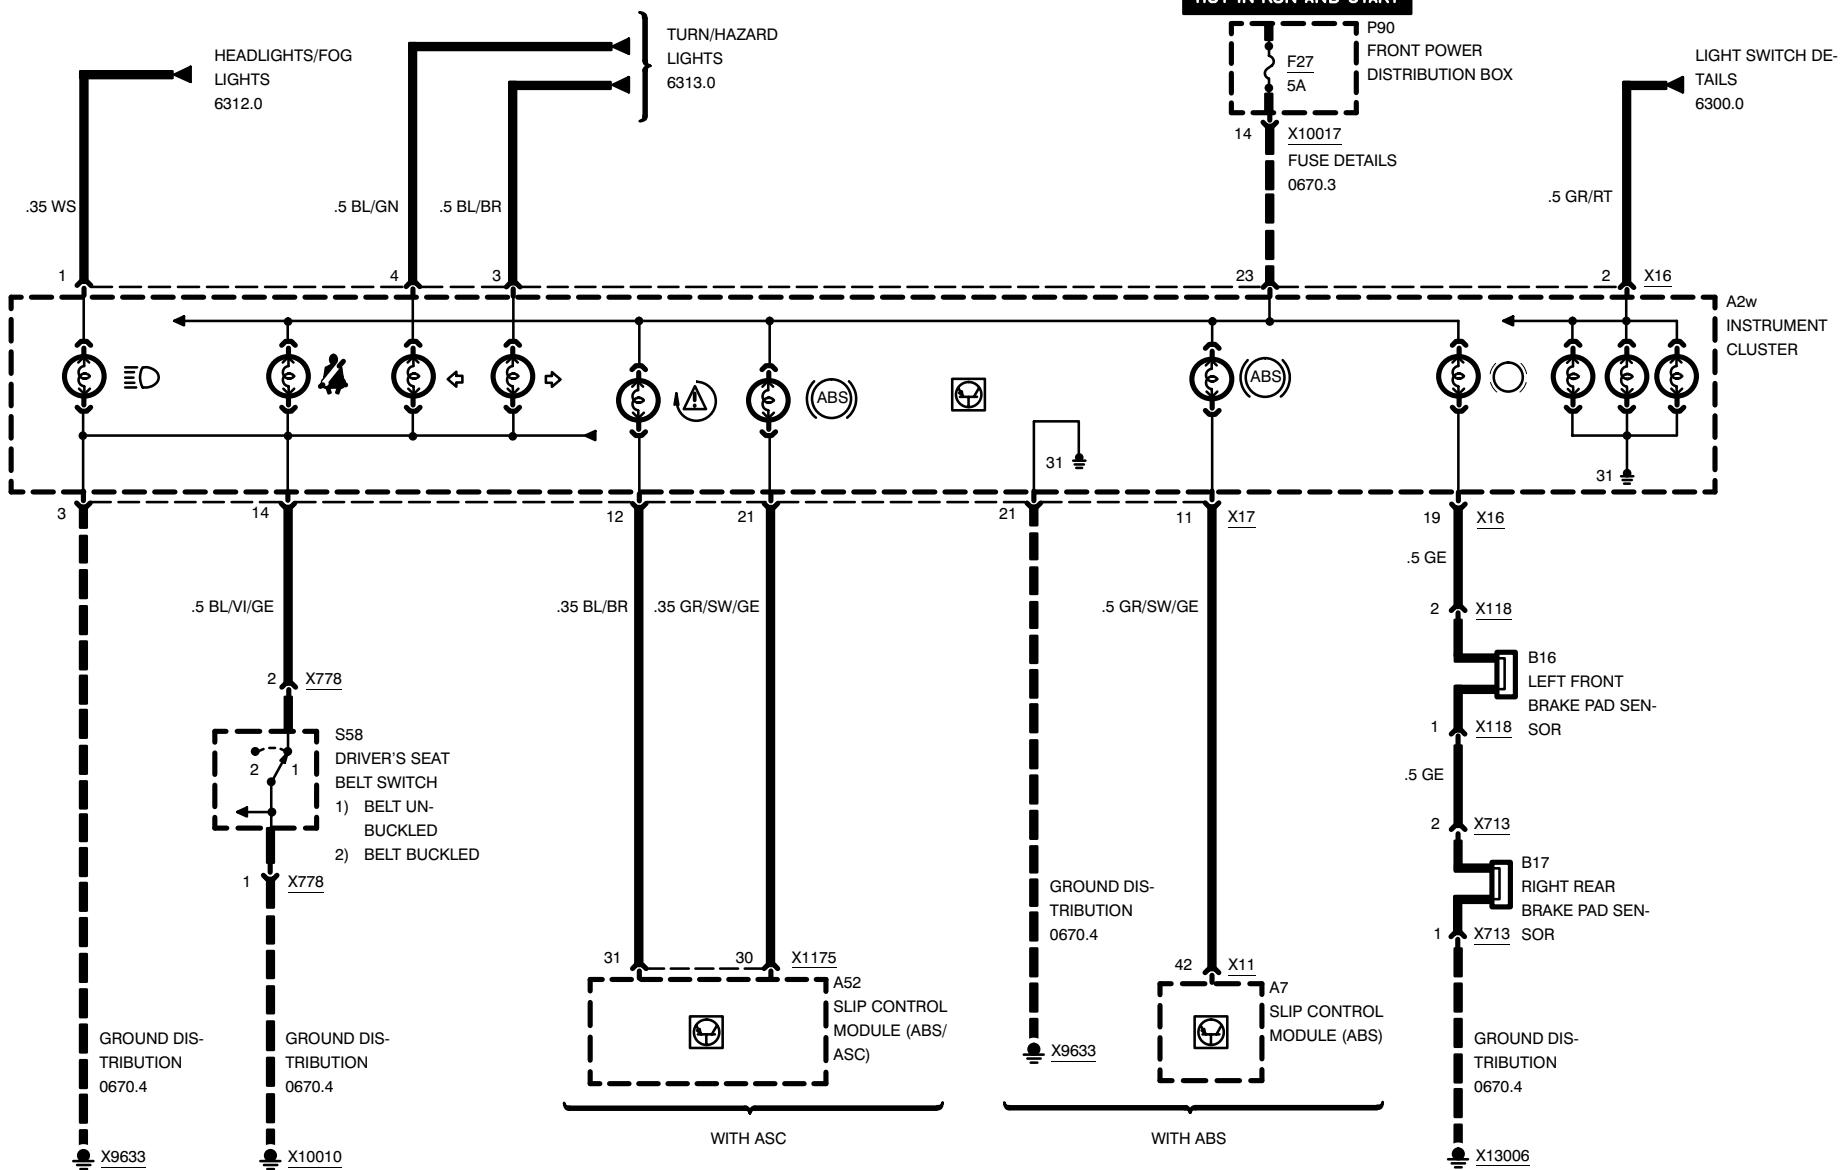

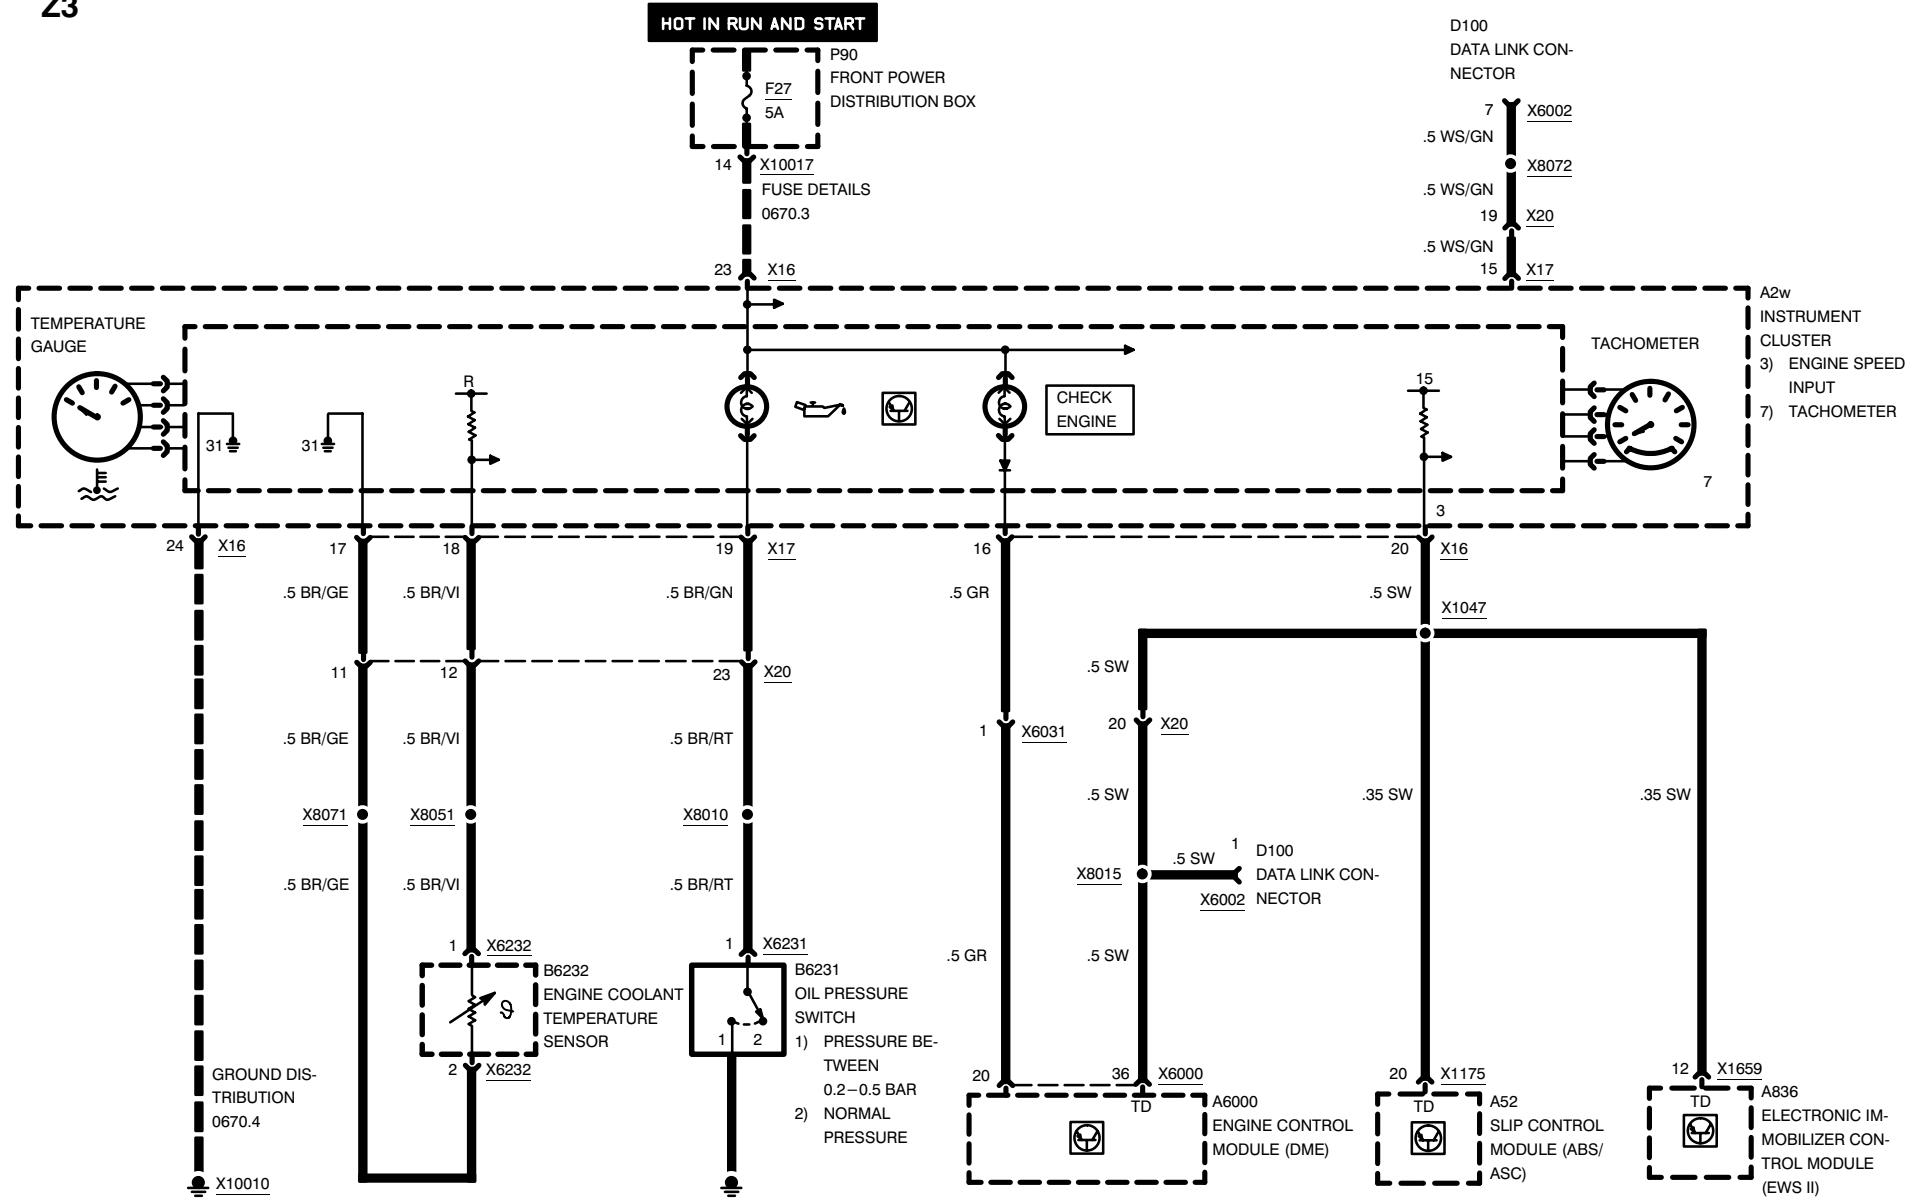


INSTRUMENT CLUSTER

INDICATORS


02/98

6211.0-03

1998

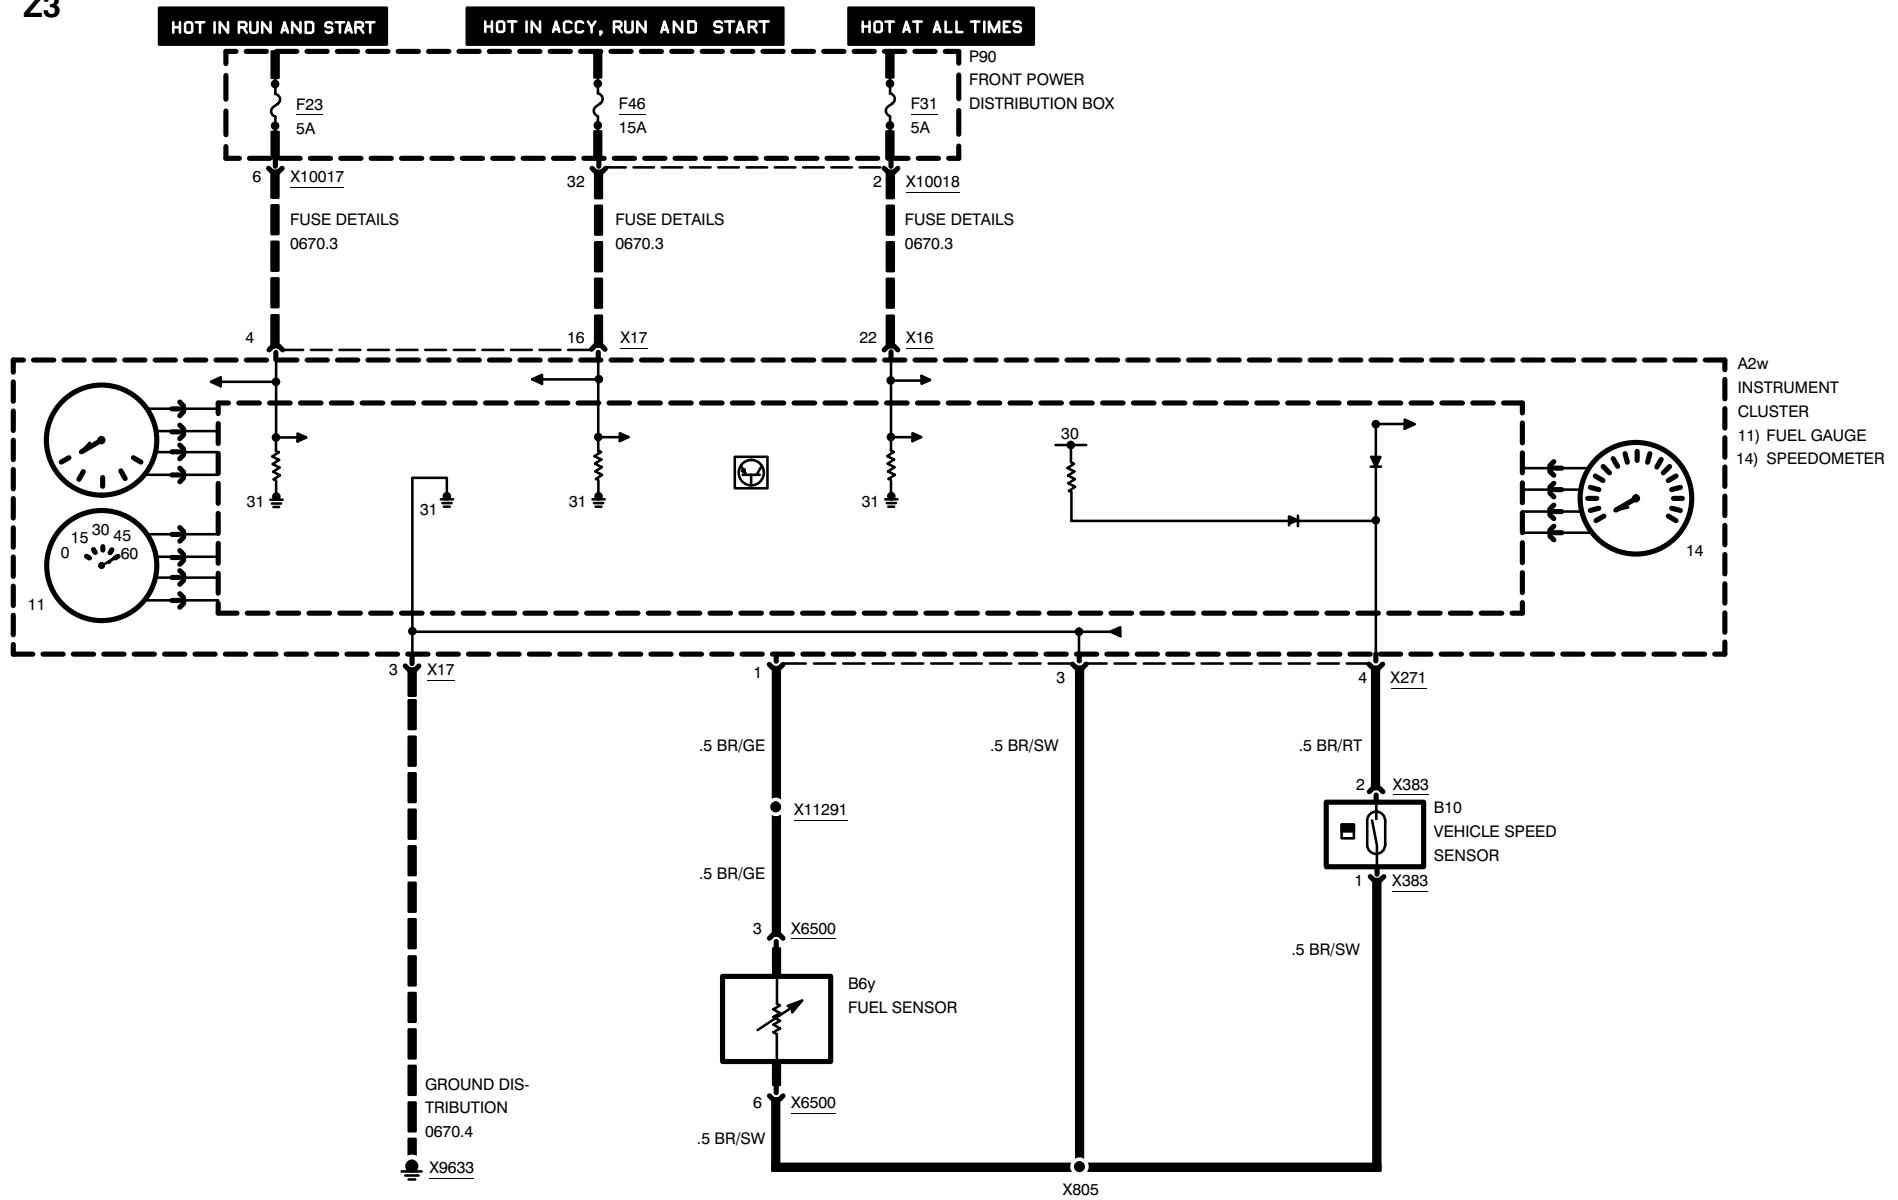



INSTRUMENT CLUSTER

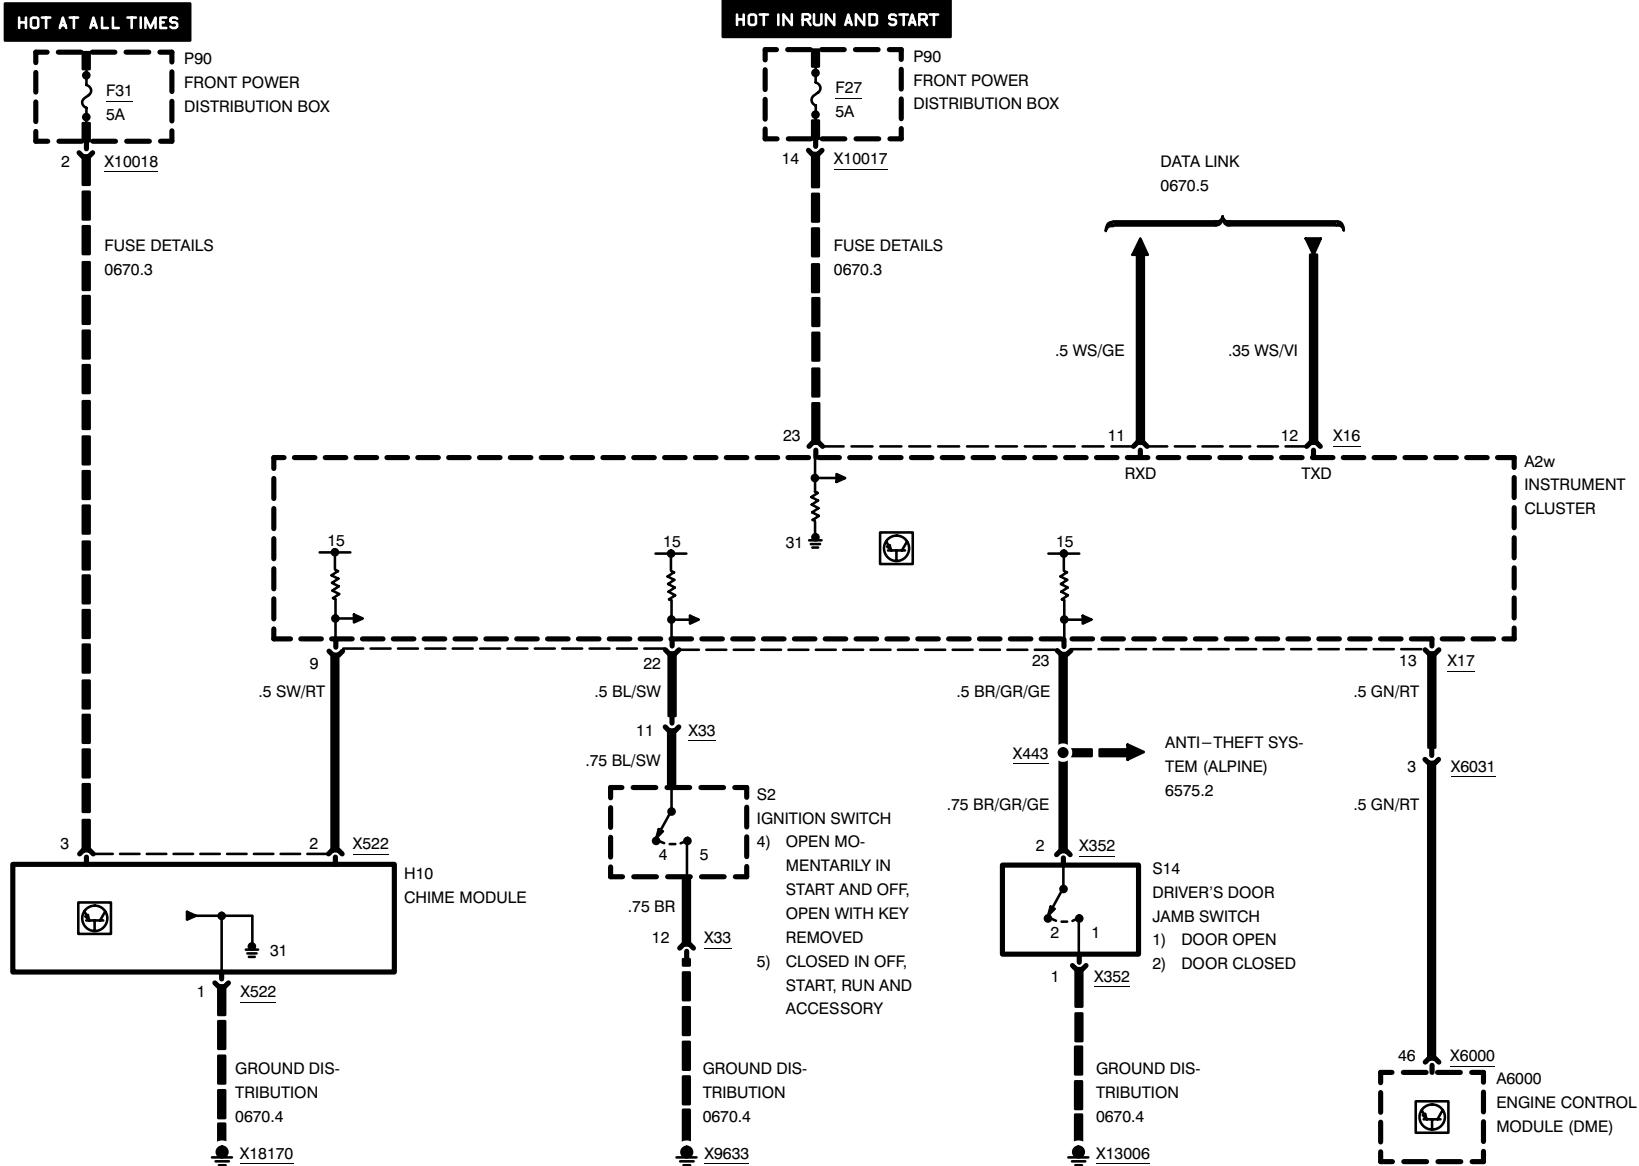


INSTRUMENT CLUSTER

CONSOLE INSTRUMENTS

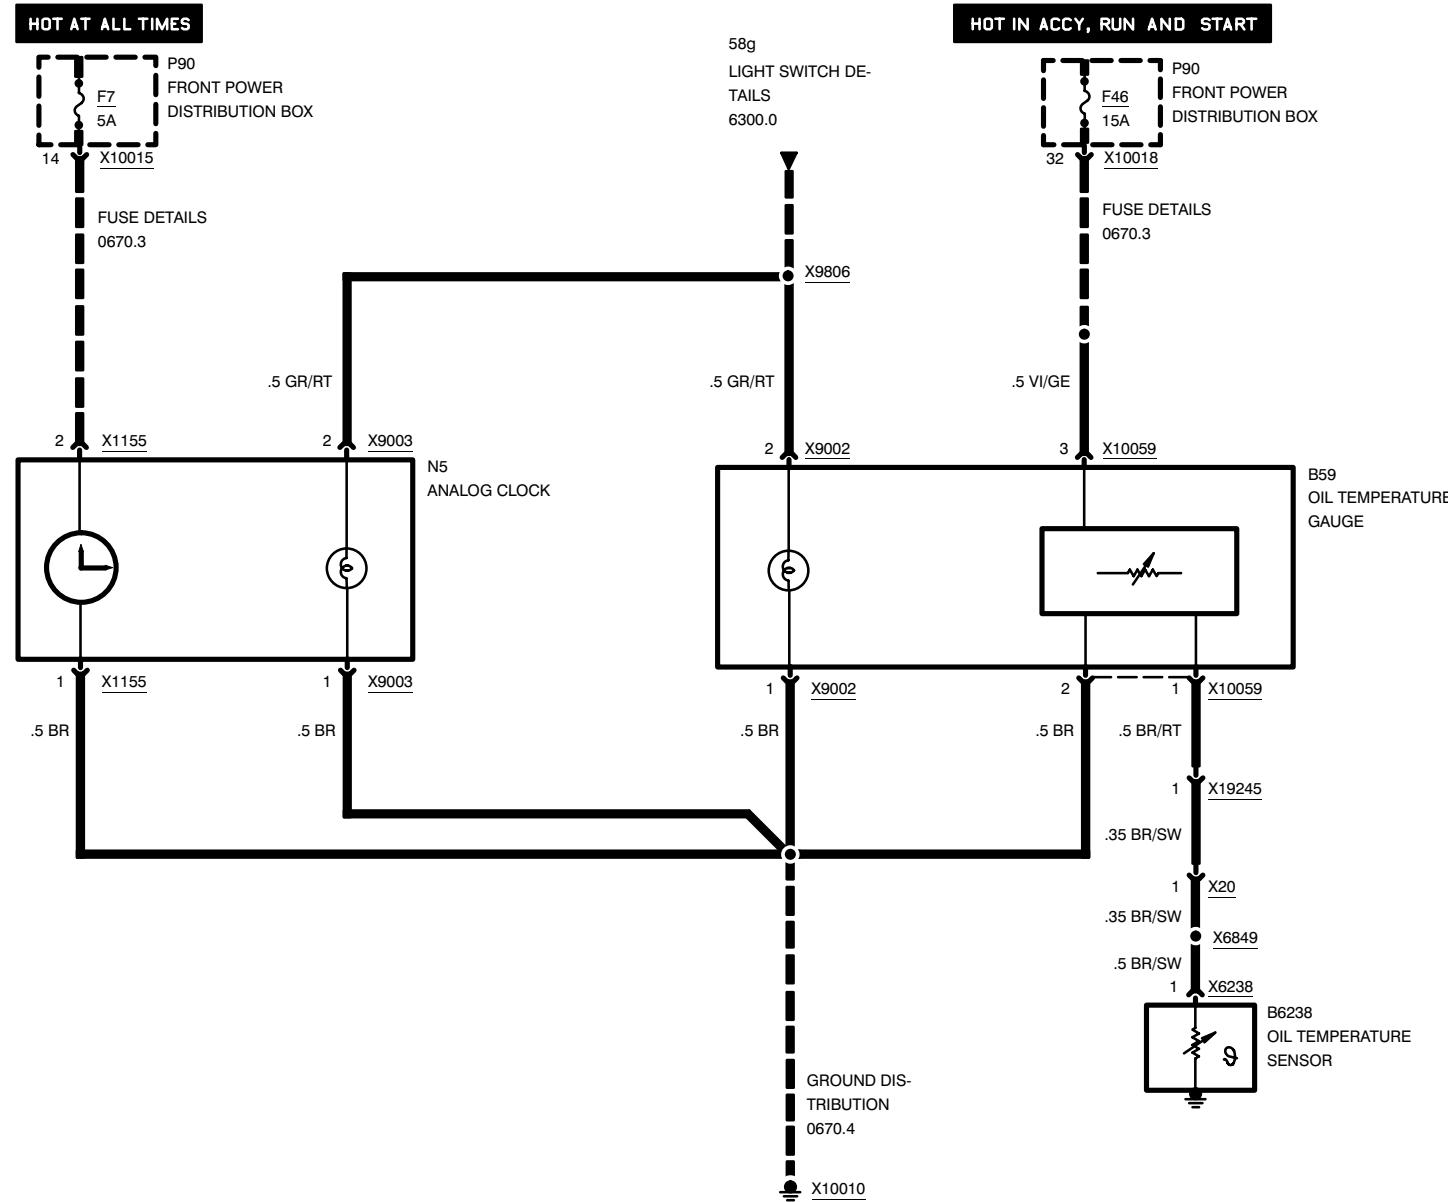

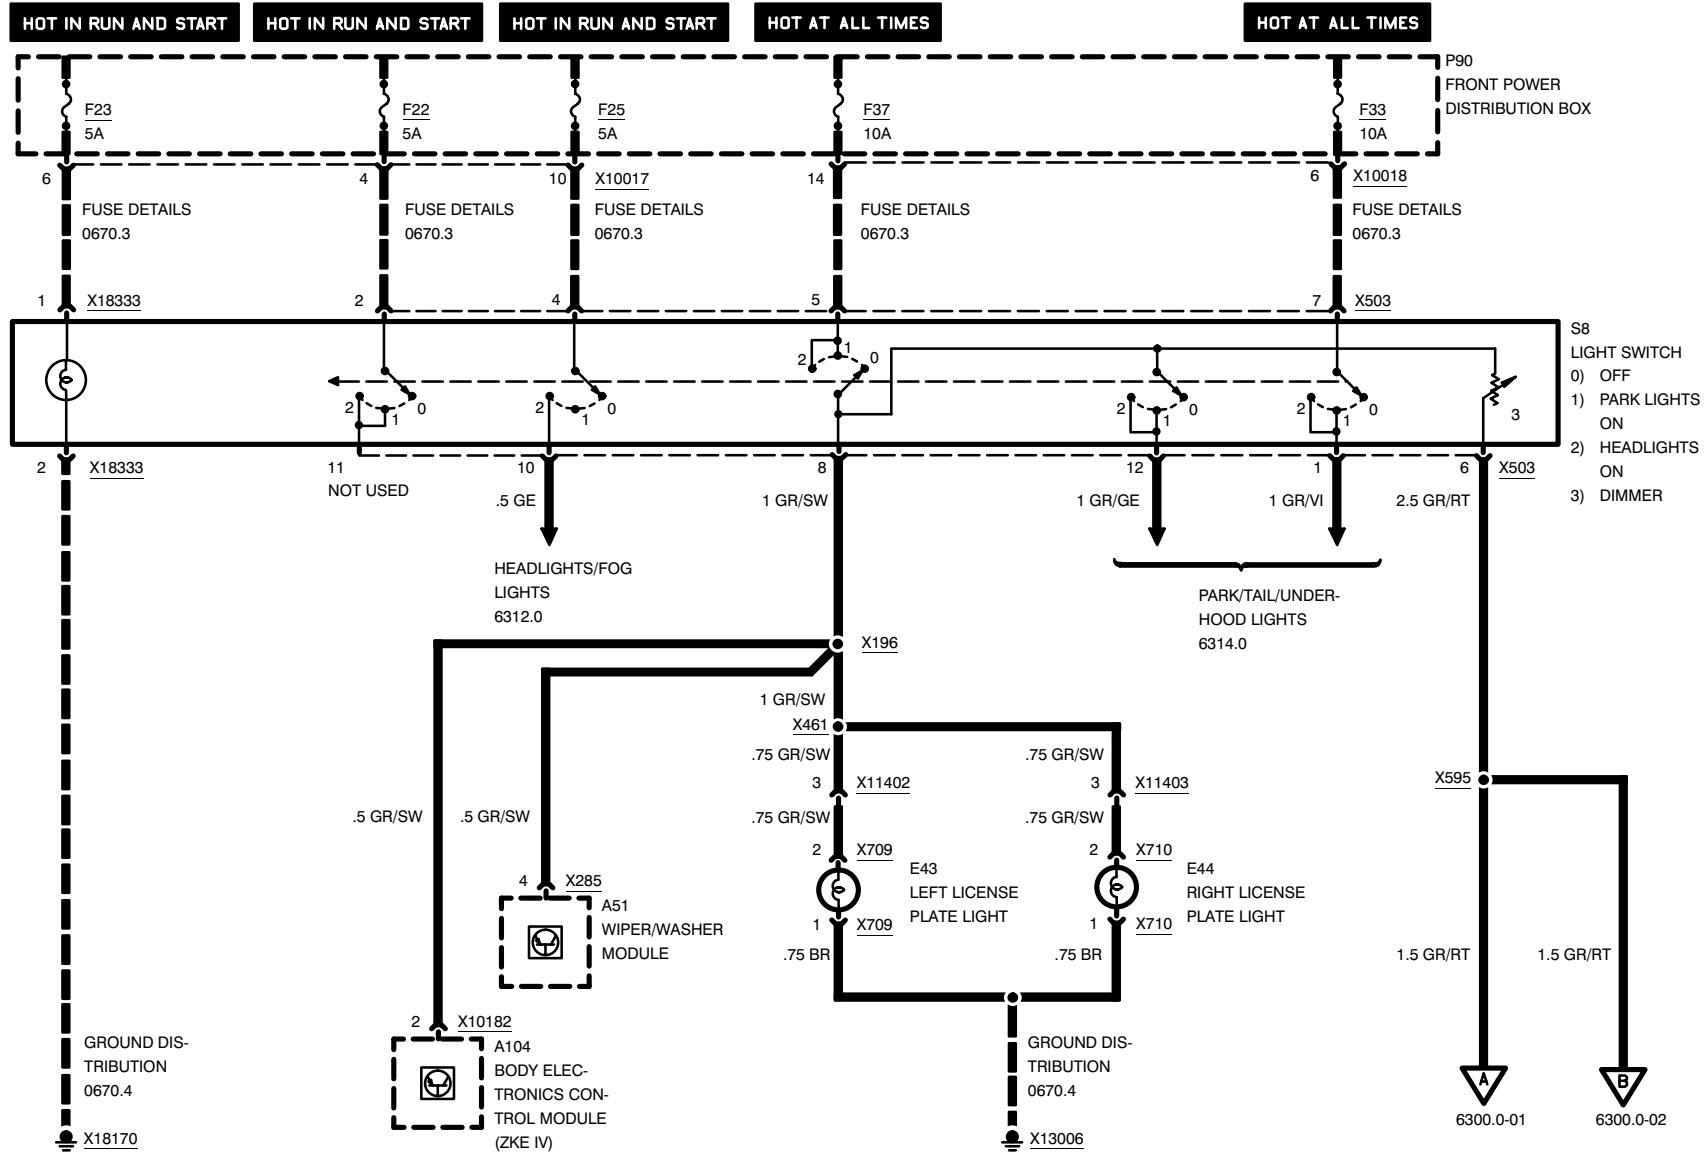

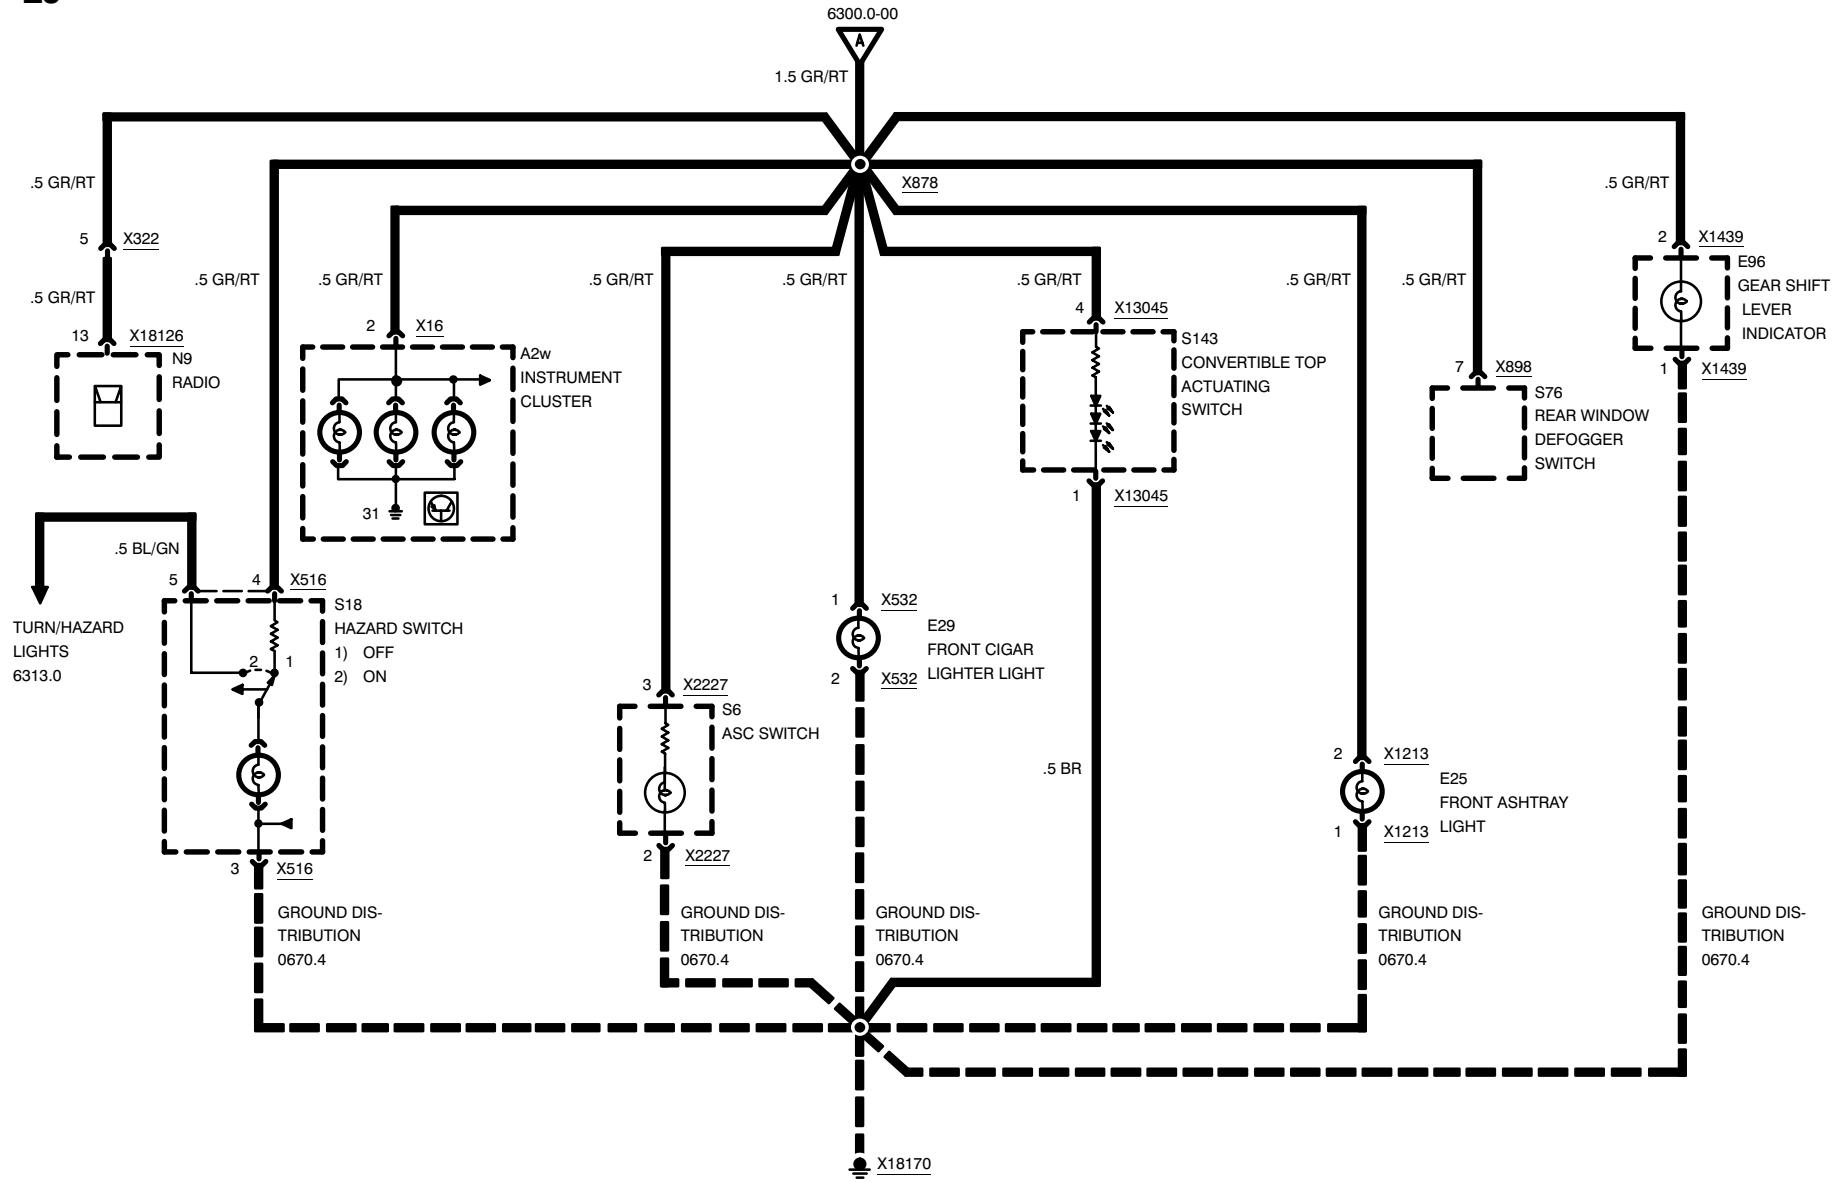


LIGHT SWITCH DETAILS


Z3

02/98



6300.0-02 | 1998

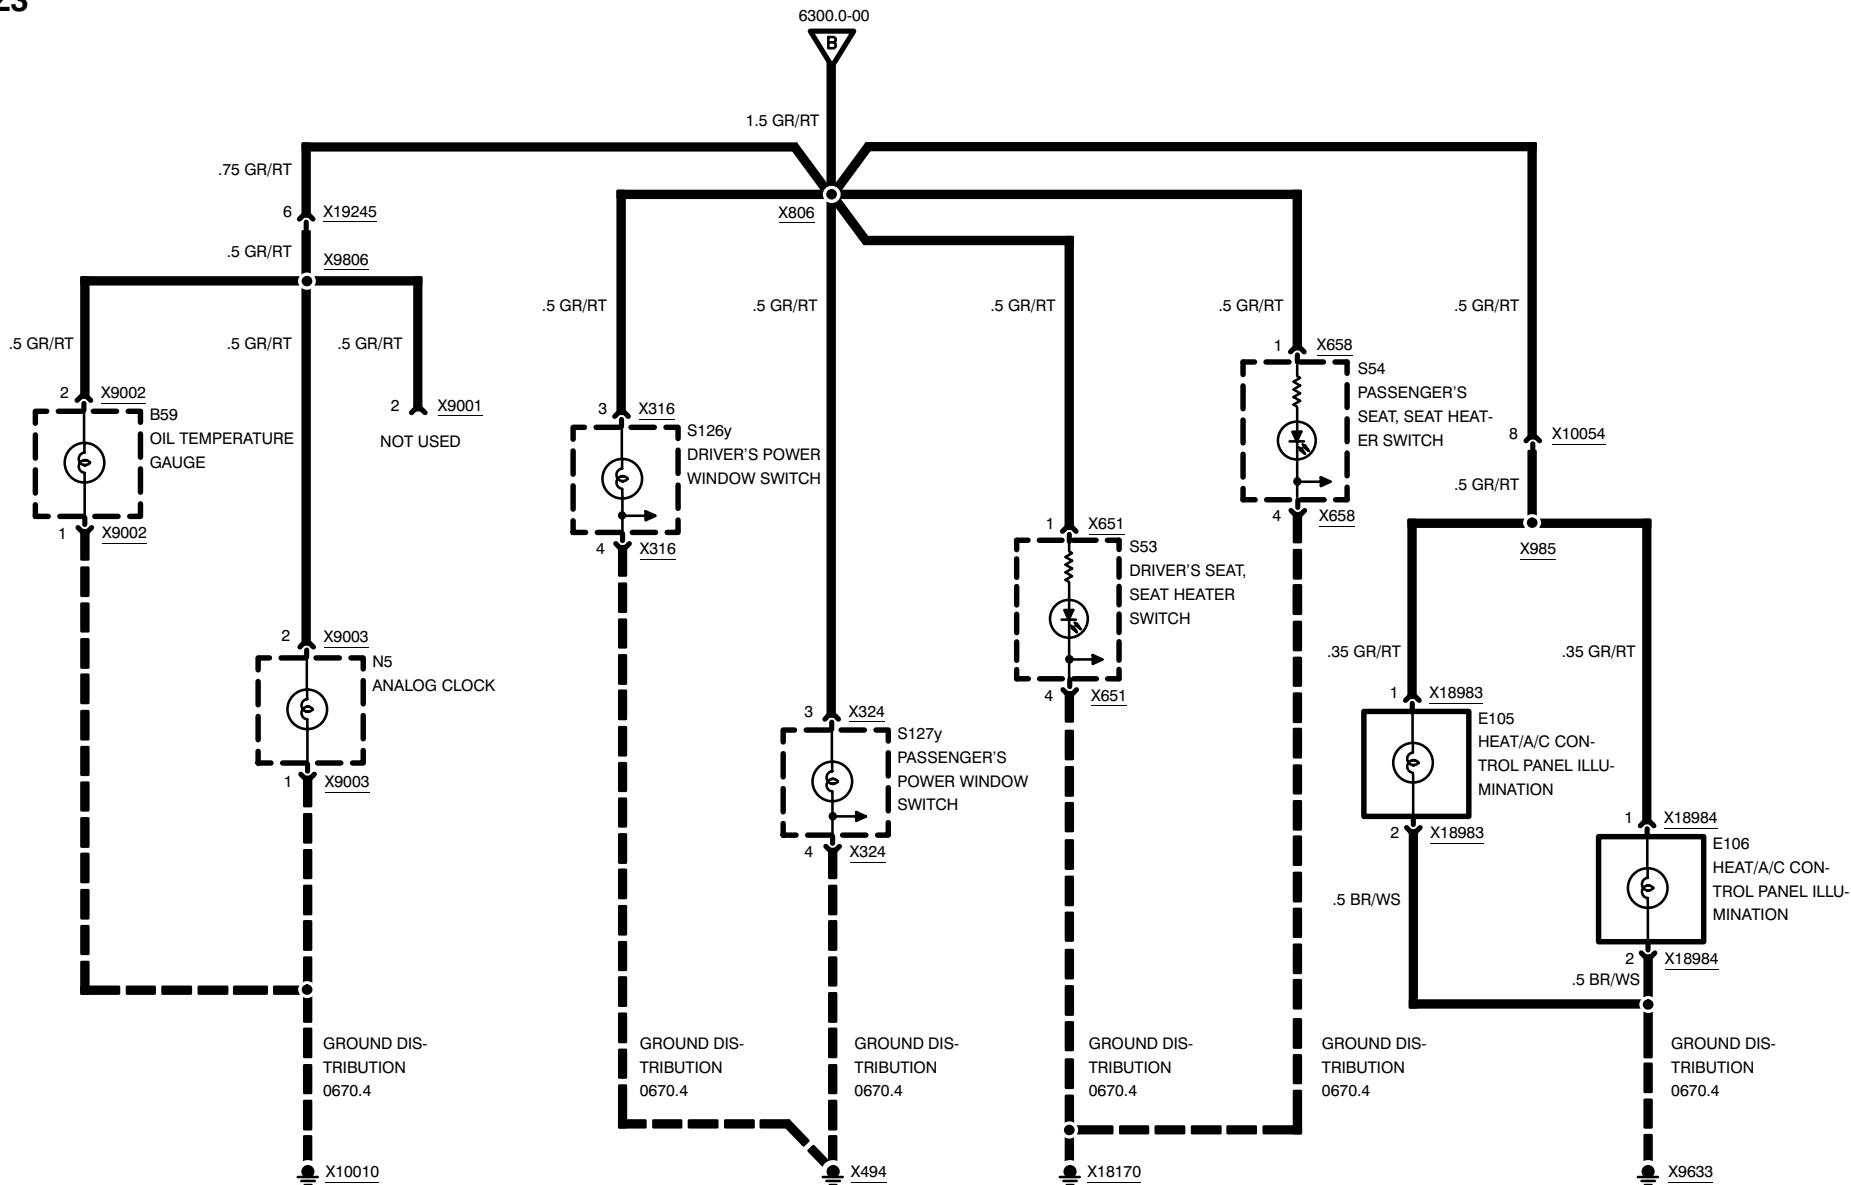


HEADLIGHTS/FOG LIGHTS

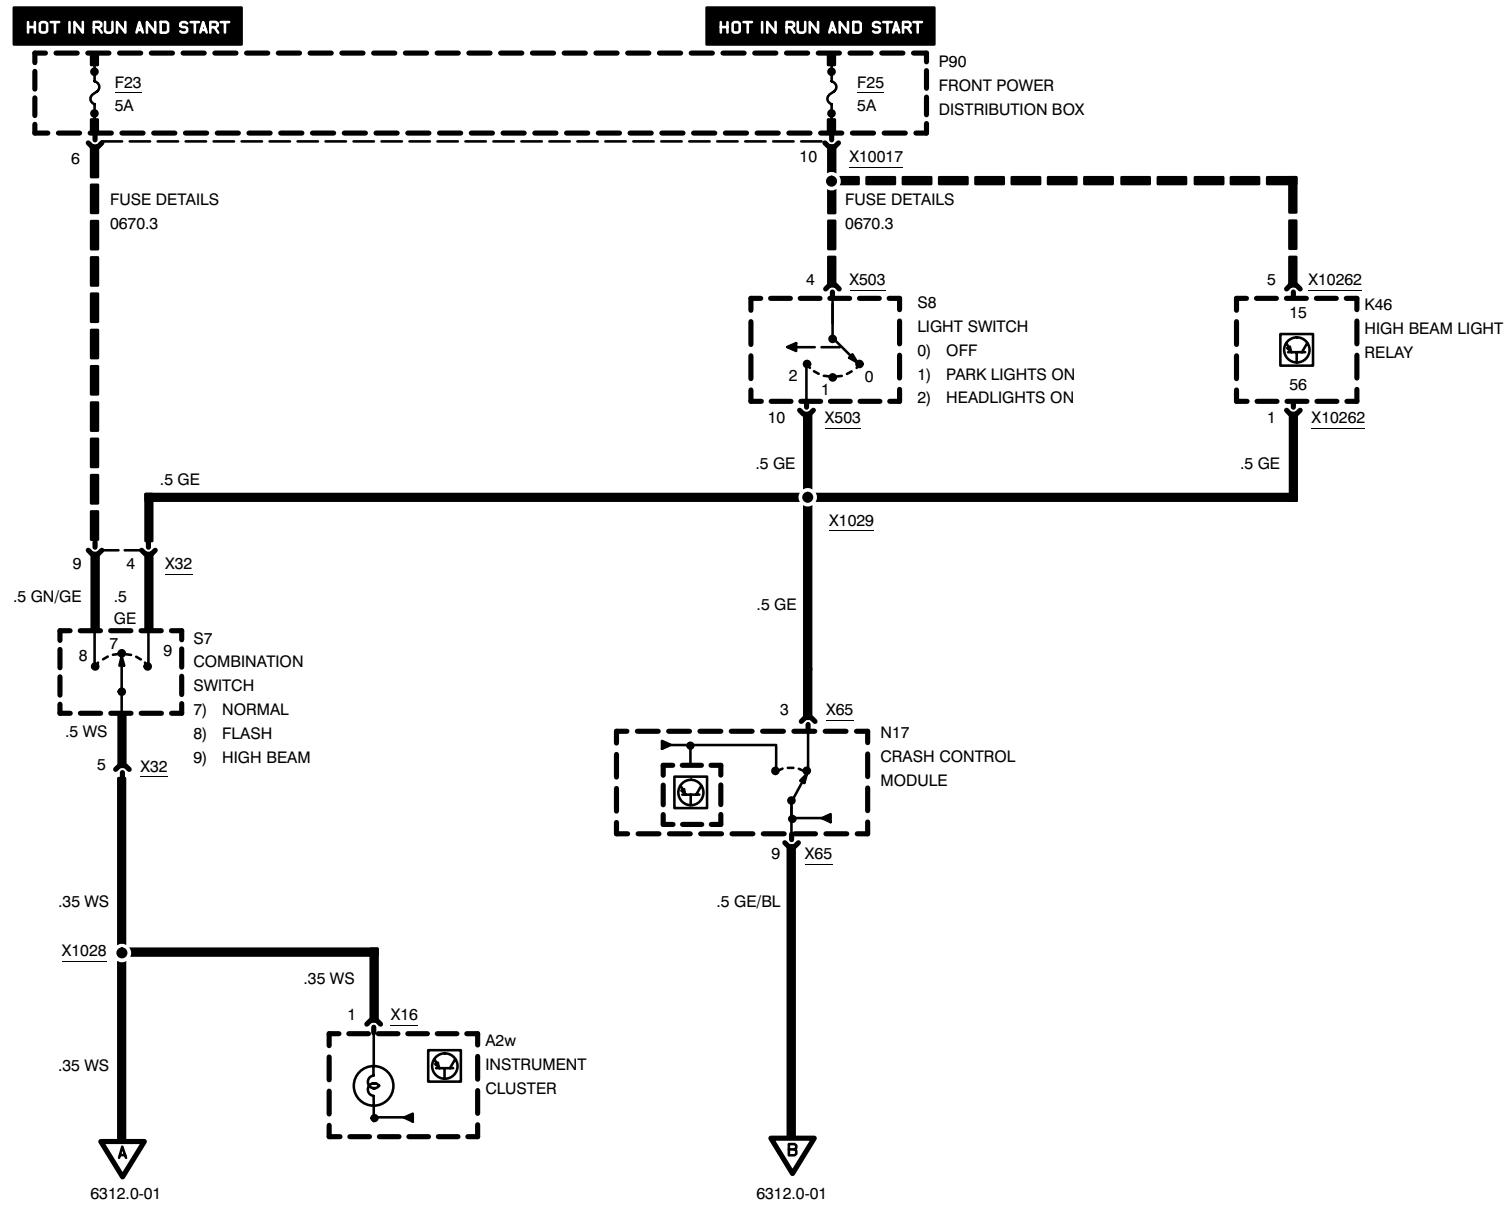


HEADLIGHTS/FOG LIGHTS

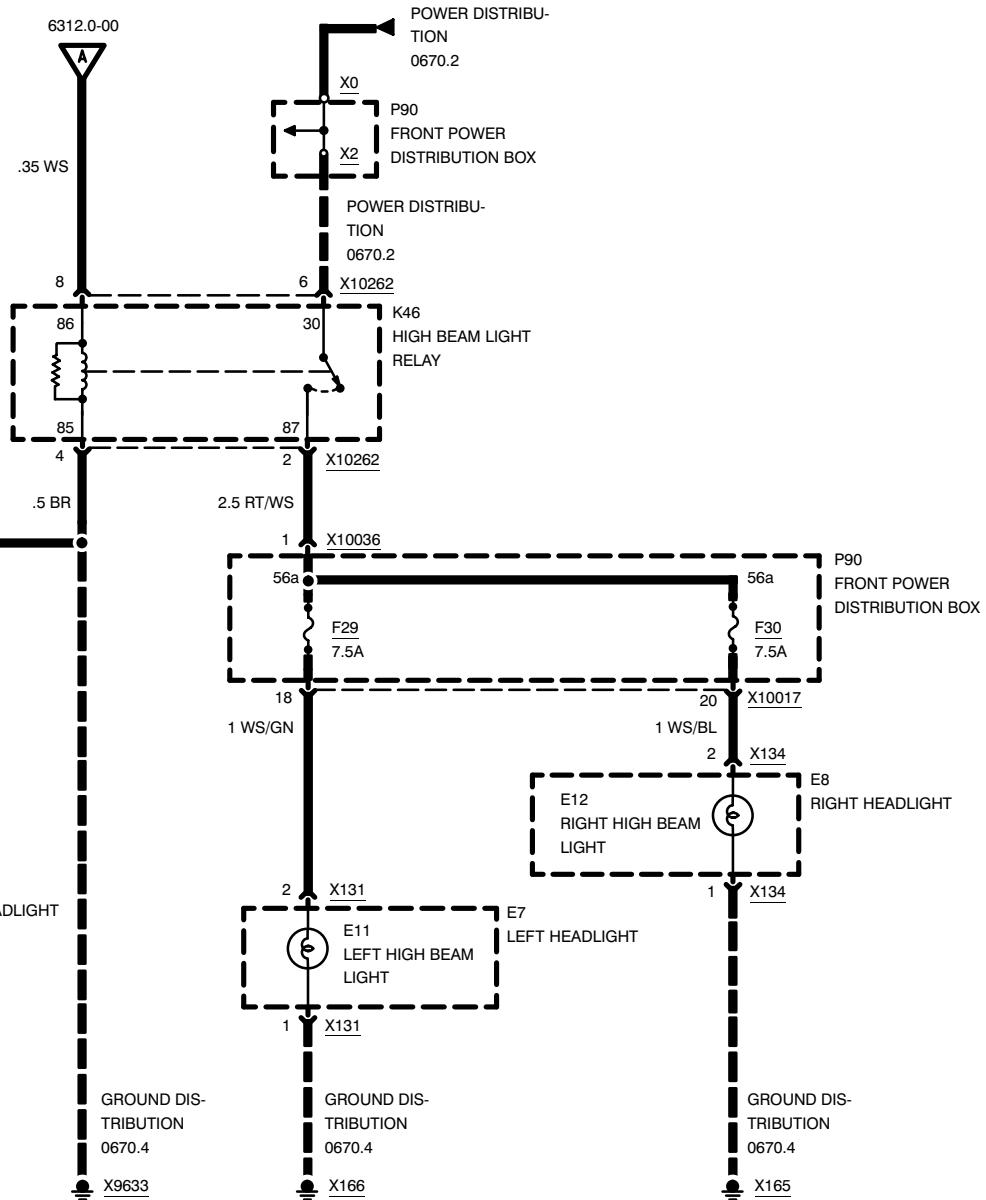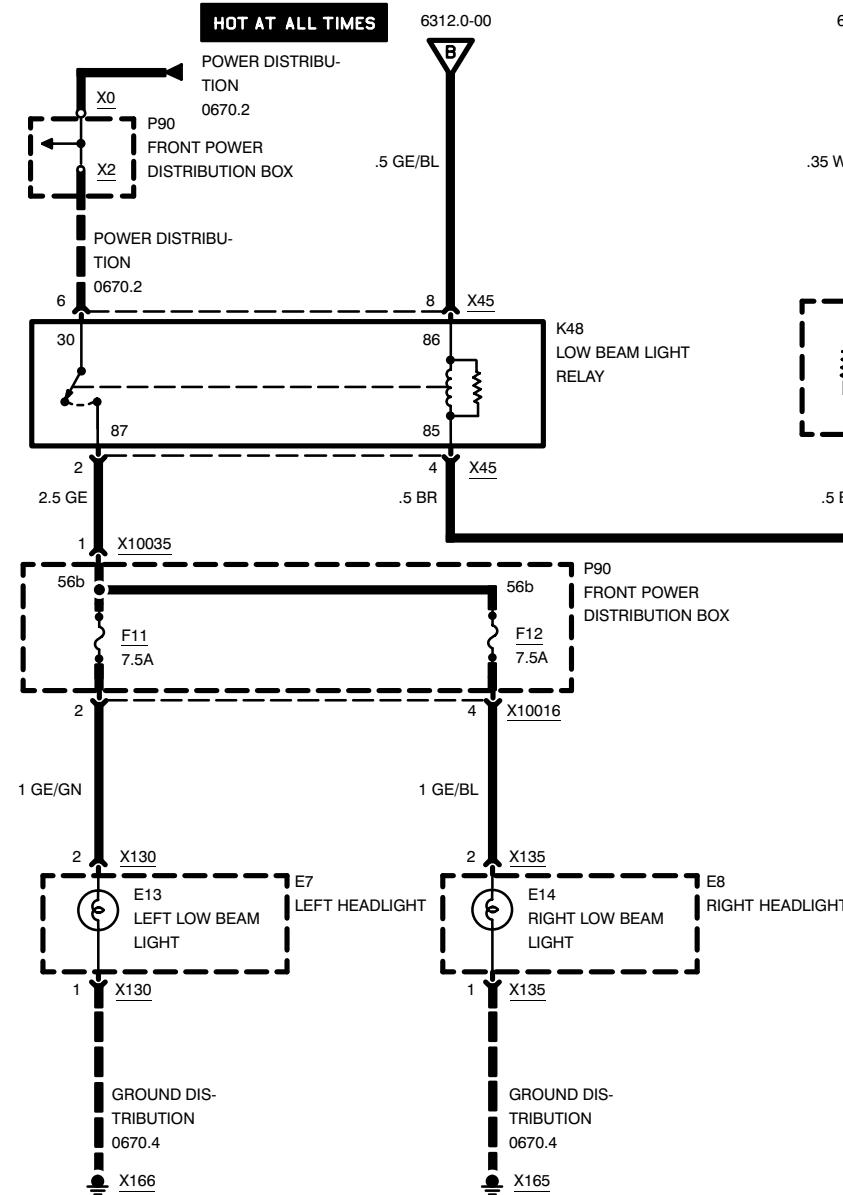


TURN/HAZARD LIGHTS

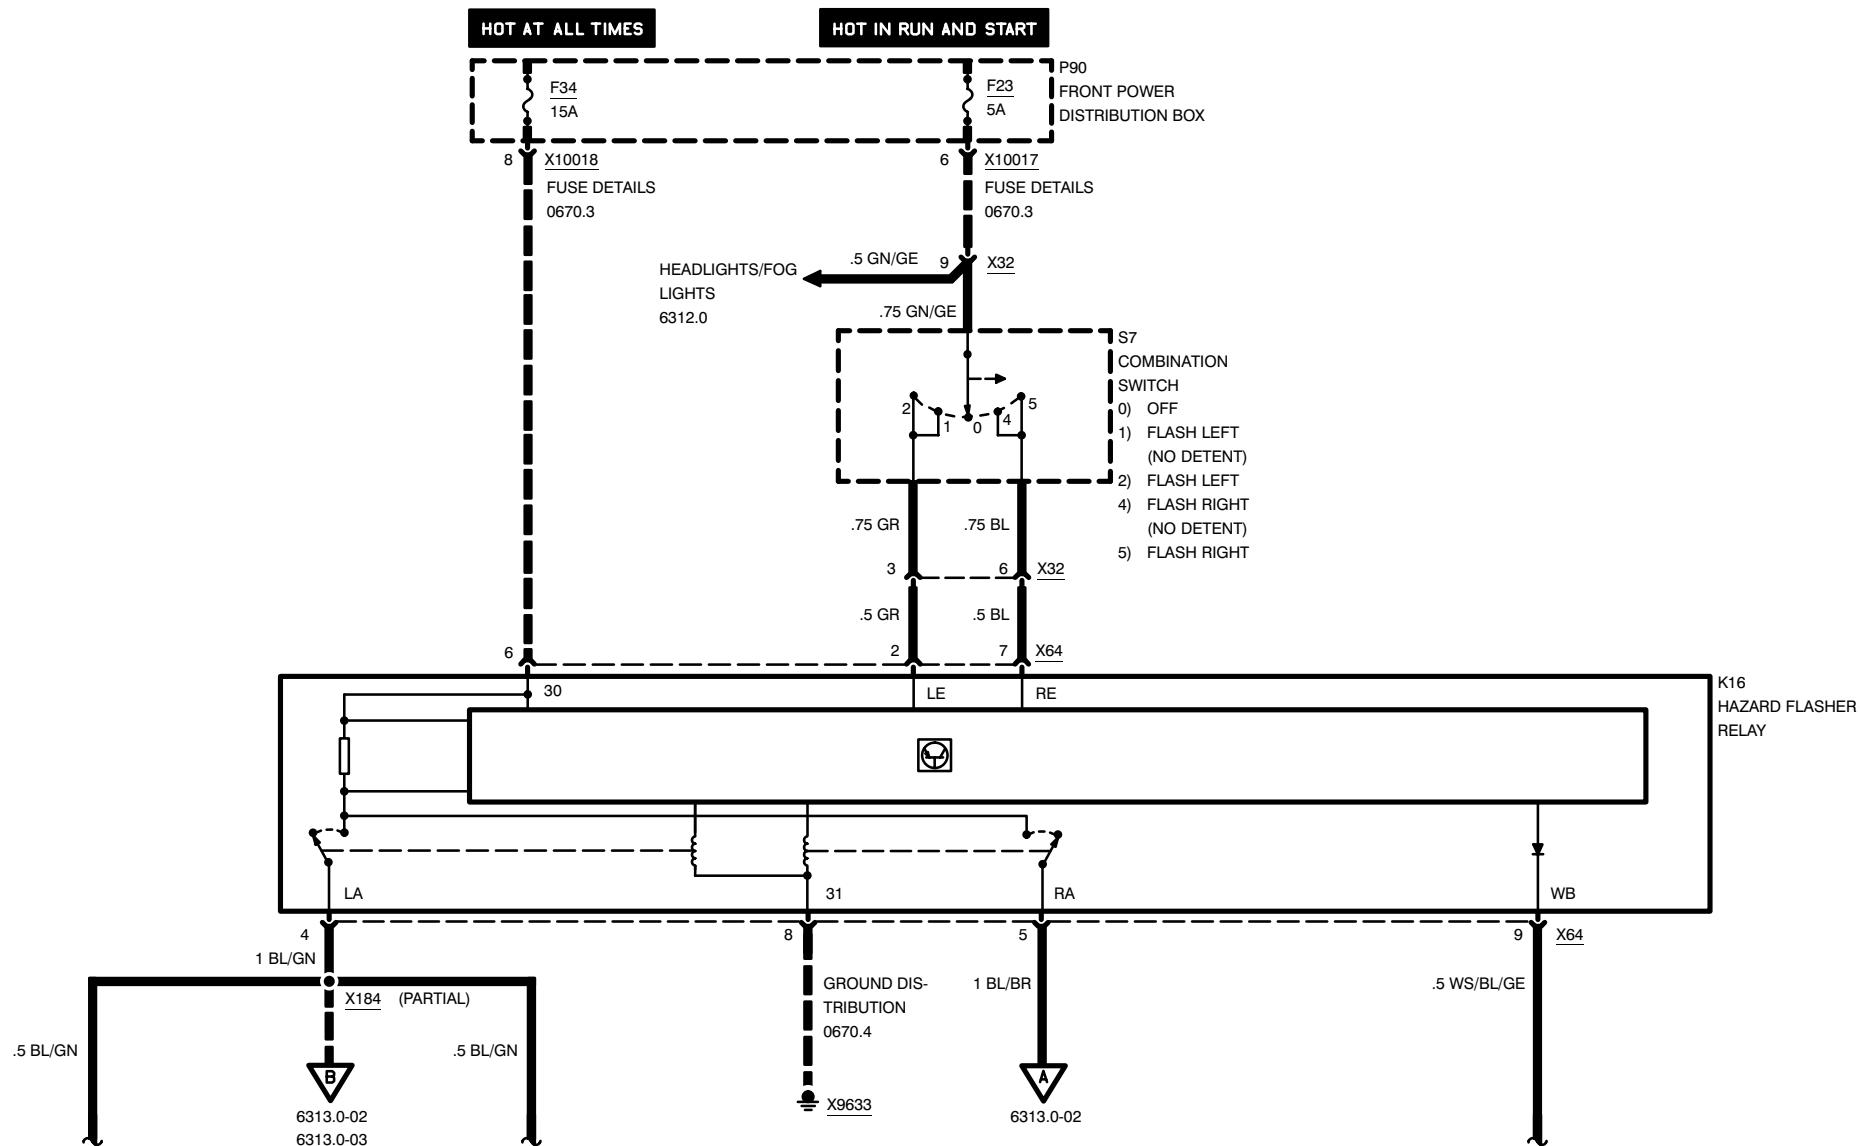

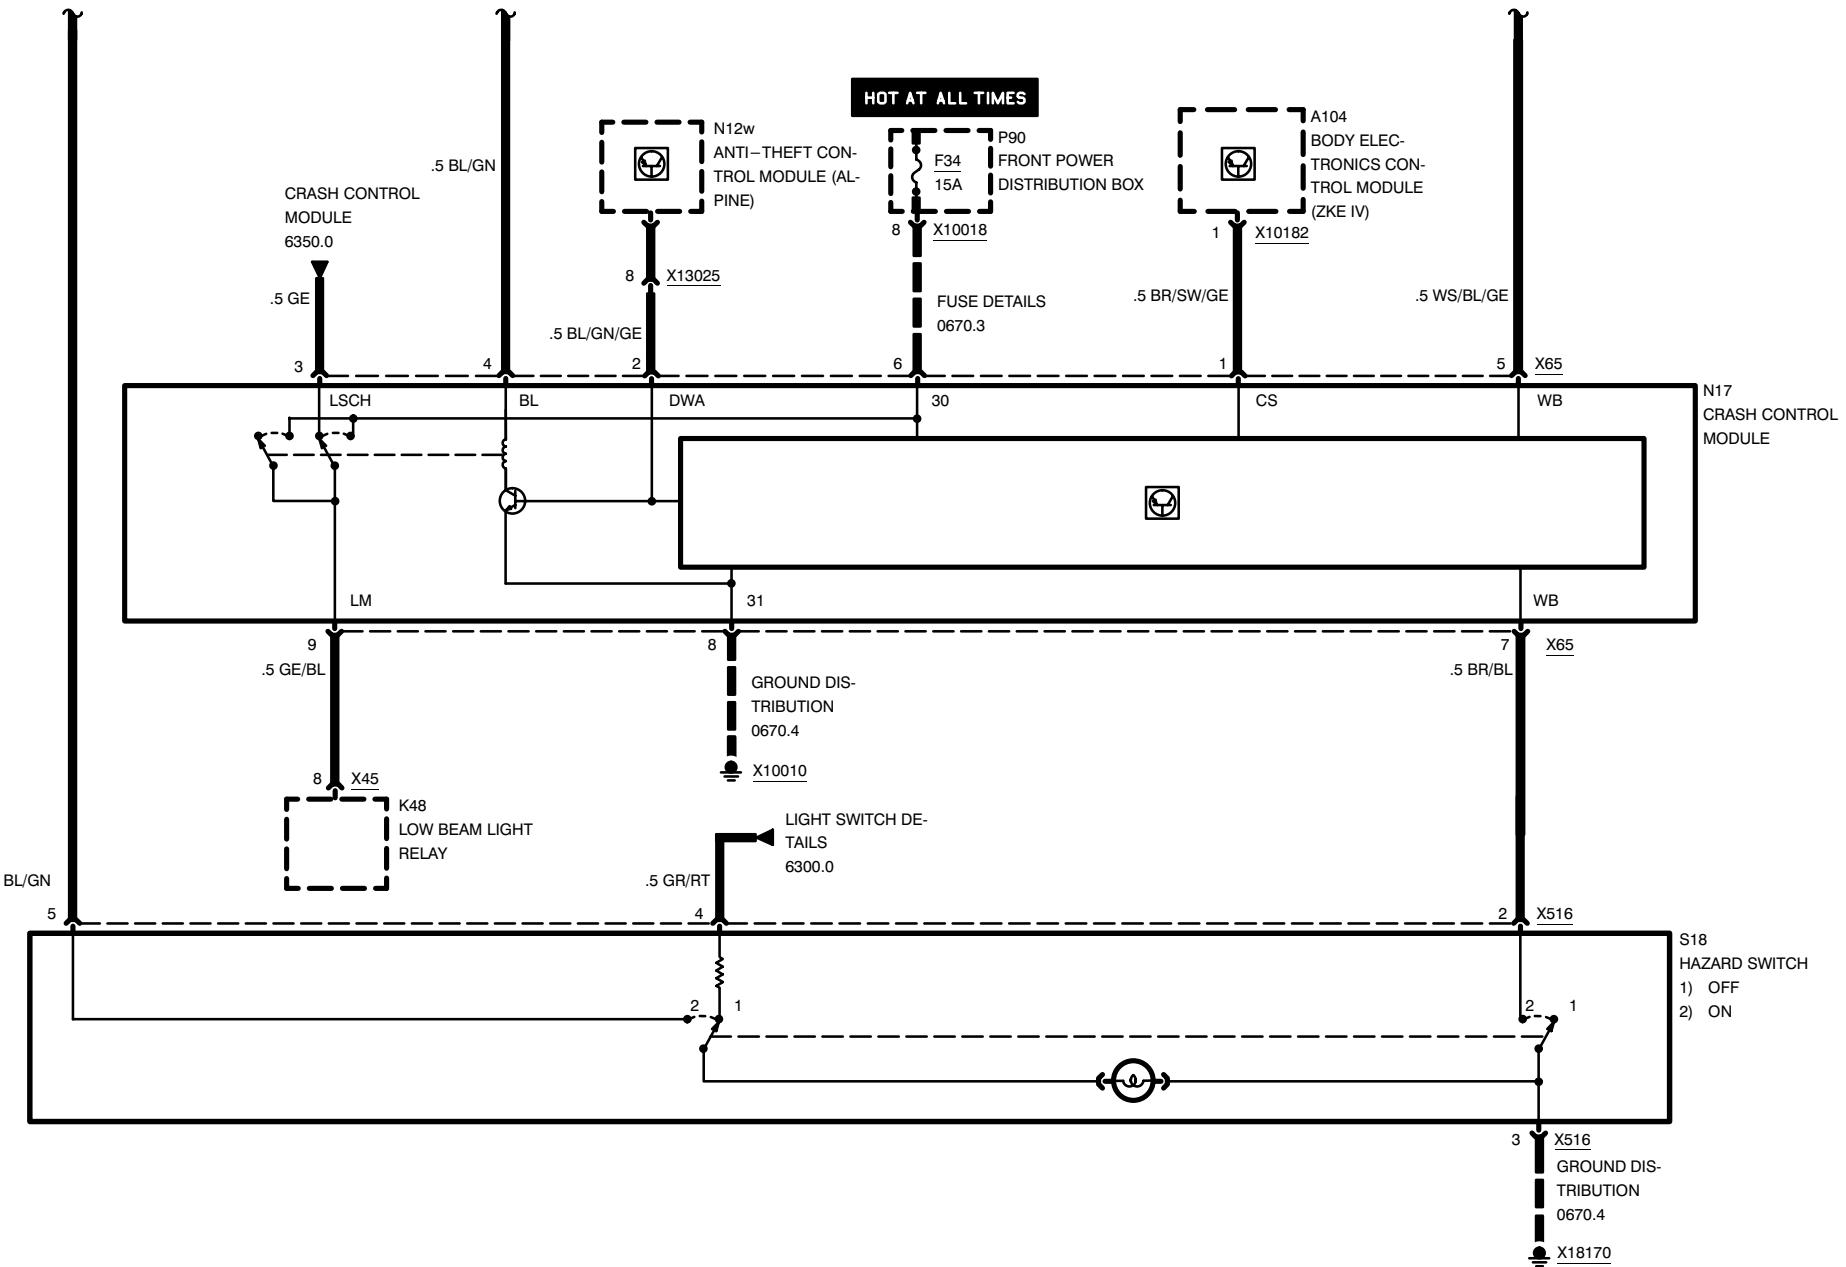

TURN/HAZARD LIGHTS

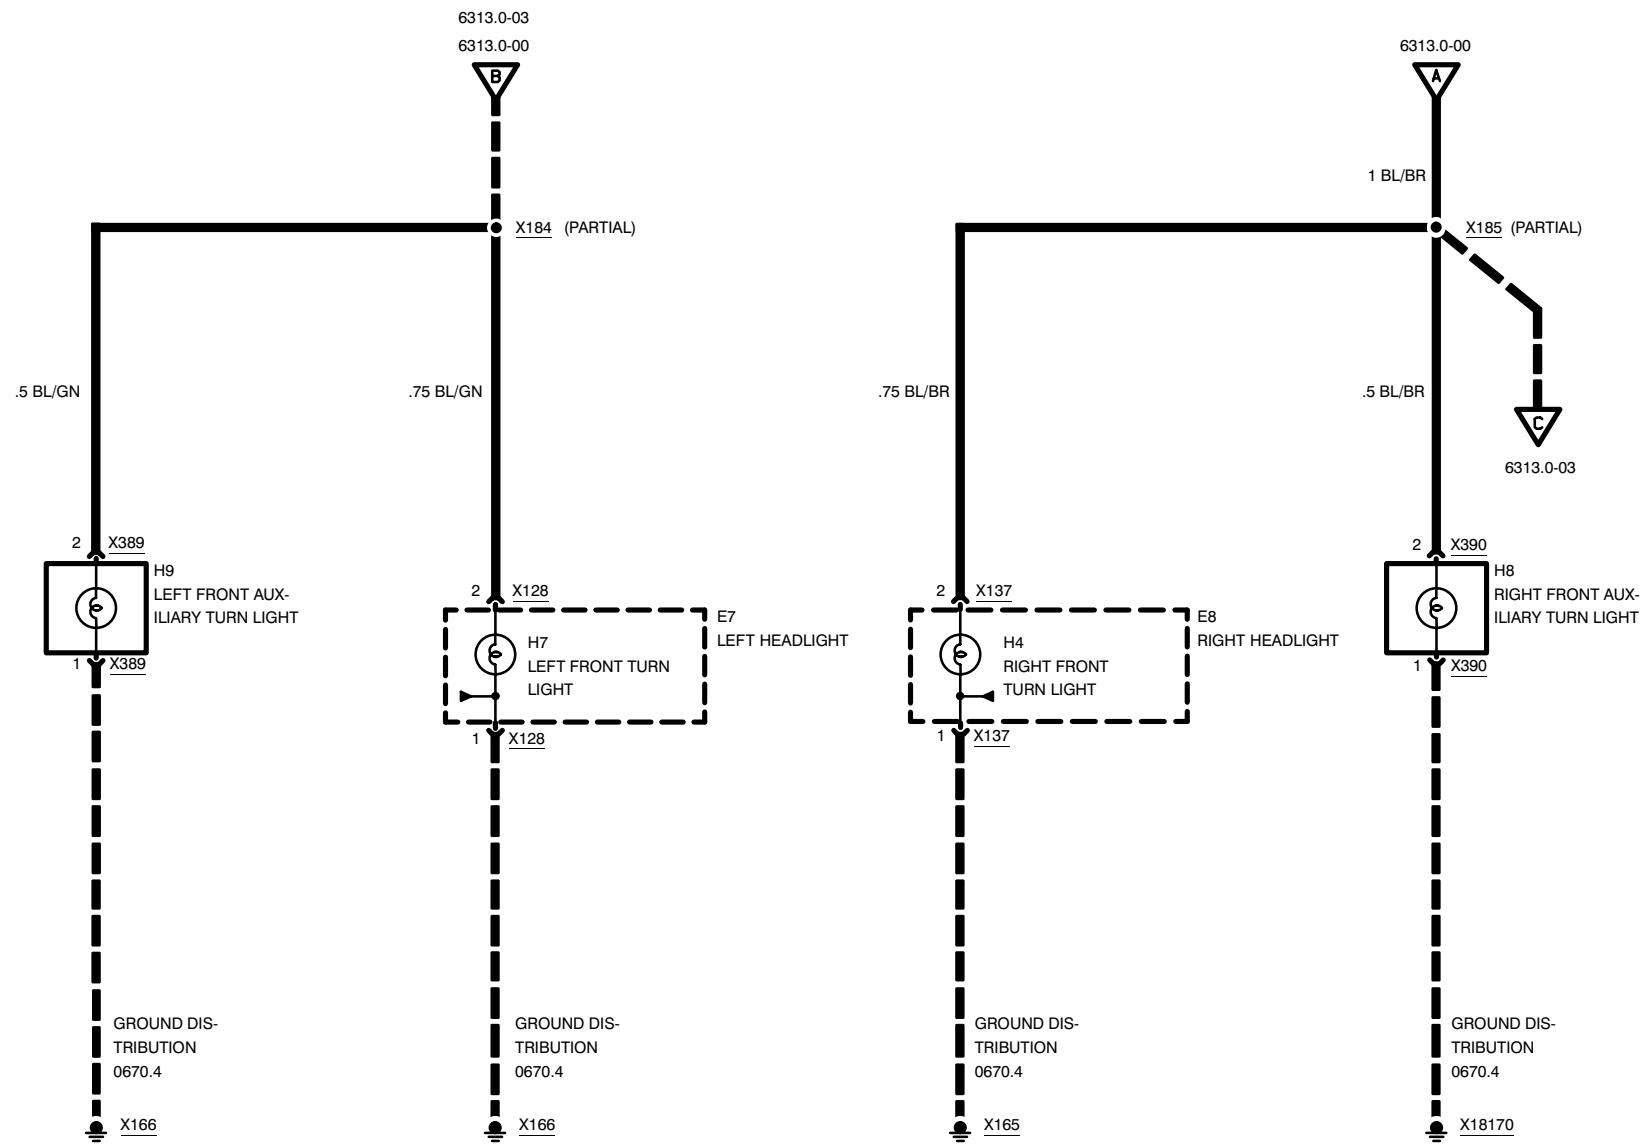


TURN/HAZARD LIGHTS

02/98

6313.0-03

1998

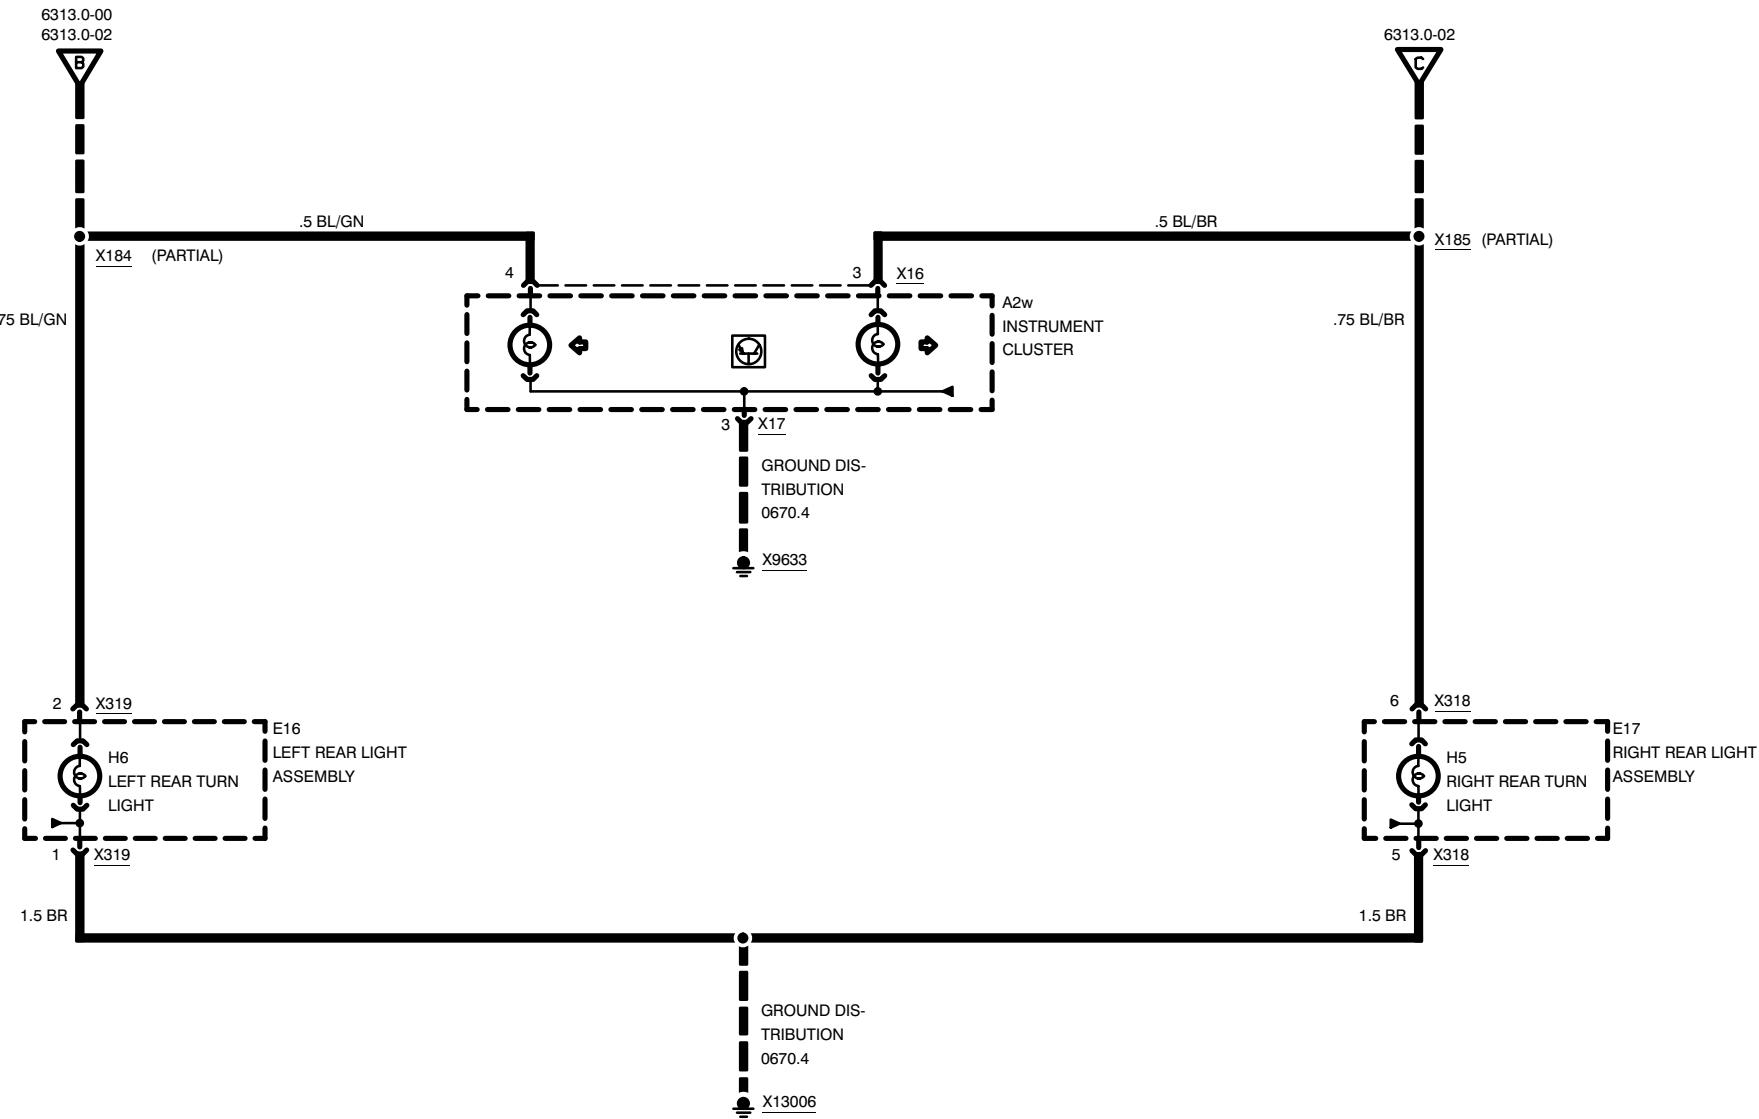


LICENSE PLATE/LUGGAGE COMPARTMENT LIGHTS

02/98

6320.0-00

1998

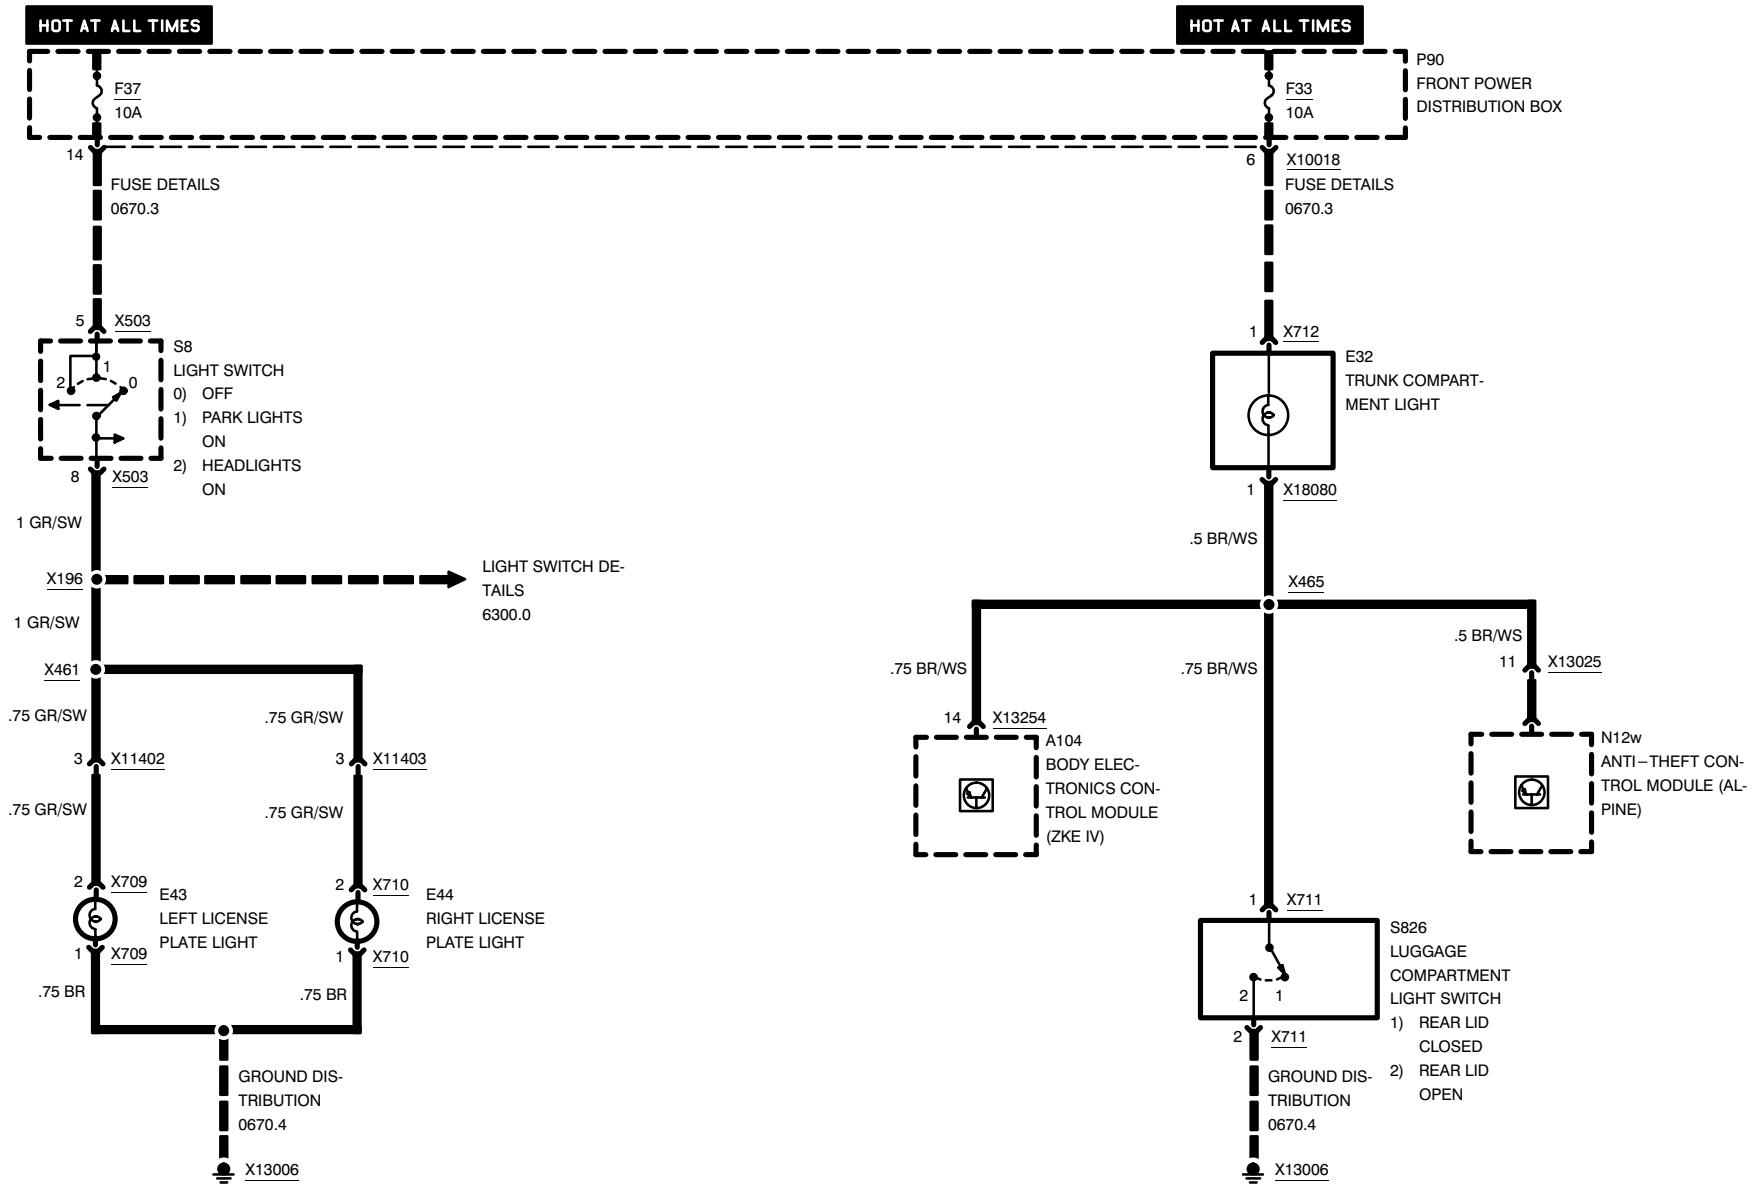


BRAKE LIGHTS

03/98


6325.0-00


1998

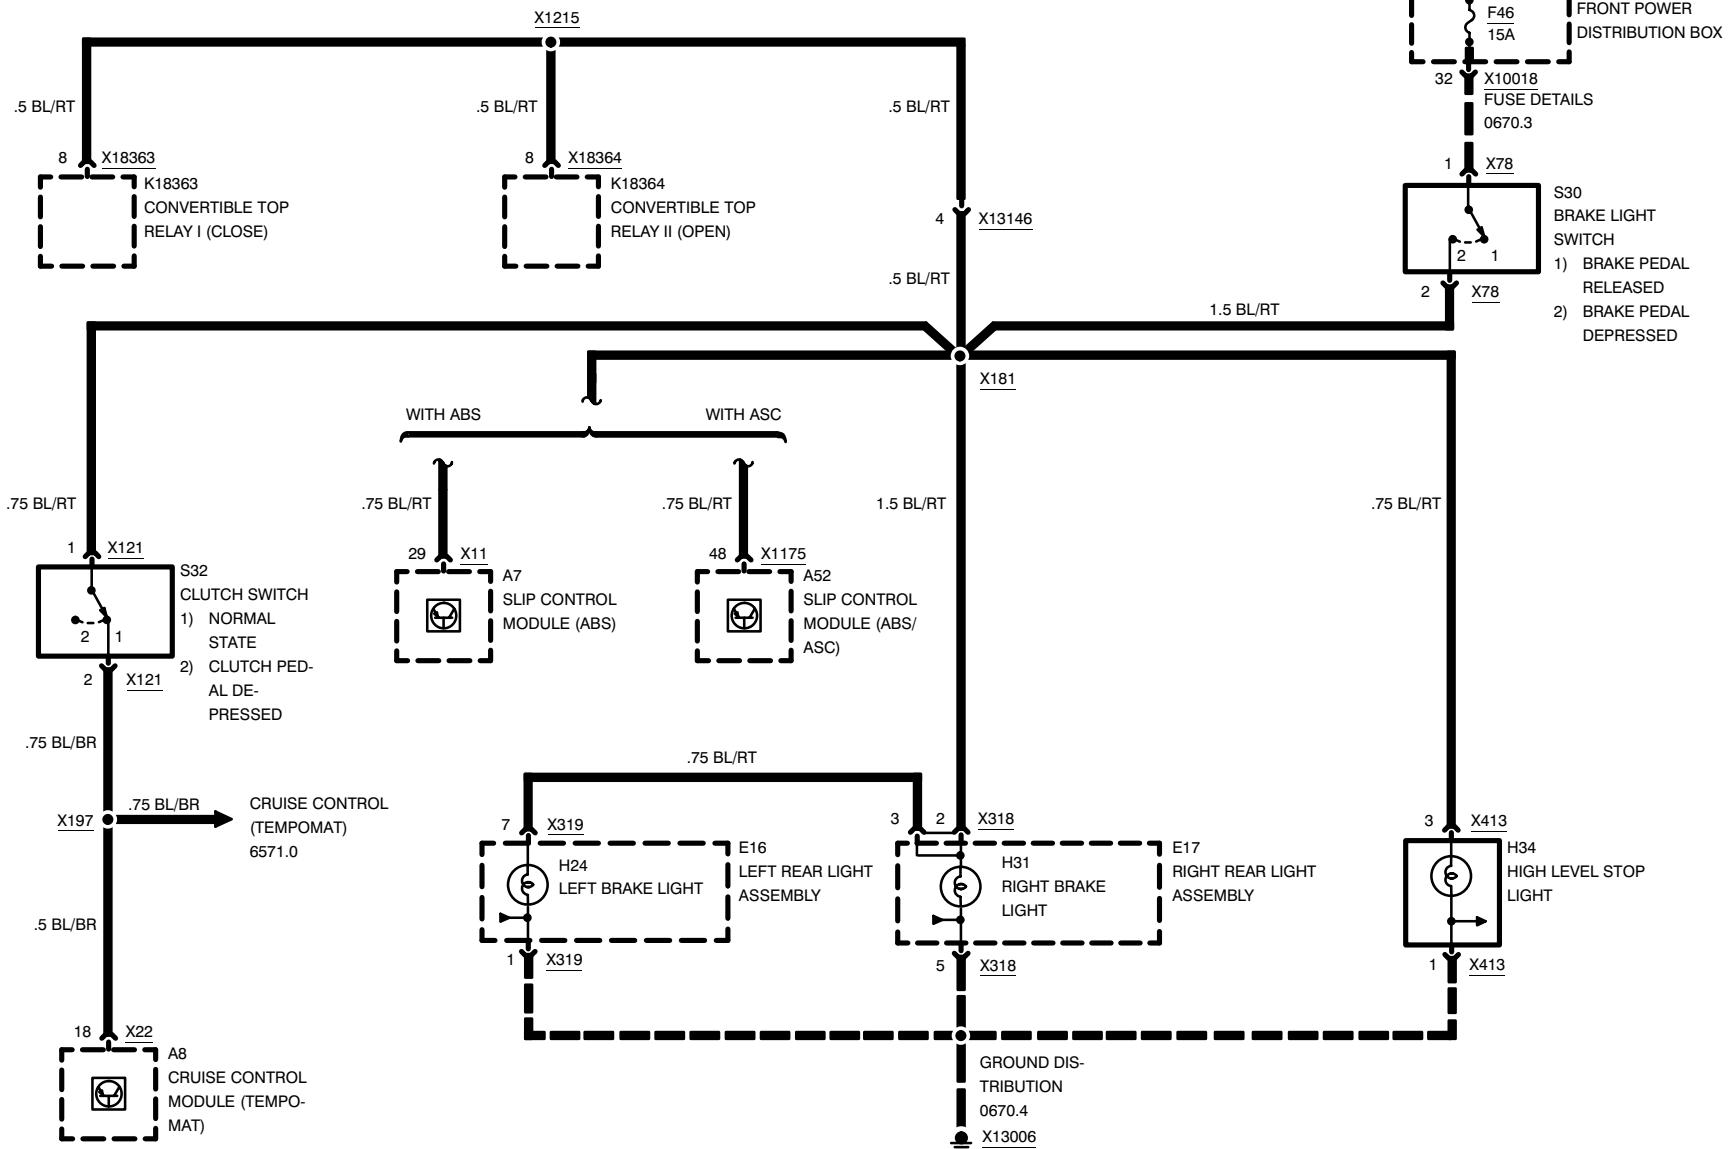

INTEGRATED HEATING – AND CLIMATE CONTROL

POWER, AIR FLOW CONTROL

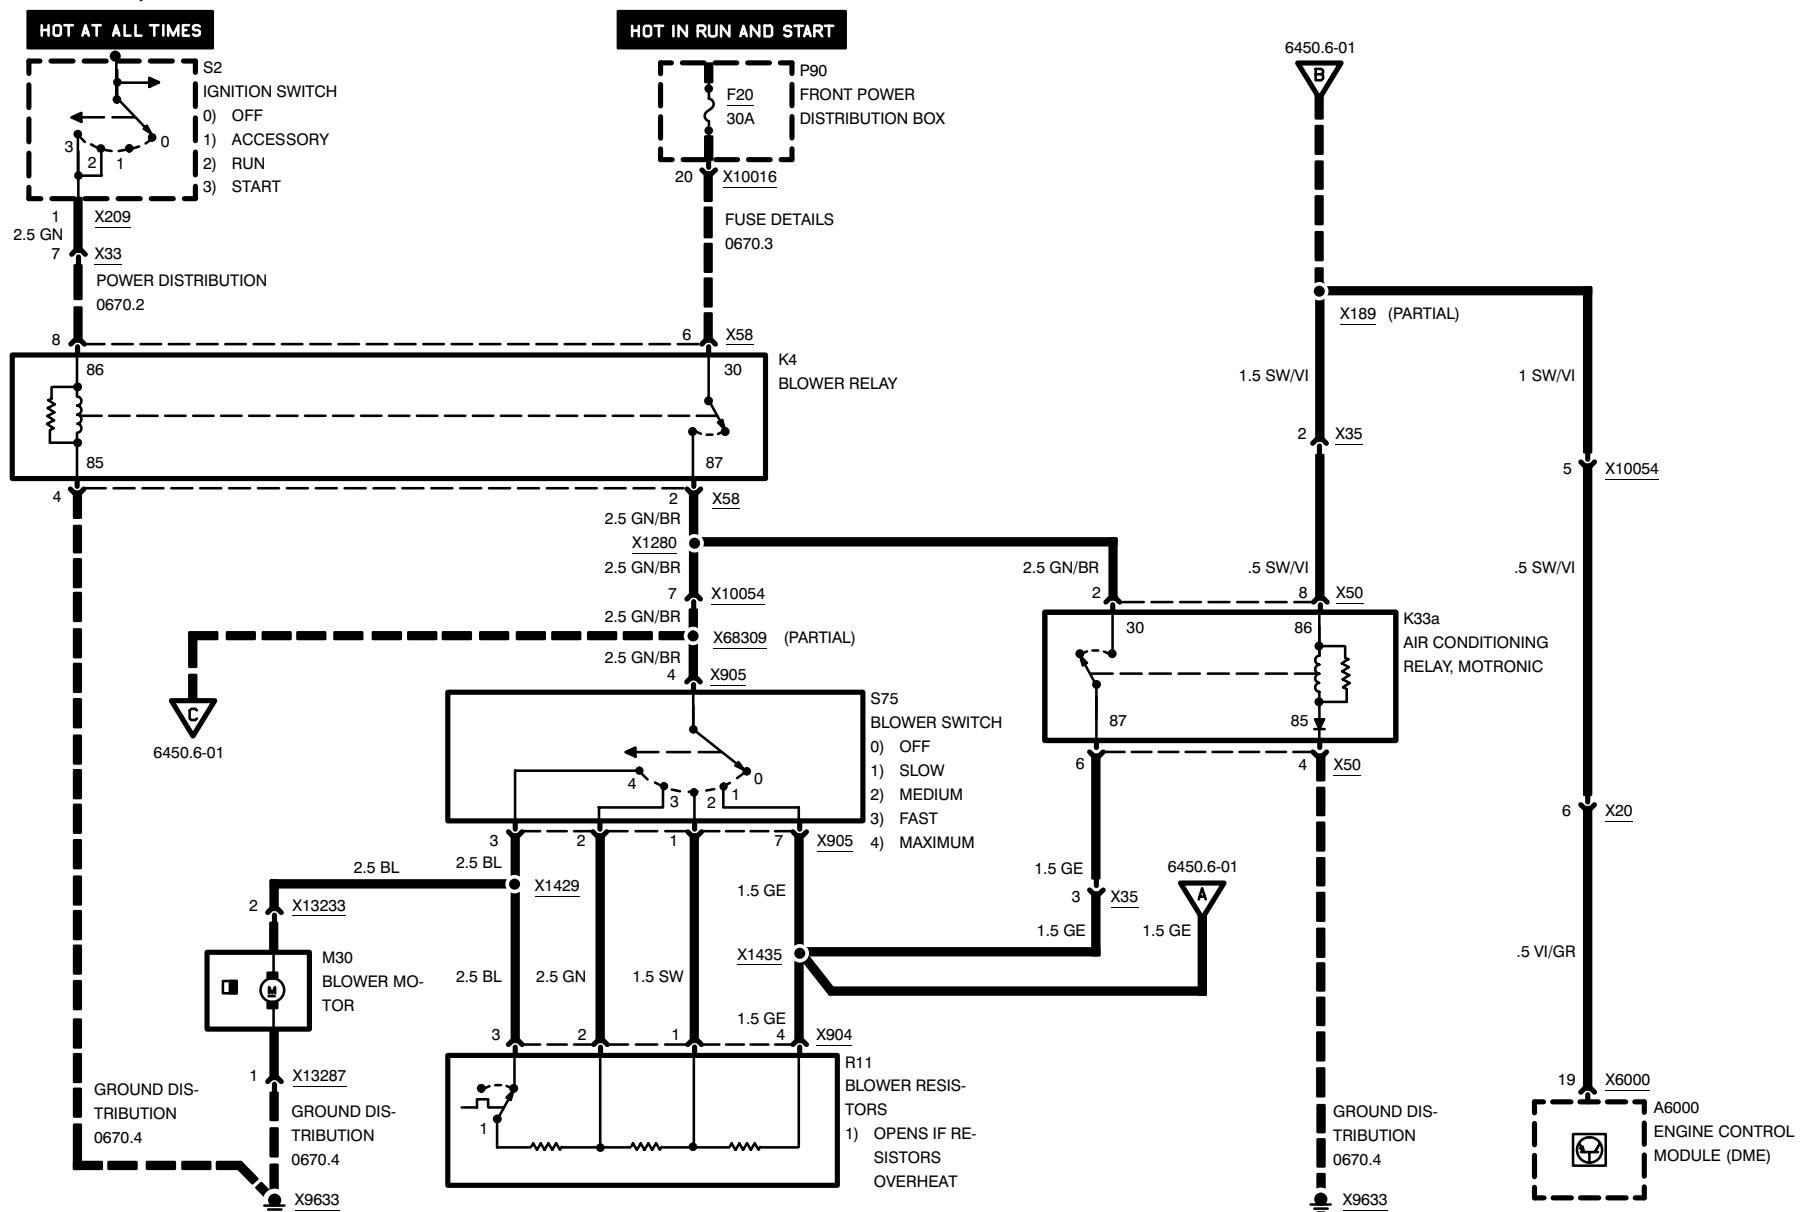

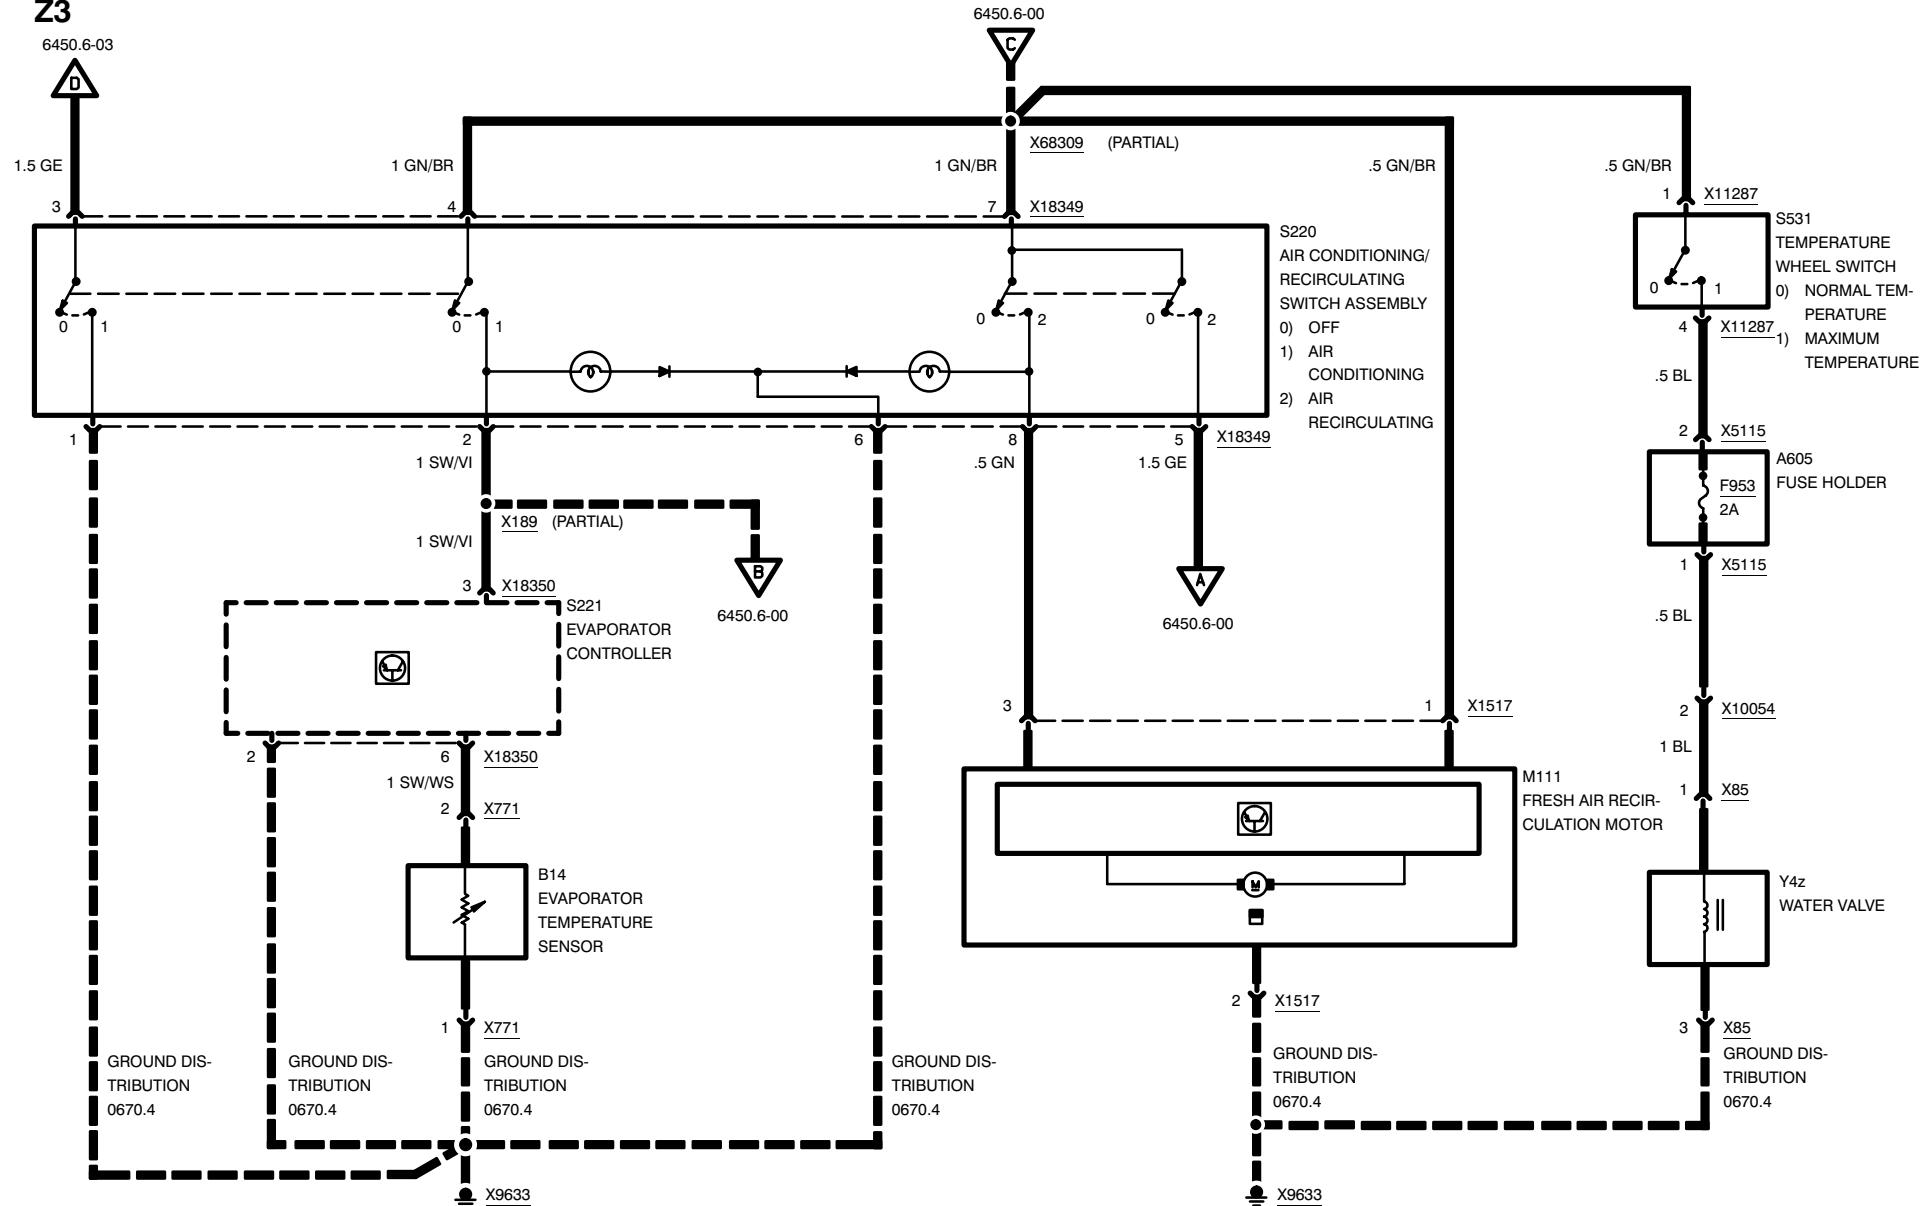


INTEGRATED HEATING – AND CLIMATE CONTROL

COMPRESSOR CONTROL AND WATER SUPPLY

02/98

6450.6-02


1998

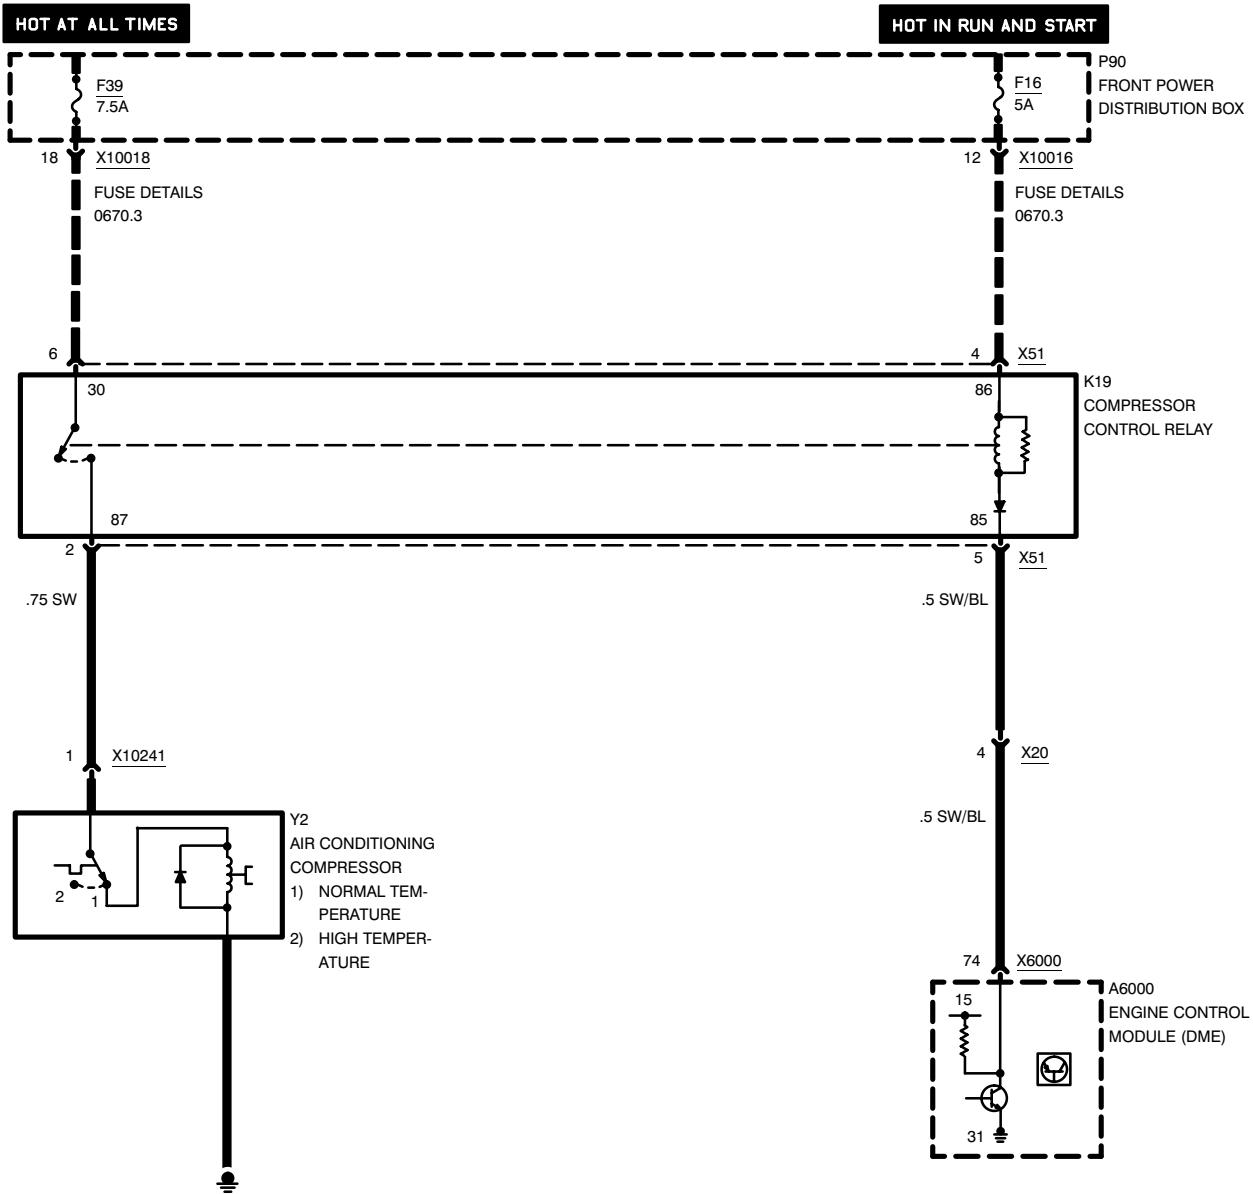

INTEGRATED HEATING – AND CLIMATE CONTROL

AUXILIARY FAN

Z3

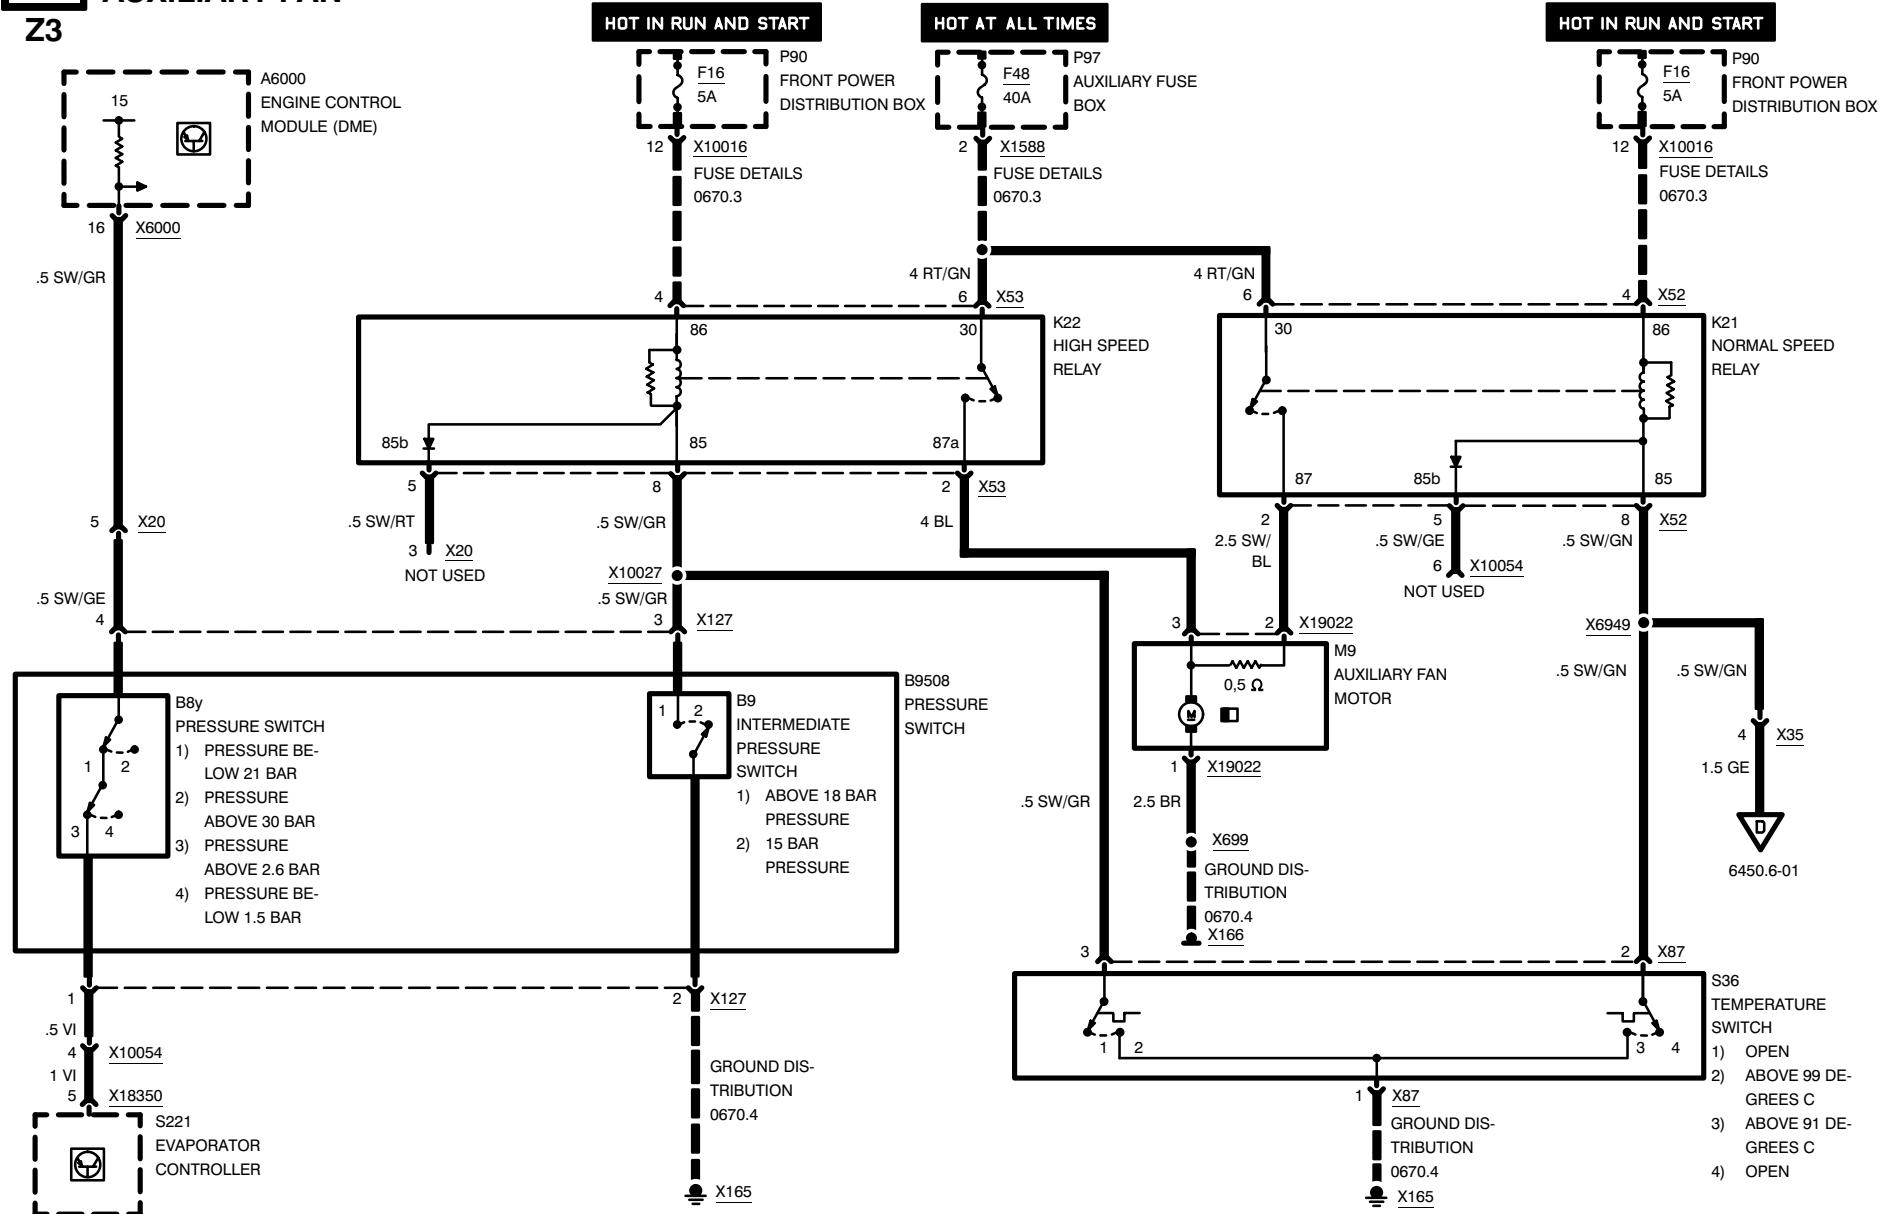



COMPONENT LOCATION CHART

03/98

7000.0-0

| COMP. | DESCRIPTION | LOCATION | 7100.0 | 8500.0 |
|---------|--|--|--------|--------|
| A7 | SLIP CONTROL MODULE (ABS) | behind glove box | | |
| A52 ... | SLIP CONTROL MODULE (ABS/ASC) | behind glove box | | |
| B59 .. | OIL TEMPERATURE GAUGE | center console | | |
| B6238 | OIL TEMPERATURE SENSOR | RH side of oil filter | | |
| B62101 | OXYGEN SENSOR I (IN FRONT OF CATALYTIC CONVERTER) | on catalytic converter | | |
| B62102 | OXYGEN SENSOR I (BEHIND CATALYTIC CONVERTER) | on catalytic converter | | |
| B62201 | OXYGEN SENSOR II (IN FRONT OF CATALYTIC CONVERTER) | on catalytic converter | | |
| B62202 | OXYGEN SENSOR II (BEHIND CATALYTIC CONVERTER) | on catalytic converter | | |
| E28a . | CIGAR LIGHTER CONNECTION | TYRE INFLATION SYSTEM | | |
| E96 ... | GEAR SHIFT LEVER INDICATOR | center console | | |
| K33a . | AIR CONDITIONING RELAY, MOTRONIC ... | Power Distribution Box, rear LH side of engine compartment | | |
| K94 ... | ENGINE CONTROL RELAY (ABS/ASC) | Power Distribution Box, rear LH side of engine compartment | | |
| K95 ... | VALVE RELAY (ABS/ASC) | Power Distribution Box, rear LH side of engine compartment | | |
| K6394 | COMPRESSOR RELAY | TYRE INFLATION SYSTEM | | |
| M805 . | ELECTRICAL COMPRESSOR | TYRE INFLATION SYSTEM | | |
| M6506 | E-BOX FAN | in E-Box | | |
| N5 ... | ANALOG CLOCK | center console | | |
| P95 ... | AUXILIARY FUSE BOX | below LH side of dash | | |
| S232 . | COMPRESSOR MAIN SWITCH | TYRE INFLATION SYSTEM | | |

1998



COMPONENT LOCATION CHART

COMP. DESCRIPTION

LOCATION

7100.0 8500.0

| | | |
|---------------------------------|--|------|
| X4 GROUND | LH side of engine compartment | |
| X11 ... (42 PINS, BLACK) | behind glove box | 00-2 |
| X31 ... (12 PINS, BLACK) | LH side of engine compartment | 00-3 |
| X35 ... (4 PINS, BLACK) | RH side of LH footwell | 00-4 |
| X50 ... (9 PINS, BLACK) | Power Distribution Box, rear LH side of engine compartment | 00-1 |
| X693 . (1 PIN, NATURAL) | TYRE INFLATION SYSTEM | |
| X1155 (2 PINS, BLACK) | center console | |
| X1175 (83 PINS, NATURAL) | behind glove box | 02-1 |
| X1255 (4 PINS, BLACK) | TYRE INFLATION SYSTEM | 00-4 |
| X1439 (2 PINS, BLACK) | center console | |
| X2213 (15 PINS, NATURAL) | LH side of engine compartment | 02-2 |
| X2227 (4 PINS, BLUE) | center console | 02-3 |
| X3040 (2 PINS, BLACK) | TYRE INFLATION SYSTEM | |
| X3158 (1 PIN, NATURAL) | TYRE INFLATION SYSTEM | |
| X6238 (2 PINS, BLACK) | RH side of oil filter | |
| X6394 (9 PINS, BLACK) | TYRE INFLATION SYSTEM | 00-1 |
| X6506 (2 PINS, BLACK) | in E-Box | |
| X9001 (2 PINS, BLACK) | center console | |
| X9002 (2 PINS, BLACK) | center console | |
| X9003 (2 PINS, BLACK) | center console | |
| X9170 CABLE SOCKET GROUND | LH side of engine compartment | |
| X9770 (4 PINS, NATURAL) | center console | 01-1 |



COMPONENT LOCATION CHART

03/98

COMP. DESCRIPTION

LOCATION

7100.0 8500.0

| | | | |
|--------|-------------------------------|--|------|
| X10059 | (3 PINS, BLACK) | center console | 00-5 |
| X10241 | (3 PINS, BLACK) | front RH side of engine compartment | 01-2 |
| X11402 | (3 PINS, YELLOW) | in luggage compartment lid | 01-3 |
| X11403 | (3 PINS, YELLOW) | in luggage compartment lid | 01-3 |
| X18766 | (9 PINS, BLACK) | Power Distribution Box, rear LH side of engine compartment | 01-1 |
| X18767 | (9 PINS, BLACK) | Power Distribution Box, rear LH side of engine compartment | 01-1 |
| X19022 | (3 PINS, BLACK) | behind front grille | 01-2 |
| X19023 | (2 PINS, BLACK) | below LH side of dash | |
| X19245 | (8 PINS, BLACK) | center console | 01-4 |
| X62101 | (4 PINS, BLACK) | on catalytic converter | 01-5 |
| X62102 | (4 PINS, BLACK) | on catalytic converter | 01-5 |
| X62201 | (4 PINS, BLACK) | on catalytic converter | 01-5 |
| X62202 | (4 PINS, BLACK) | on catalytic converter | 01-5 |
| Y1 | ABS HYDRAULIC UNIT | LH side of engine compartment | |
| Y1w | ... ABS HYDRAULIC UNIT | LH side of engine compartment | |

7000.0-2

1998

CONNECTOR VIEWS

02/98

8500.0-00

1998

FIG. 1

B090002.00

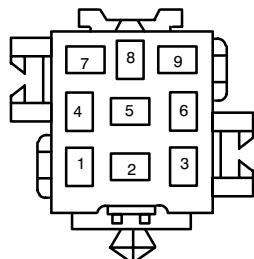


FIG. 2

B420000.00

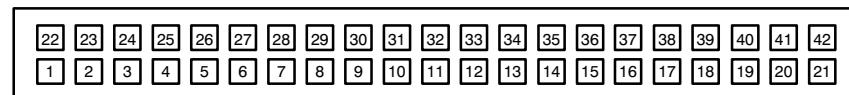


FIG. 3

B120015

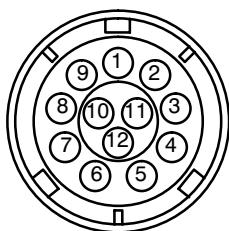


FIG. 4

B040031.00


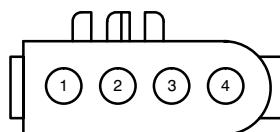


FIG. 5

B030046.00

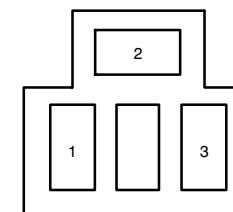

CONNECTOR VIEWS

02/98

8500.0-01

1998

FIG. 1

B040030.00

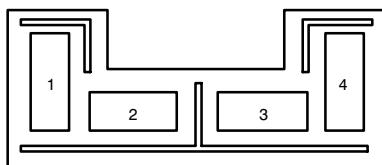


FIG. 2

B030006.00



FIG. 3

B030024.01

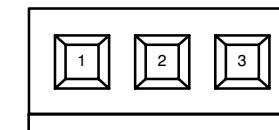


FIG. 4

B080002.00

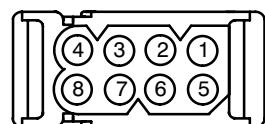


FIG. 5

B040023.00

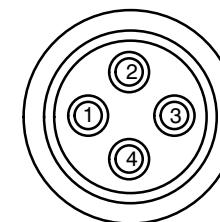


FIG. 1

B830001.00

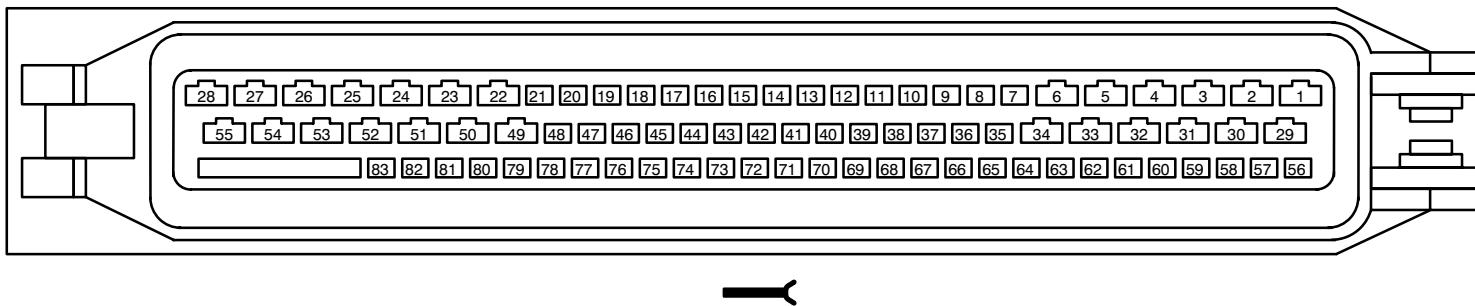


FIG. 2

B150002.00

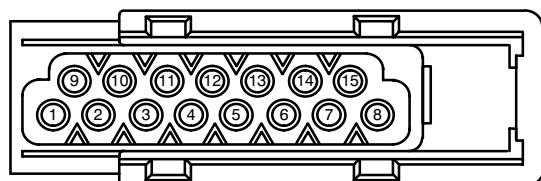


FIG. 3

B040026

