

RH side of engine compartment

B76

Pressure sensor

X1654


Component connector (3-pin, Black), Pressure sensor



driver's side footwell

X19527

Component connector (16-pin, Black), OBDII plug

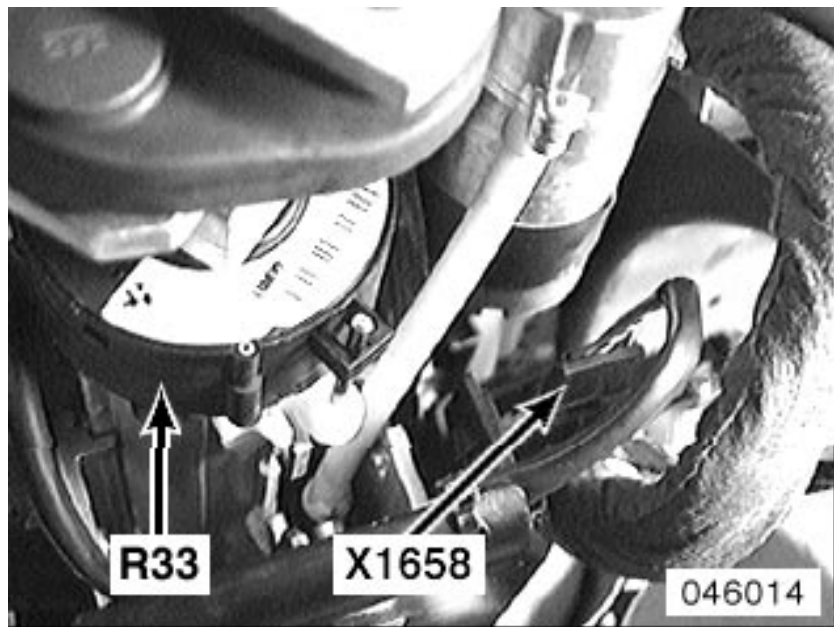


on steering column

R33

Steering angle sensor

X1658

In-line connector (6-pin, Black), Steering angle sensor

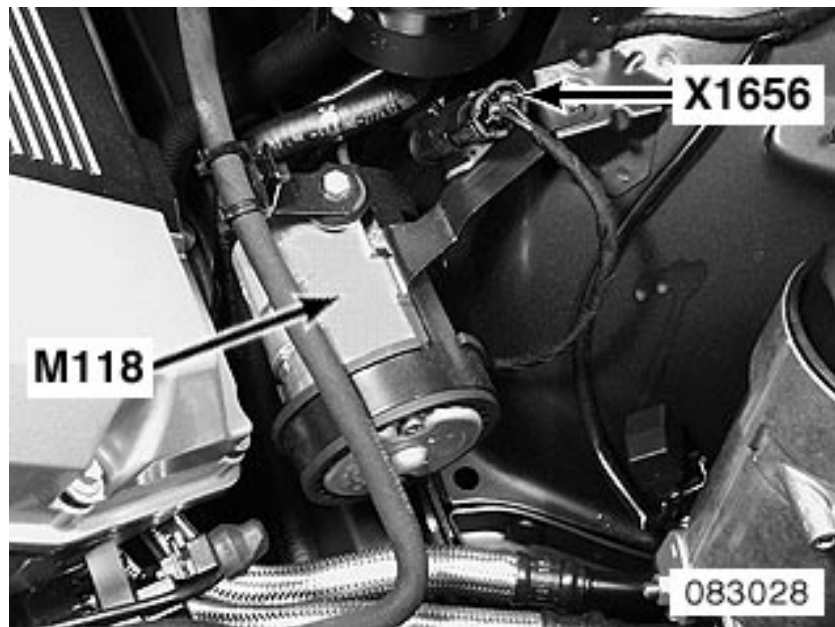


LH side of engine compartment

M118

Precharge pump

X1656

Component connector (2-pin, Black), Precharge pump

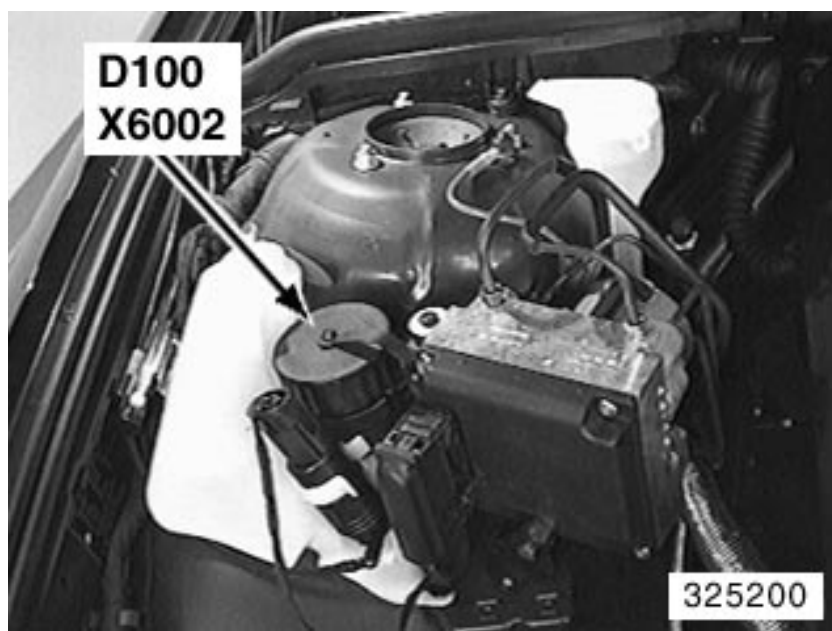


rear LH side of engine compartment

D100

Data link connector

X6002

Component connector (20 -pin, Black), Data link connector

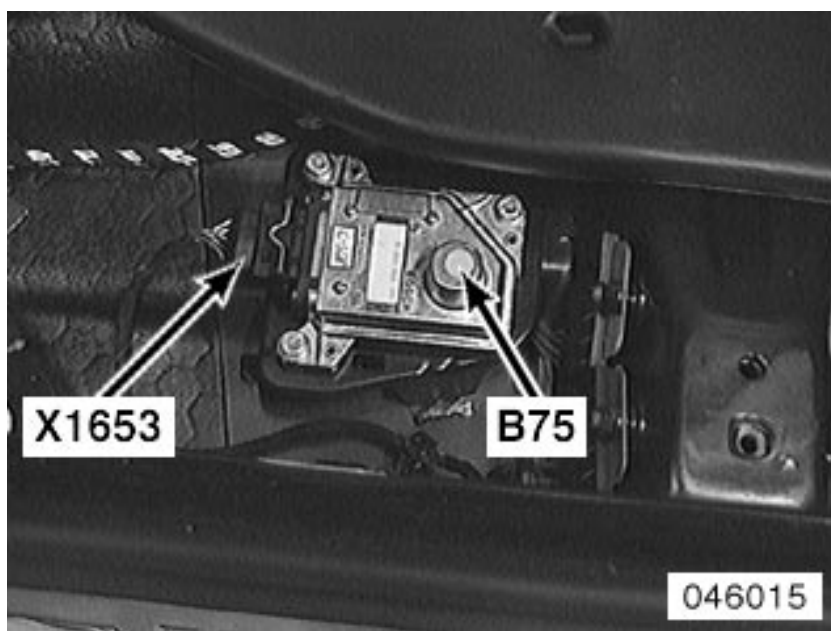


LH side of LH footwell under carpet

B75

rpm rate sensor

X1653


Component connector (5-pin, Black), rpm rate sensor

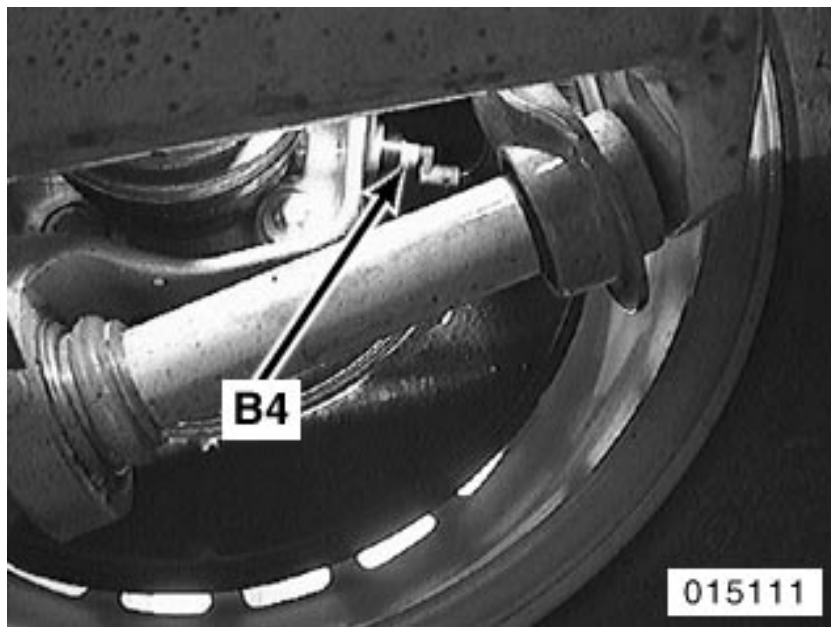

on left rear wheel inside of wheel hub

B4


Left rear speed sensor

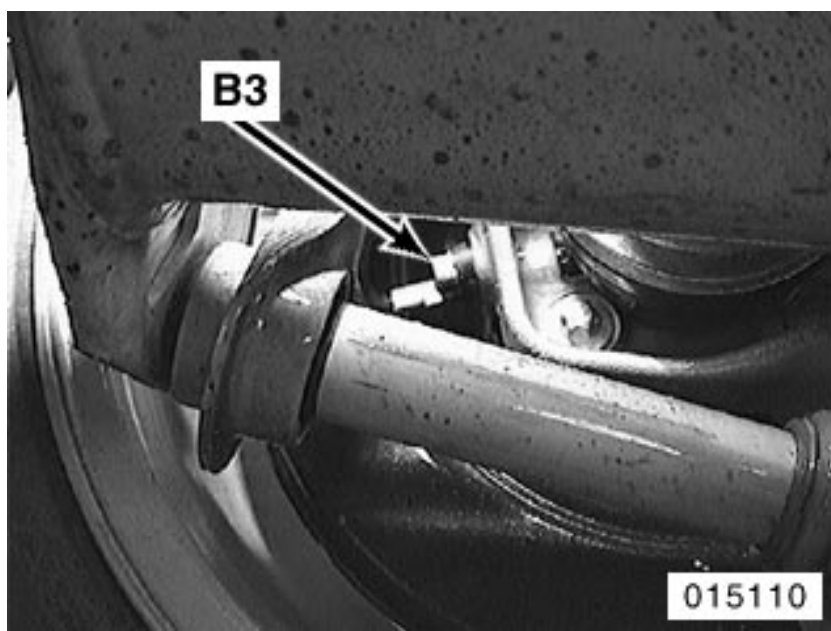

on right rear wheel inside of wheel hub

B3


Right rear speed sensor

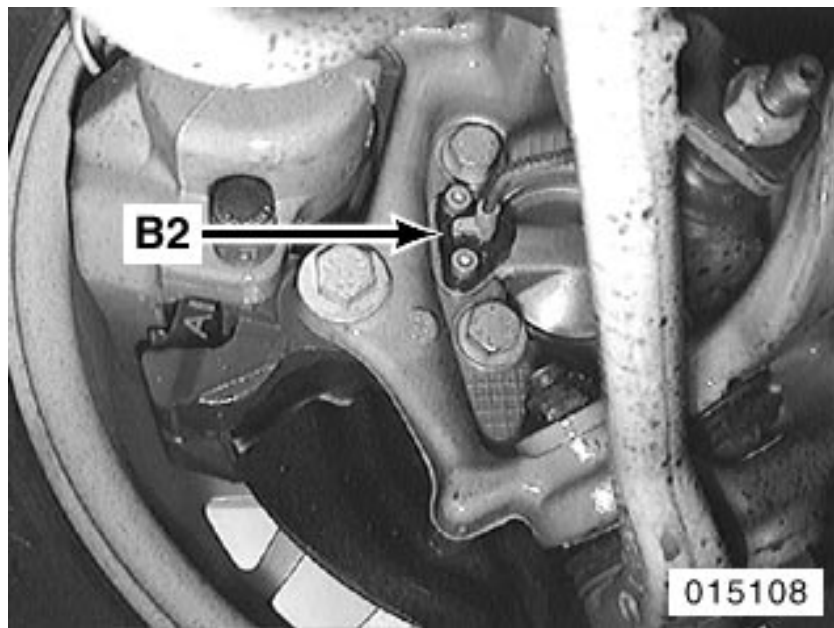

on left front wheel inside of wheel hub

B2


Left front speed sensor

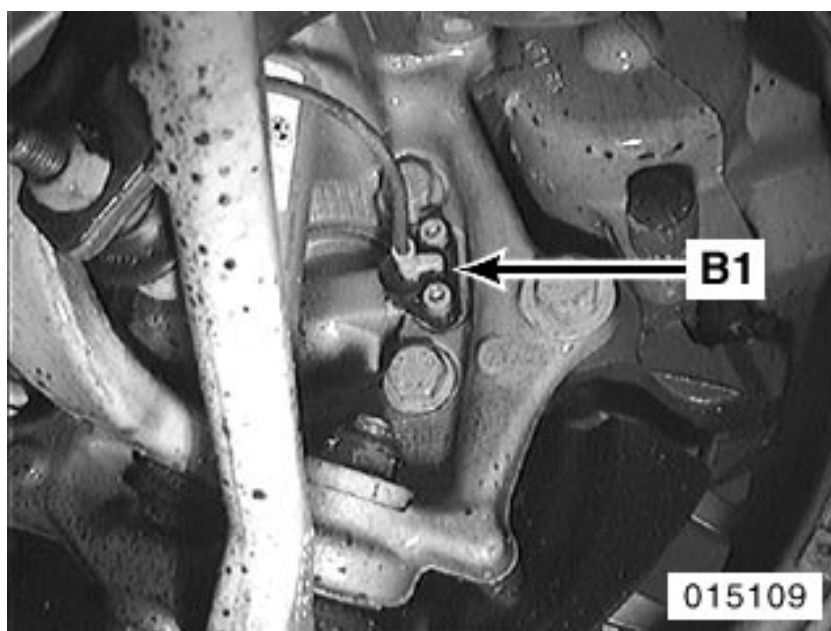

on right front wheel inside of wheel hub

B1

Right front speed sensor

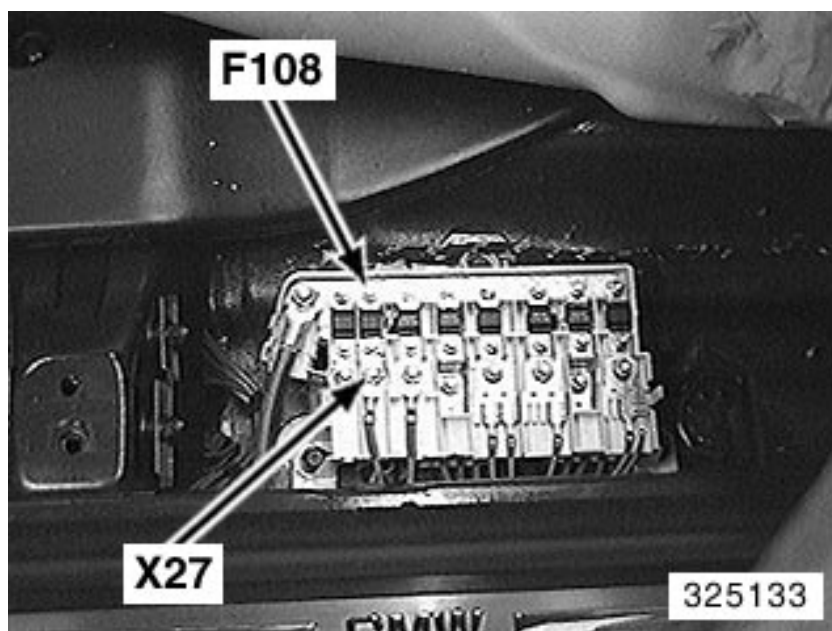


RH side of RH footwell under carpet

F108

Fuse F108

X27

Cable shoe Fuse output

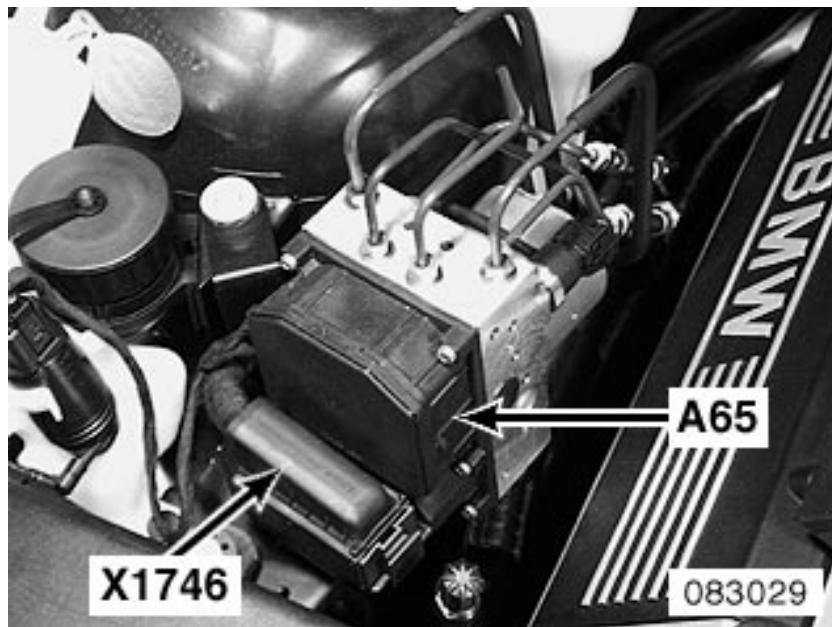


RH side of engine compartment

A65

ABS/DSC control module

X1746

Component connector (43-pin, Black), ABS/DSC control module

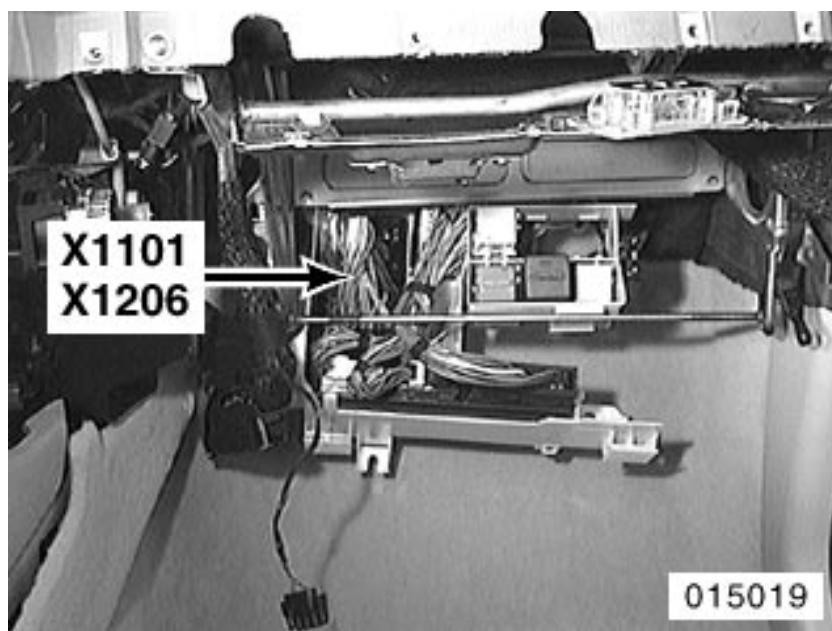


behind glove box

X1101

Splice Engine speed sensor signal


X1206

Splice Inclination sensor

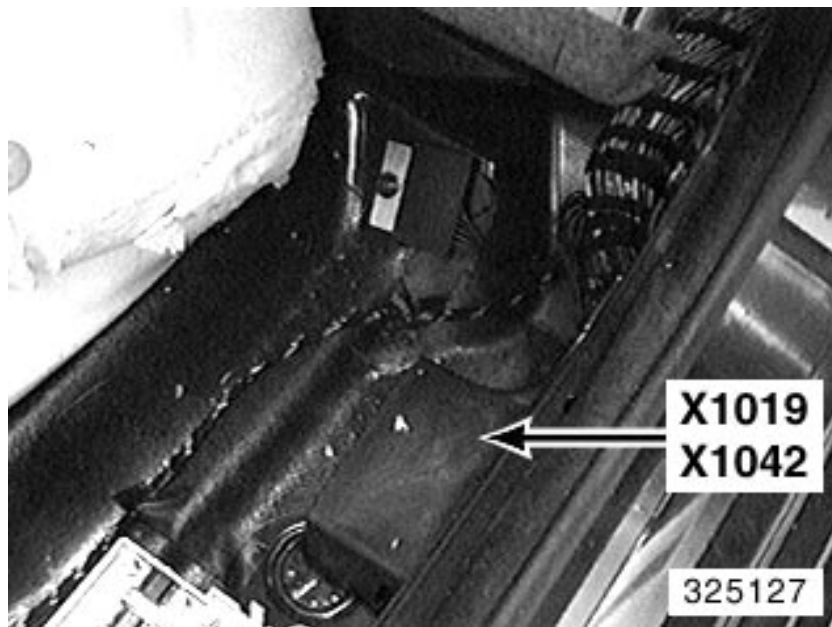

RH side of RH footwell under carpet

X1019	Splice Nighttime illumination
X1042	Splice Auxiliary heating

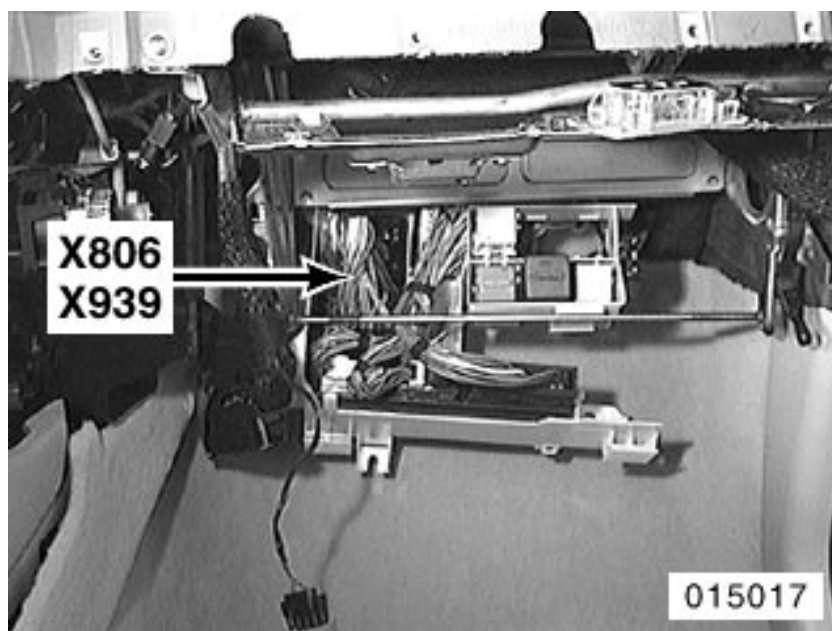


behind glove box

X806

Splice Light signal

X939

Splice Connector, I/K-bus

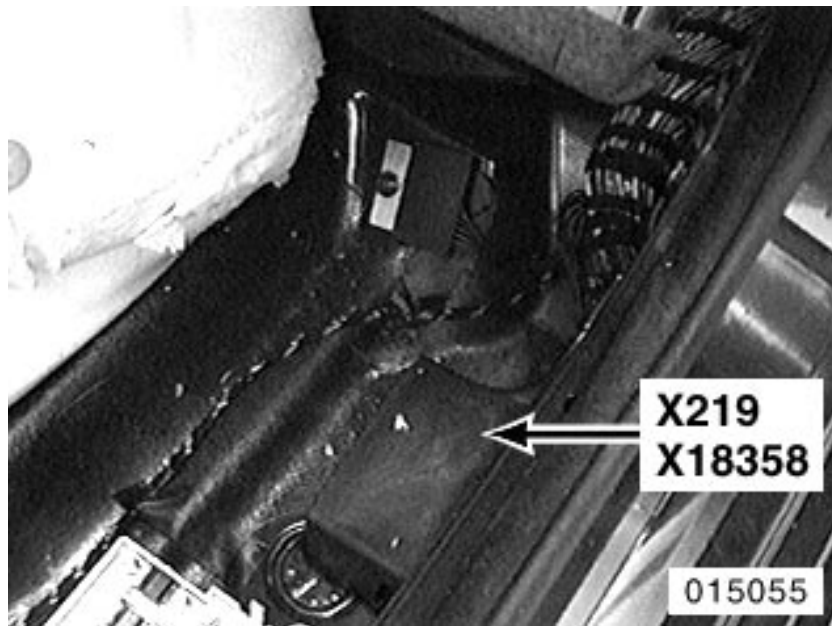


RH side of RH footwell under carpet

X219

Splice Ground

X18358

Splice Air bag ground

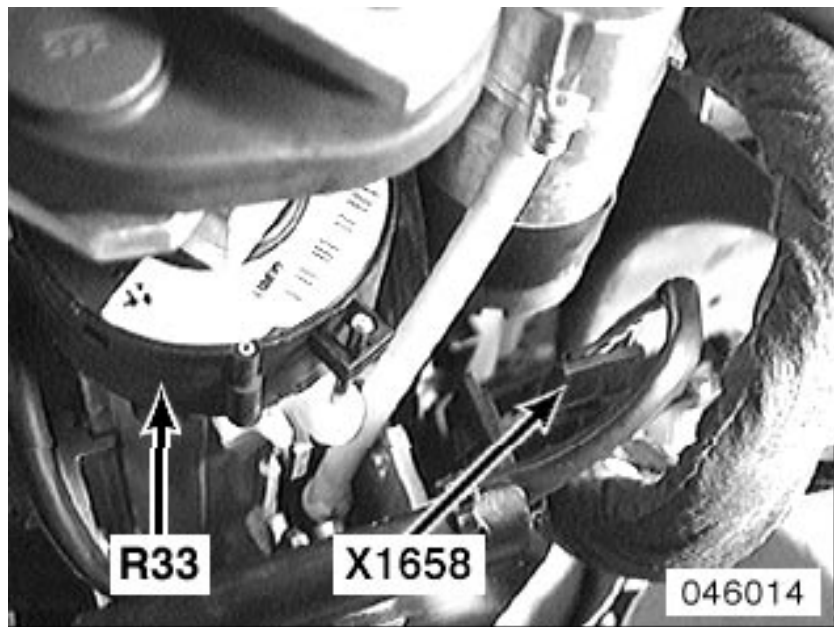


on steering column

R33

Steering angle sensor

X1658


In-line connector (6-pin, Black), Steering angle sensor

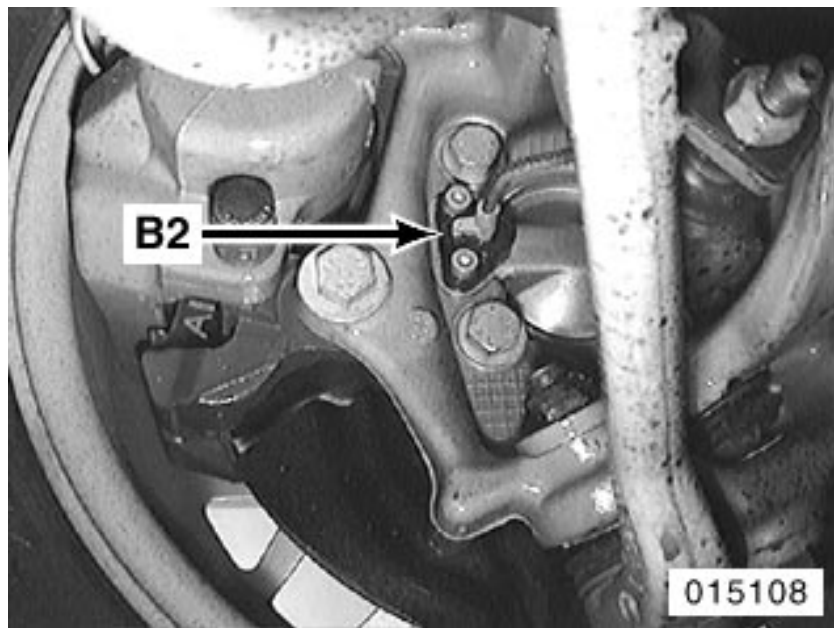

on left front wheel inside of wheel hub

B2


Left front speed sensor

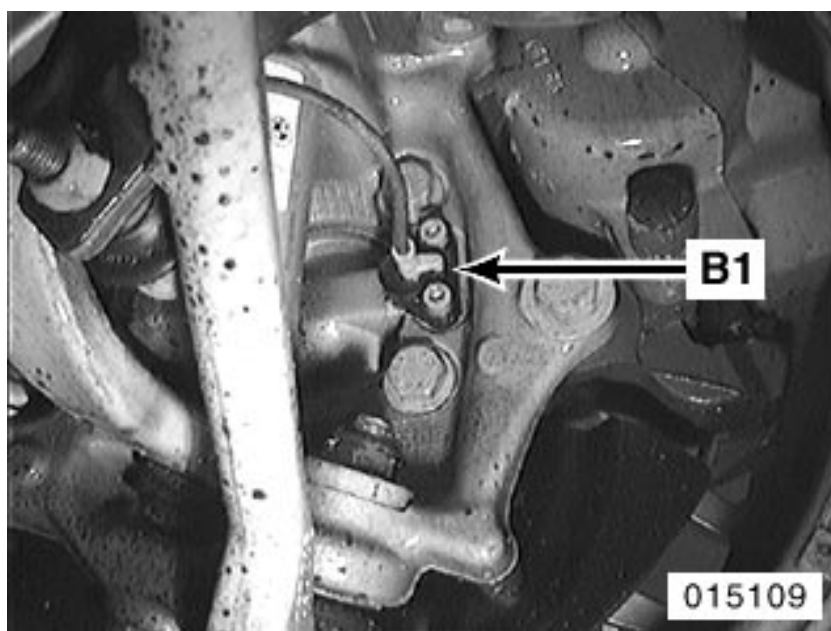

on right front wheel inside of wheel hub

B1


Right front speed sensor

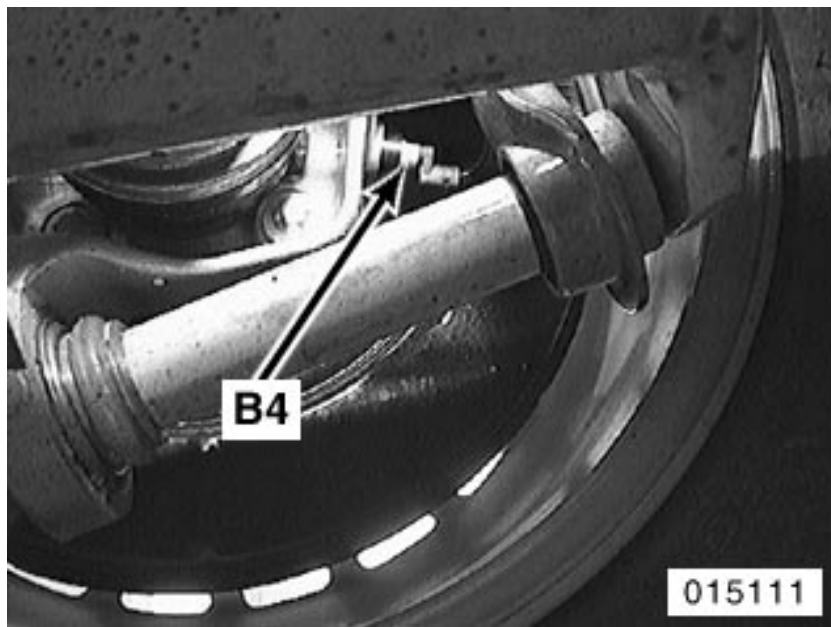

on left rear wheel inside of wheel hub

B4


Left rear speed sensor

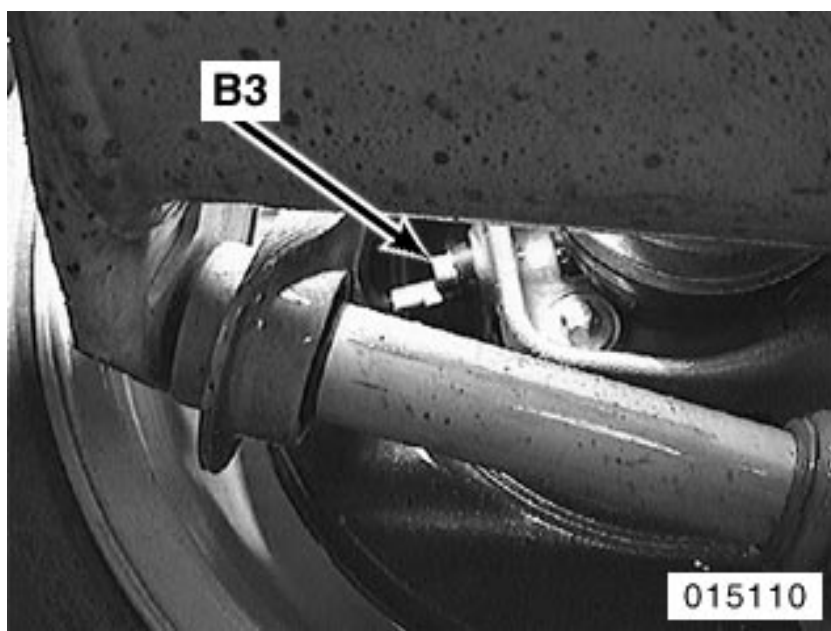

on right rear wheel inside of wheel hub

B3

Right rear speed sensor

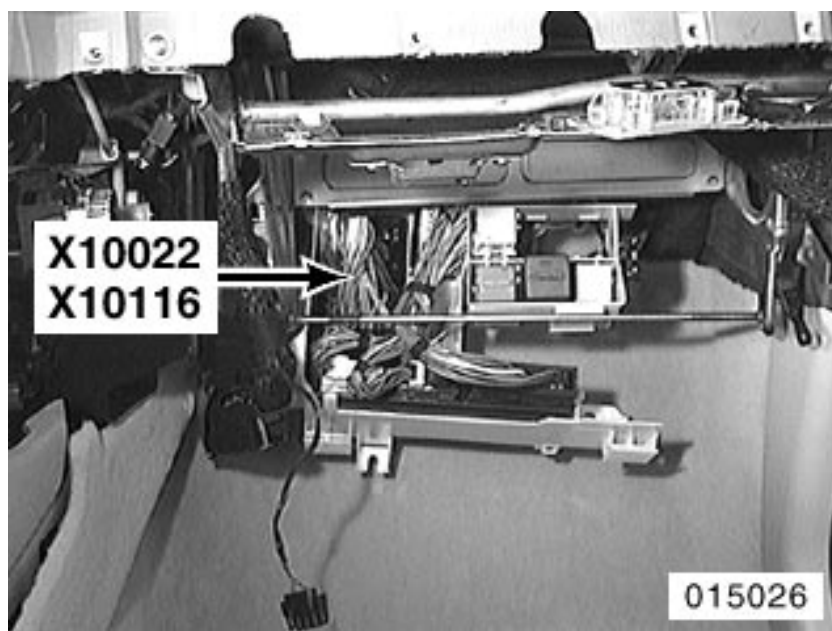


behind glove box

X10022

Splice Terminal R

X10116

Splice K-bus

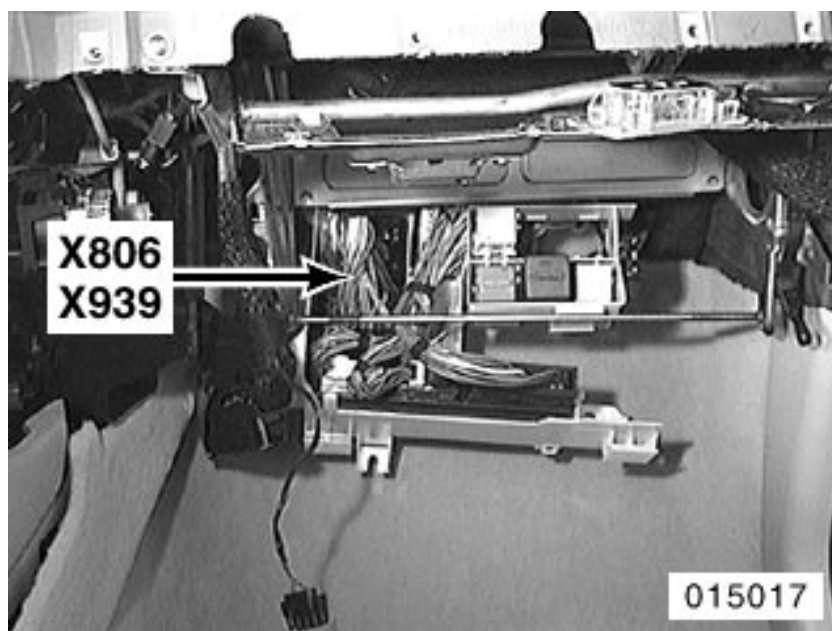


behind glove box

X806

Splice Light signal

X939

Splice Connector, I/K-bus

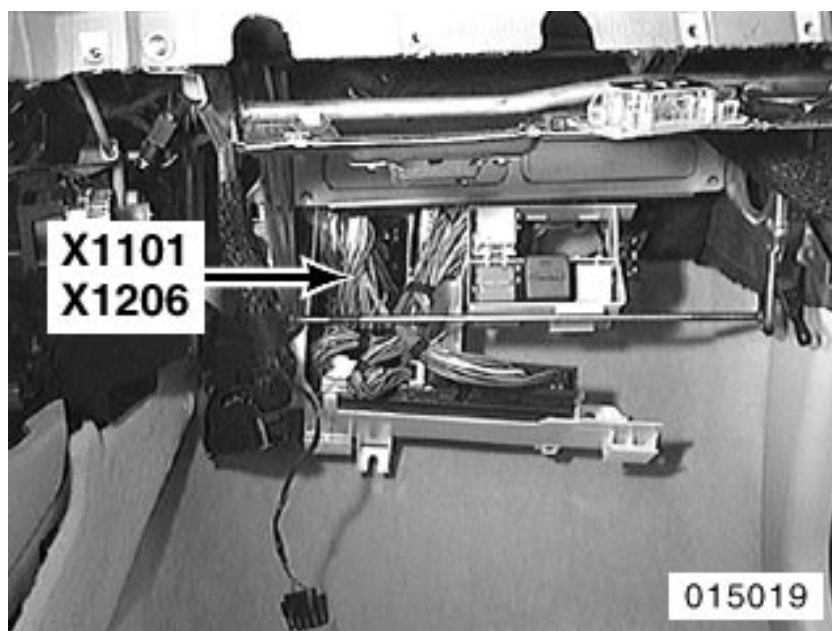


behind glove box

X1101

Splice Engine speed sensor signal

X1206

Splice Inclination sensor

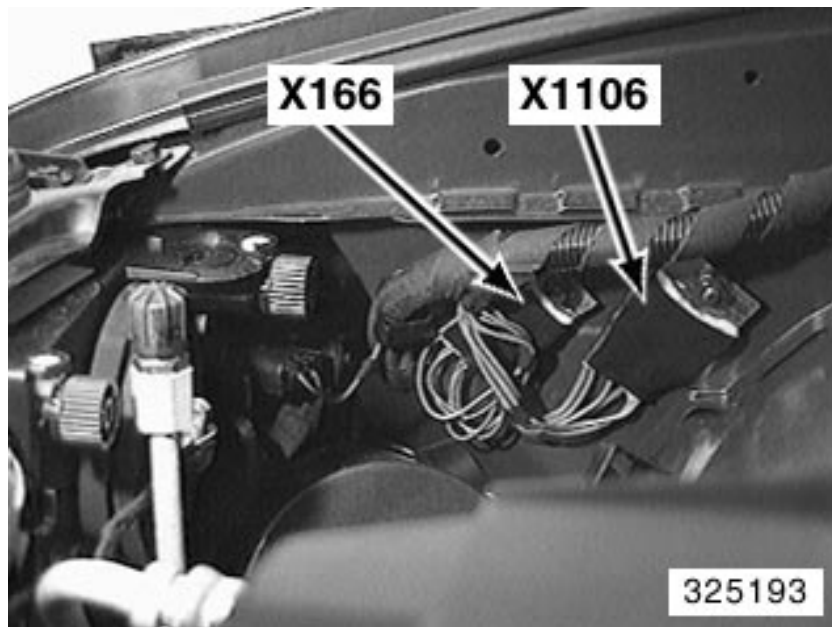


front RH side of engine compartment

X1106

Cable shoe Ground

X166

Cable shoe Ground

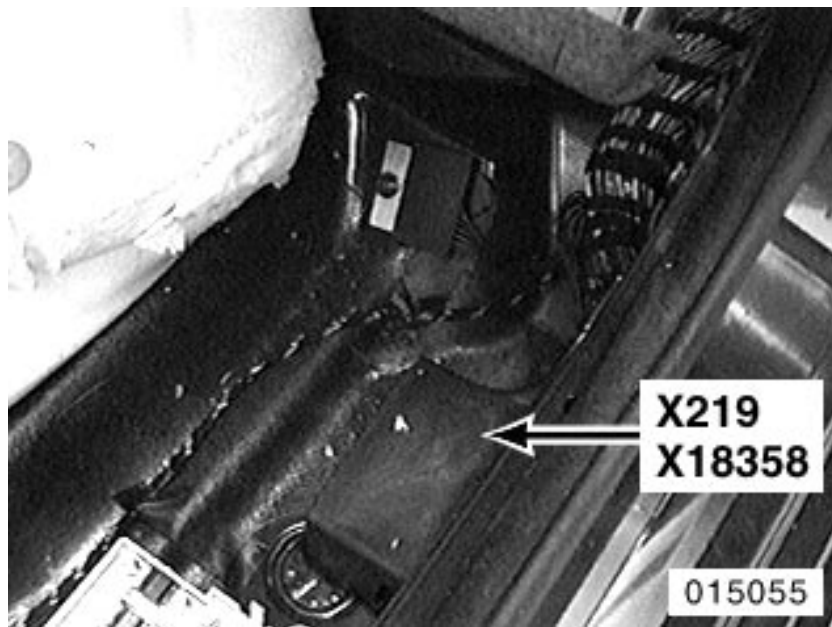


RH side of RH footwell under carpet

X219

Splice Ground

X18358

Splice Air bag ground

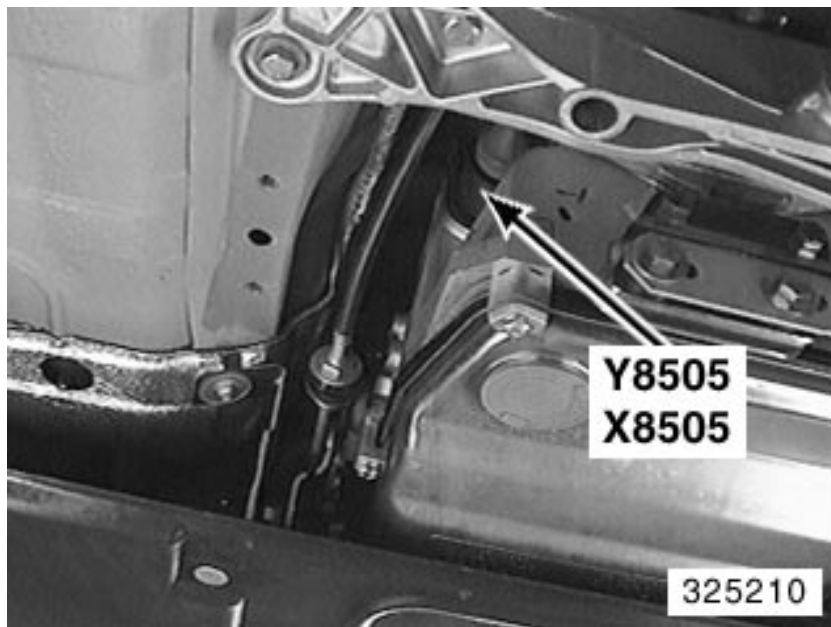


on LH side of transmission

Y8505

Transmission valve unit

X8505

Component connector (16 -pin, Black), Transmission valve unit

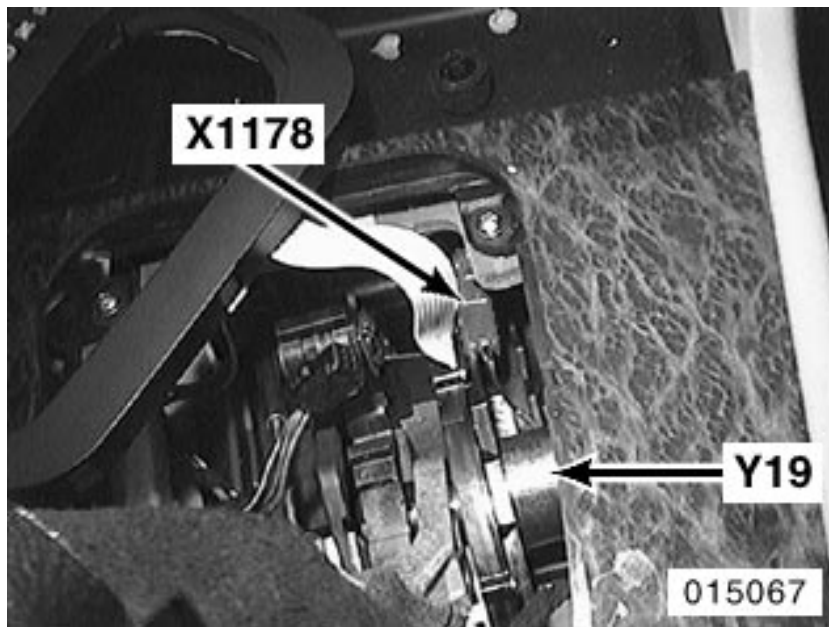


center console

Y19

Park/neutral position switch

X1178

In-line connector (3-pin, Black), Park/neutral position switch

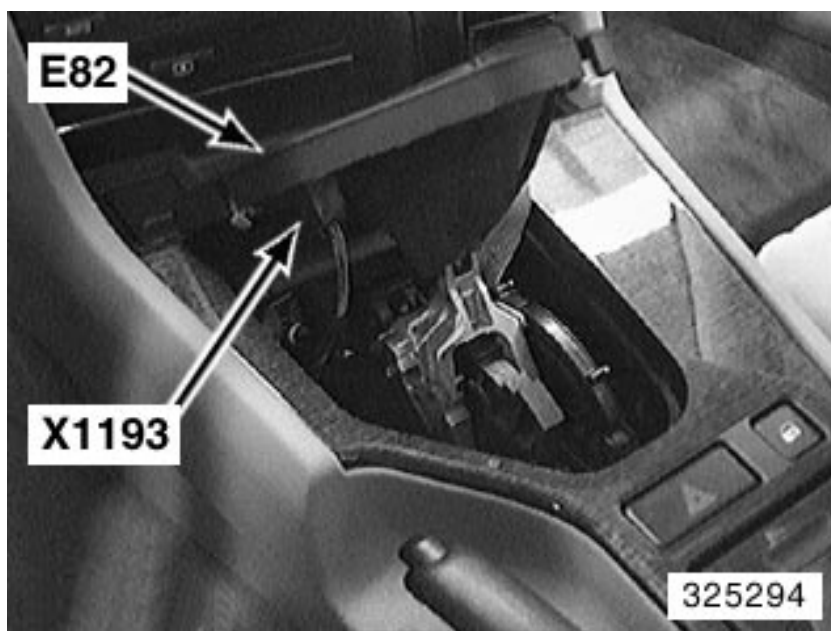


center console front

E82

Transmission range indicator light

X1193

Component connector (6 -pin, Black), Transmission range indicator light

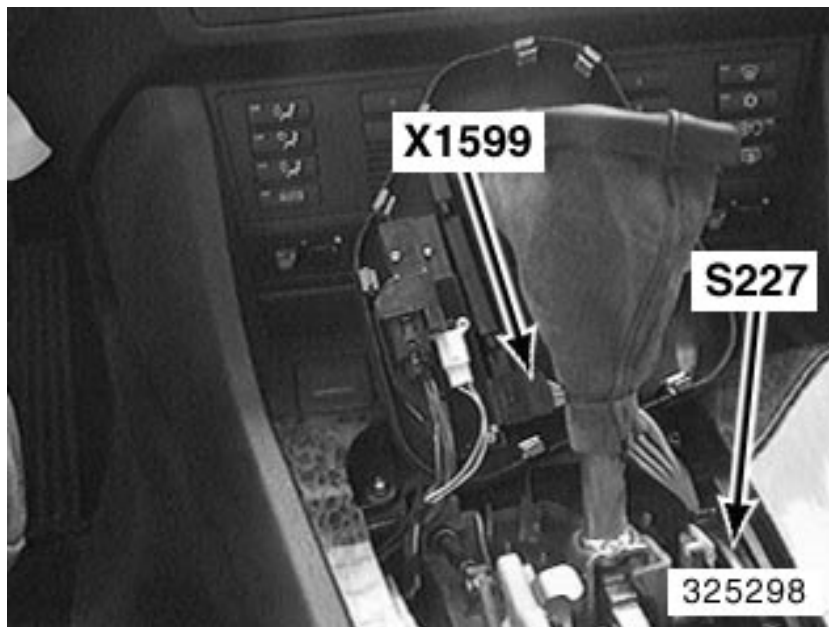


center console

S227

Selector lever position switch

X1599

In-line connector (6 -pin, Black), Selector lever position switch

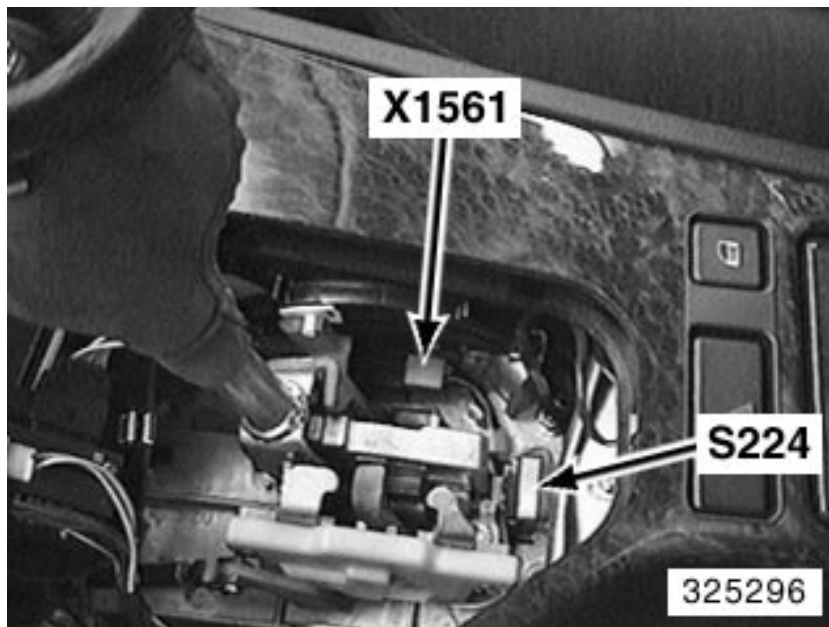


center console

S224

Steptronic switch

X1561

In-line connector (4 -pin, Yellow), Steptronic switch

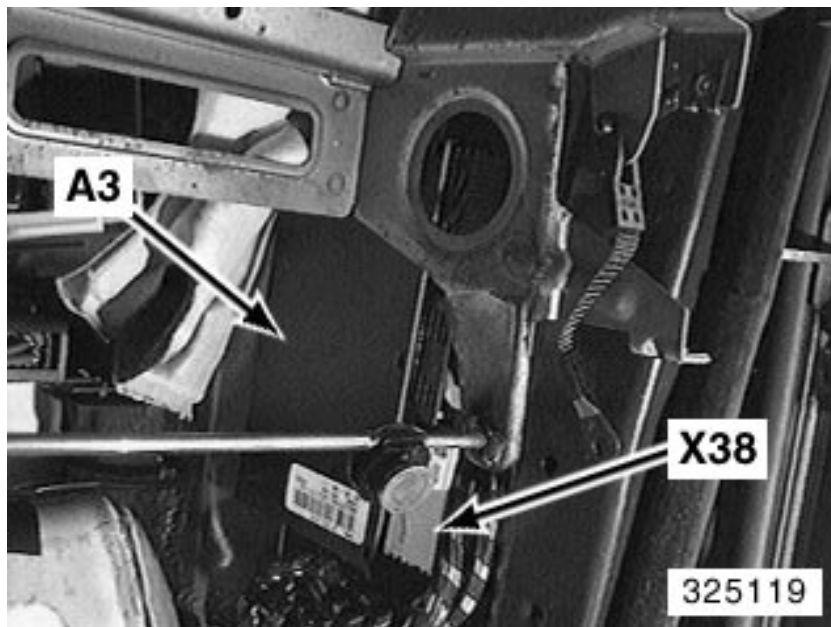


RH side of RH footwell

A3

Light module

X38

Component connector (15 -pin, White), Light module

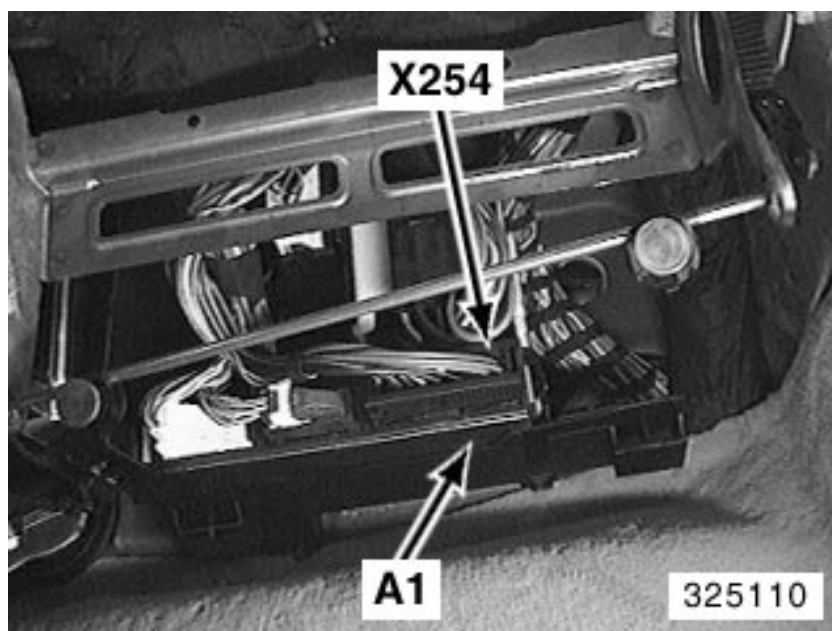


behind glove box

A1

General module

X254

Component connector (20 -pin, Black), General module

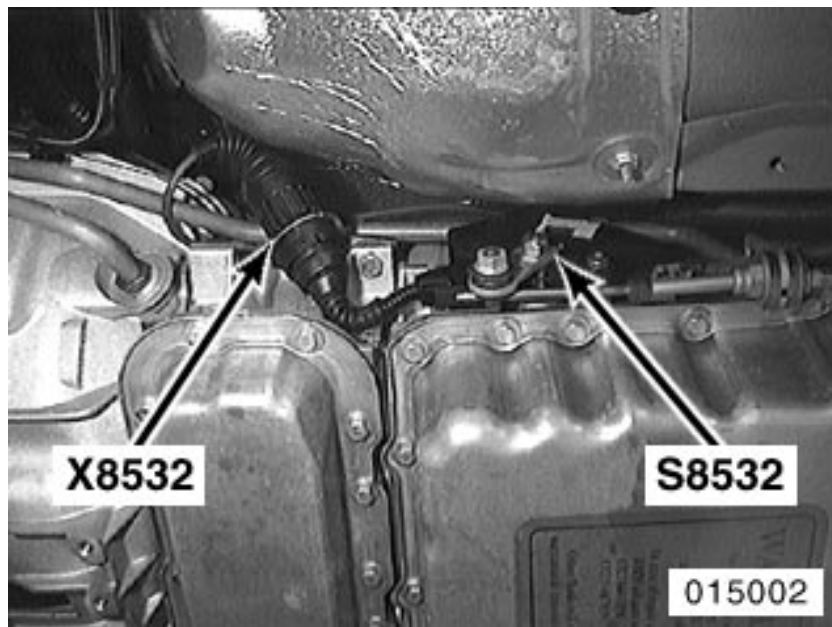


LH side of transmission

S8532

Automatic transmission range switch

X8532

Component connector (10-pin, Black), Automatic transmission range switch

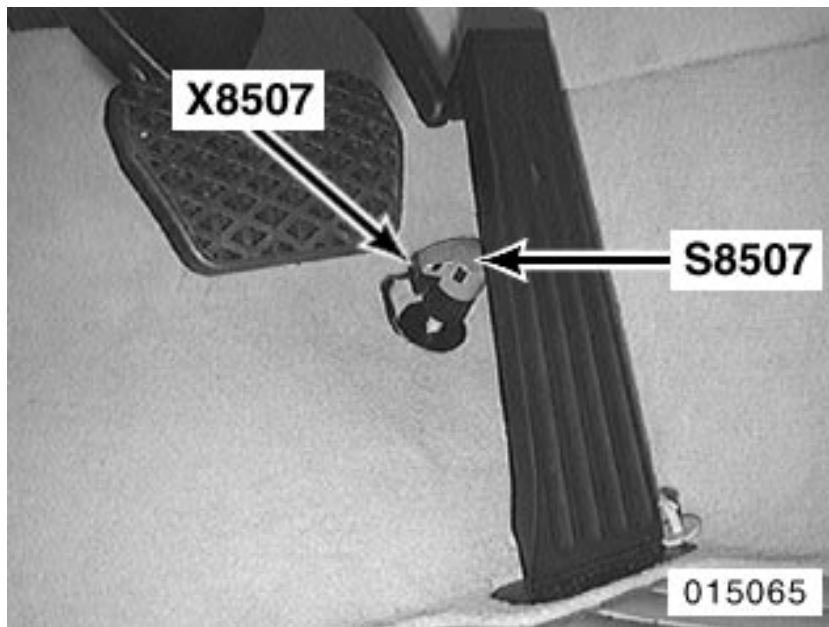


driver's side footwell

S8507

Kick-down switch

X8507


Component connector (1-pin, Black), Kick-down switch

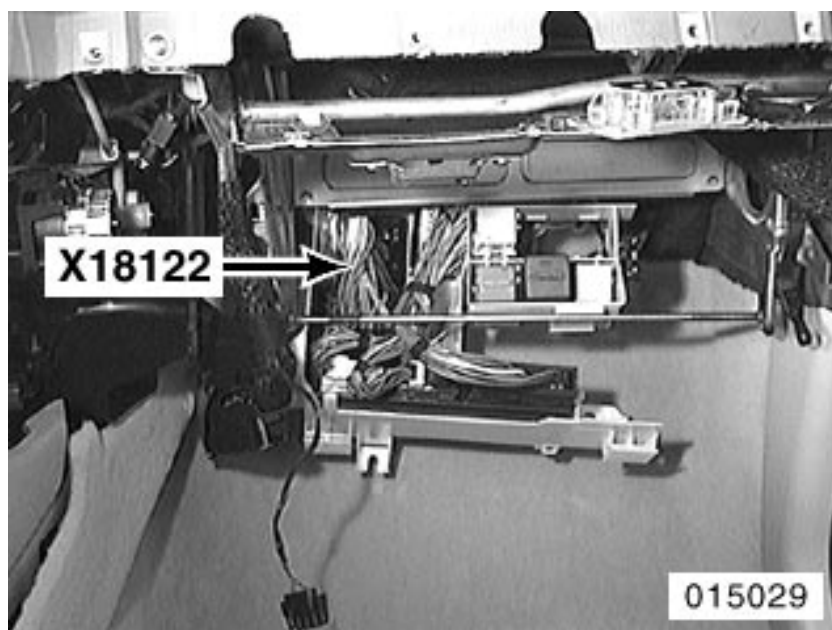

behind glove box

X18122

Splice Consumer cutoff I

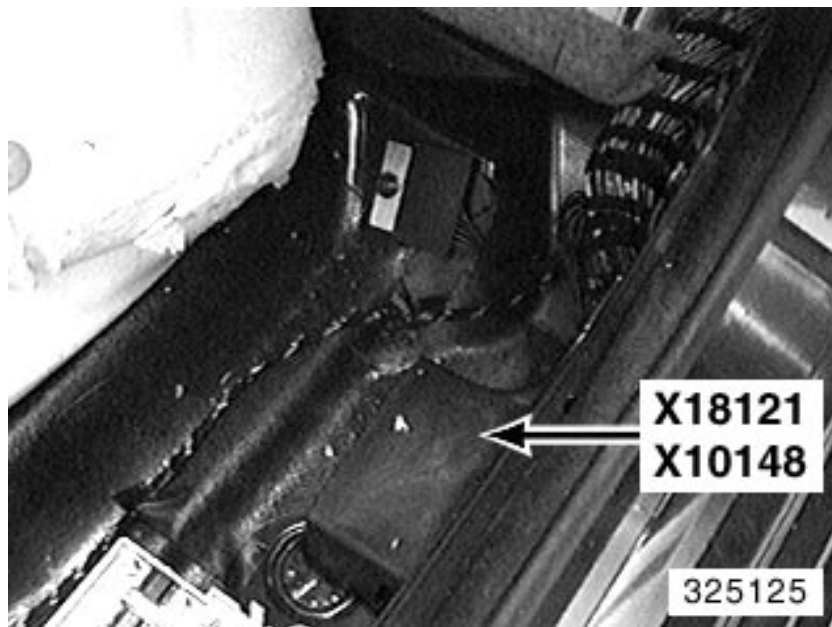


RH side of RH footwell under carpet

X18121

Splice Consumer cut-off signal

X10148

Splice I-bus

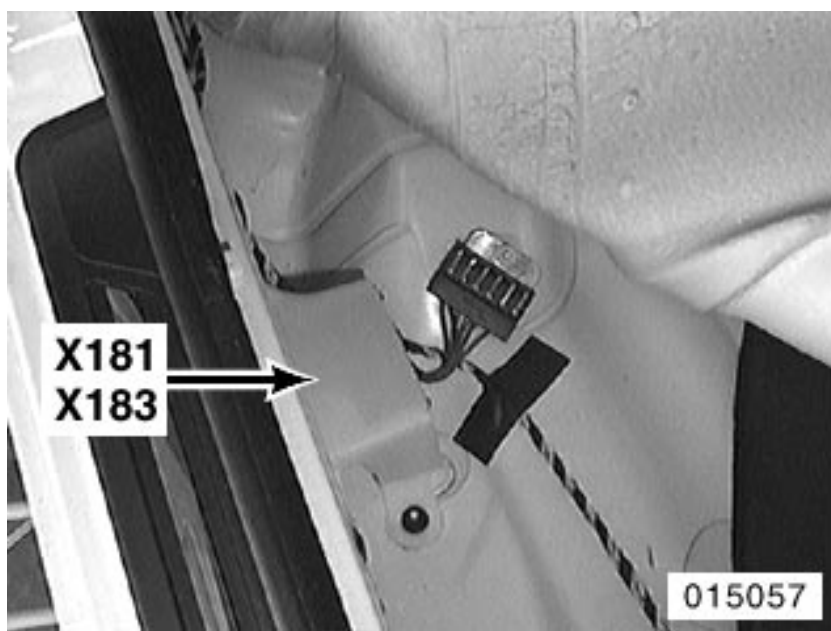


driver's side footwell under carpet

X181

Splice Brake light

X183

Splice Data link TXD

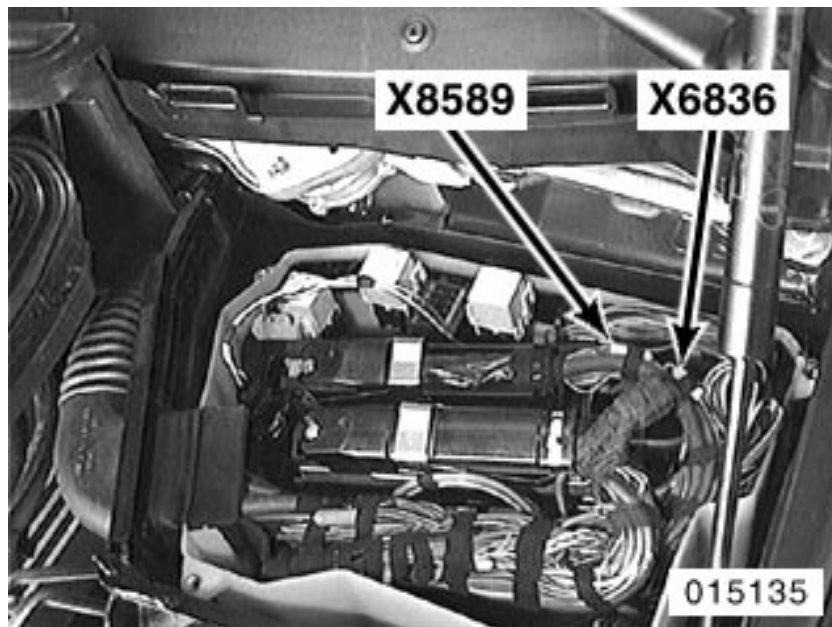


rear LH side of engine compartment in E-Box

X6836

Splice Terminal 15


X8589

Splice Transmission range switch position L2

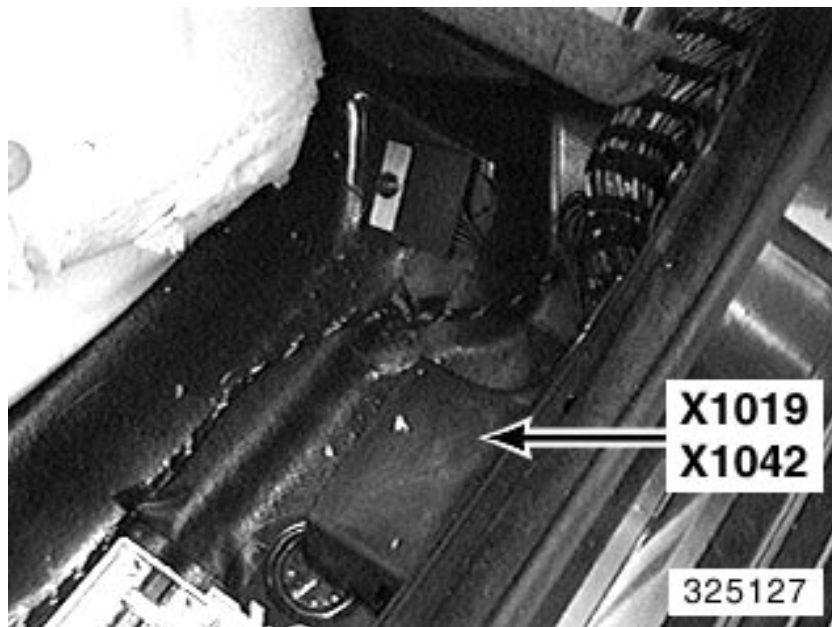

RH side of RH footwell under carpet

X1019	Splice Nighttime illumination
X1042	Splice Auxiliary heating

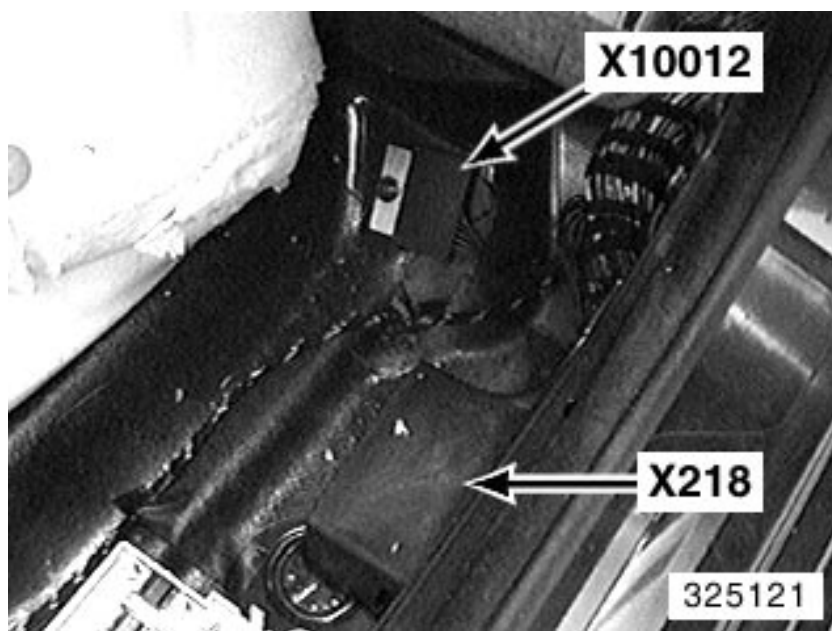


RH side of RH footwell under carpet

X10012

Cable shoe Ground

X218

Splice Ground

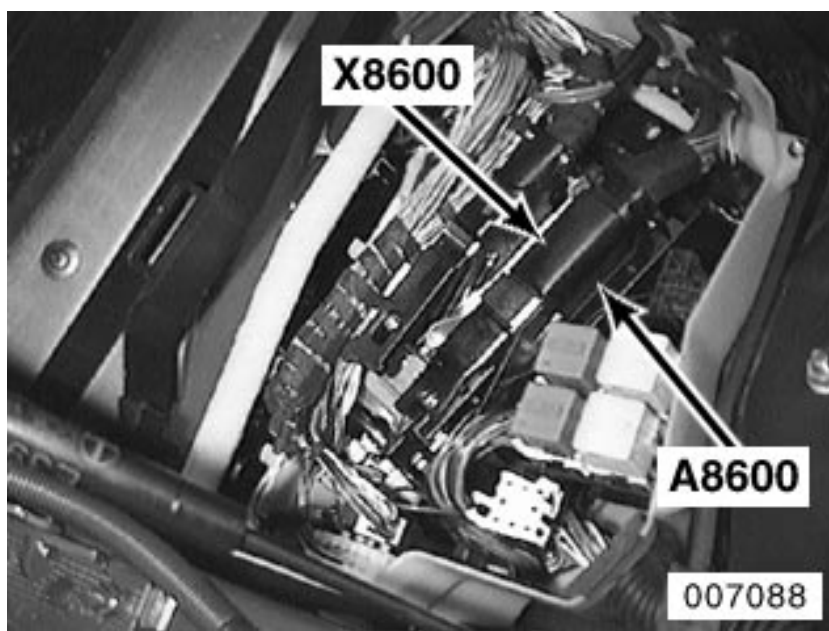


rear RH side of engine compartment in E-Box

A8600

Transmission control module (AGS)

X8600


Component connector (88 -pin, Natural), Transmission control module (AGS)

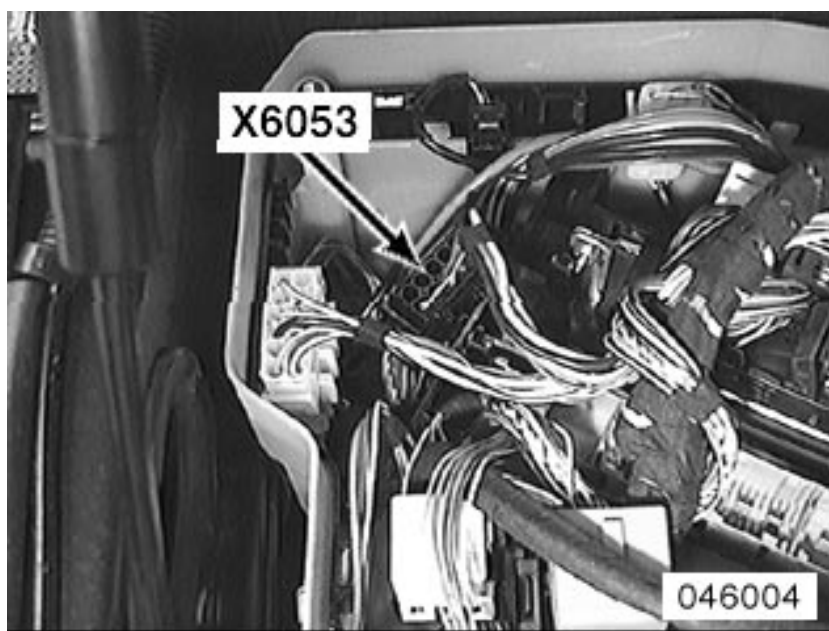

rear RH side of engine compartment in E-Box

X6053

In-line connector (12-pin, Black), Engine wiring harness

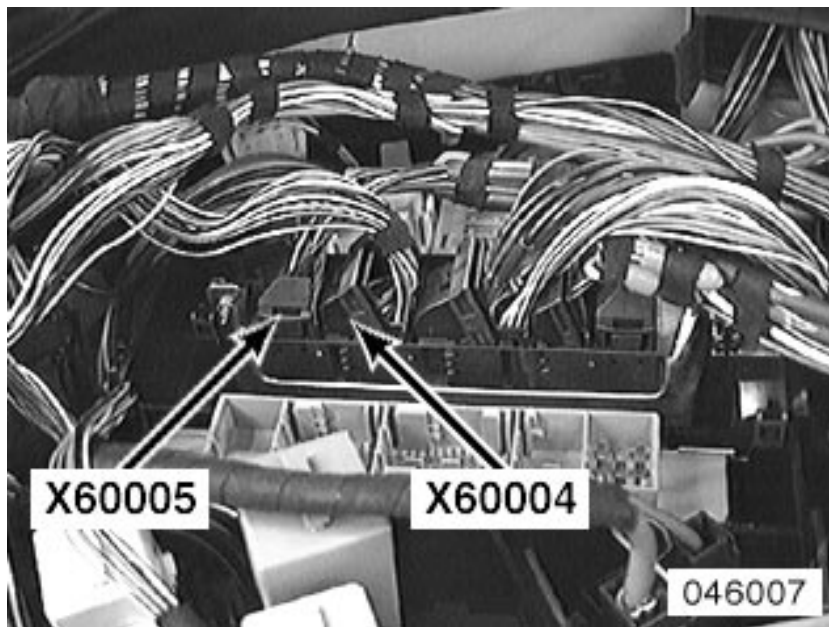


rear RH side of engine compartment in E-Box

X60004

Component connector (40-pin, Black), Engine control module (DME)

X60005

Component connector (9-pin, Black), Engine control module (DME)

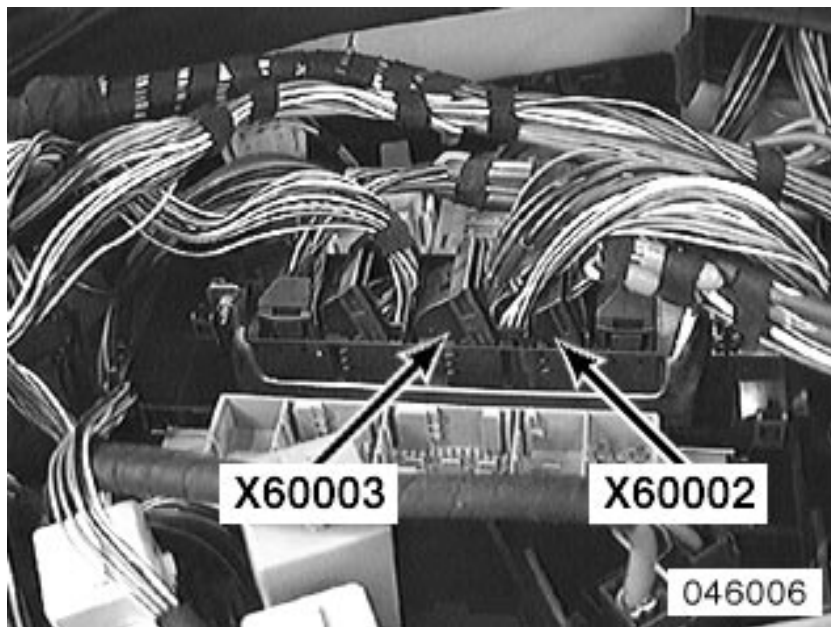


rear RH side of engine compartment in E-Box

X60002

Component connector (24-pin, Black), Engine control module (DME)

X60003

Component connector (52-pin, Black), Engine control module (DME)

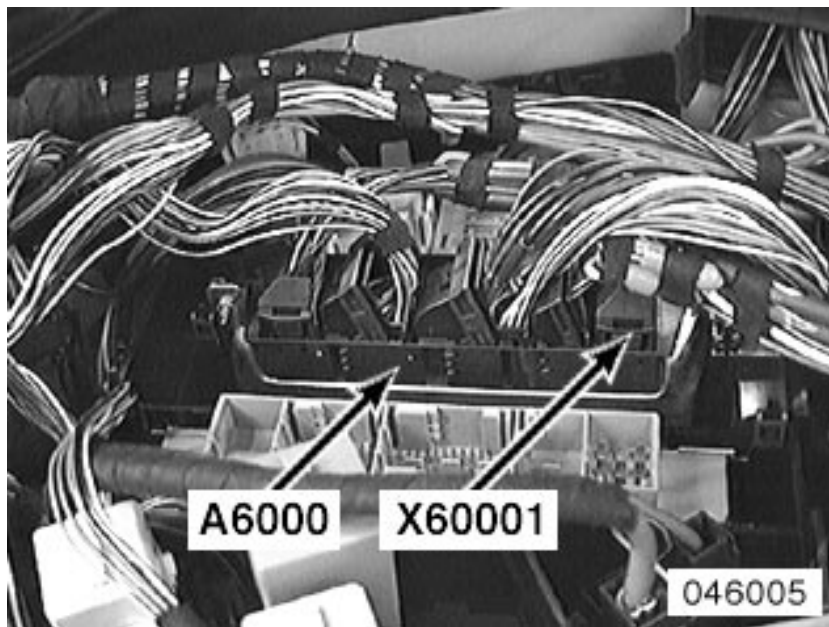


rear RH side of engine compartment in E-Box

A6000

Engine control module (DME)

X60001

Component connector (9-pin, Black), Engine control module (DME)

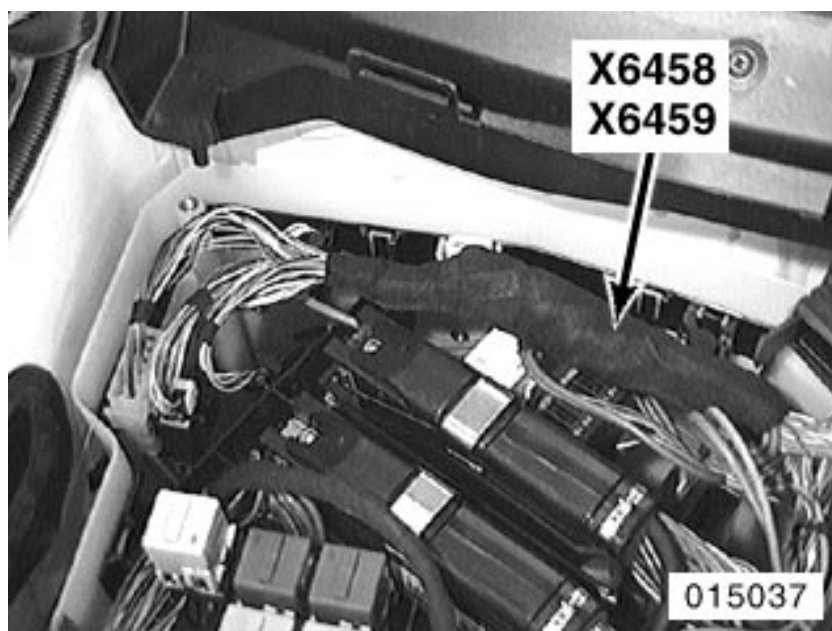


rear RH side of engine compartment in E-Box

X6458

Splice Ground connector, power

X6459


Splice Ground connector, electronics

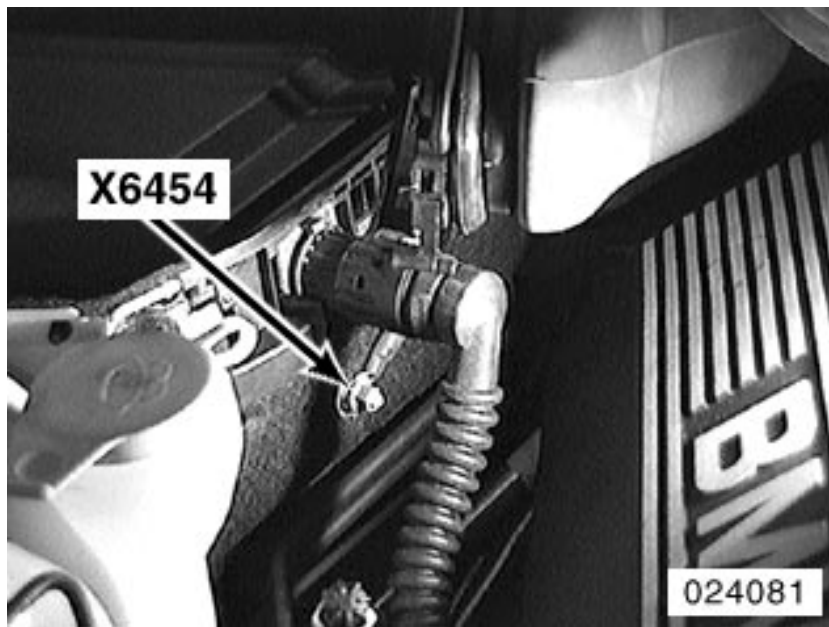

rear RH side of engine compartment on E-box


X6454

Cable shoe Ground point

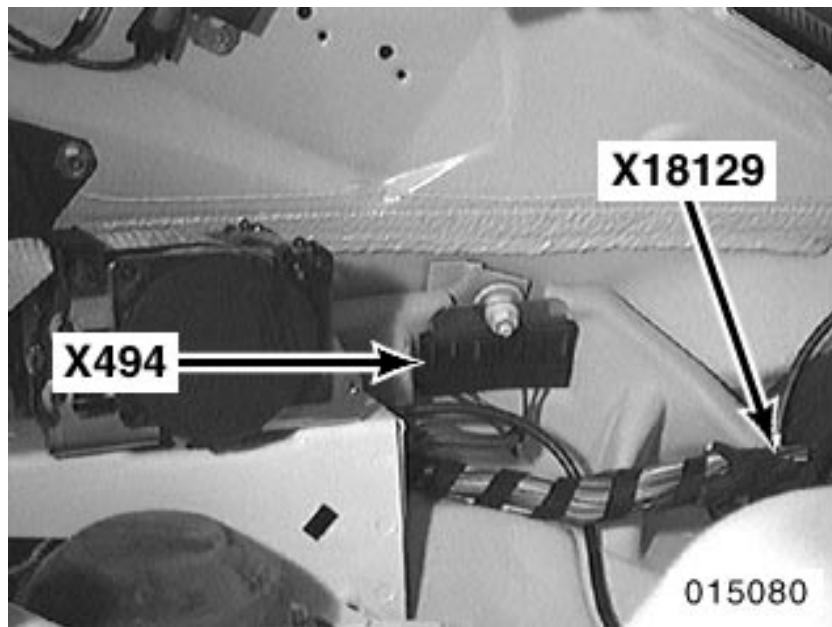

under rear window shelf right

X494	Cable shoe Ground
X18129	Splice Terminal 30

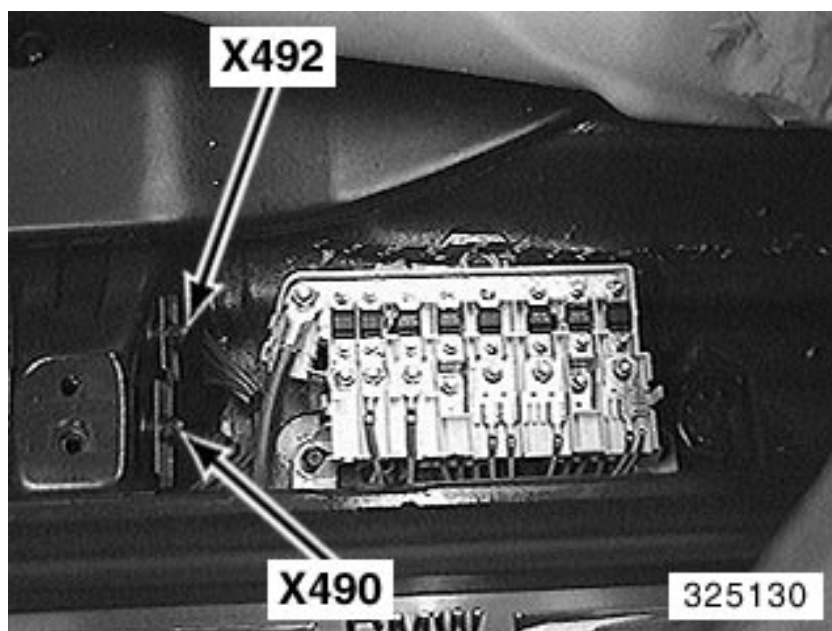

RH side of RH footwell under carpet

X490	Cable shoe Ground
X492	Cable shoe Ground




below LH side of dash on steering column

X217

Splice Ground

X265

Splice Oil pressure

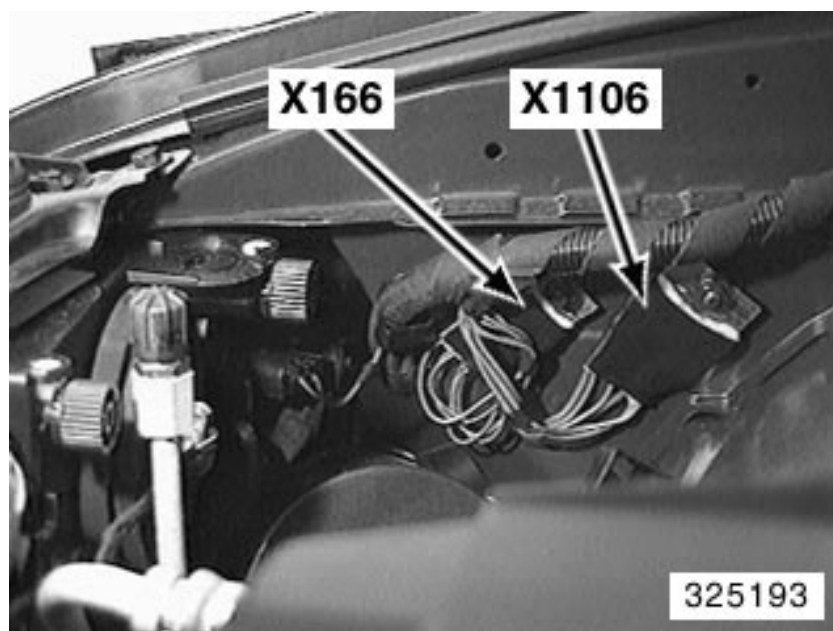


front RH side of engine compartment

X1106

Cable shoe Ground

X166

Cable shoe Ground

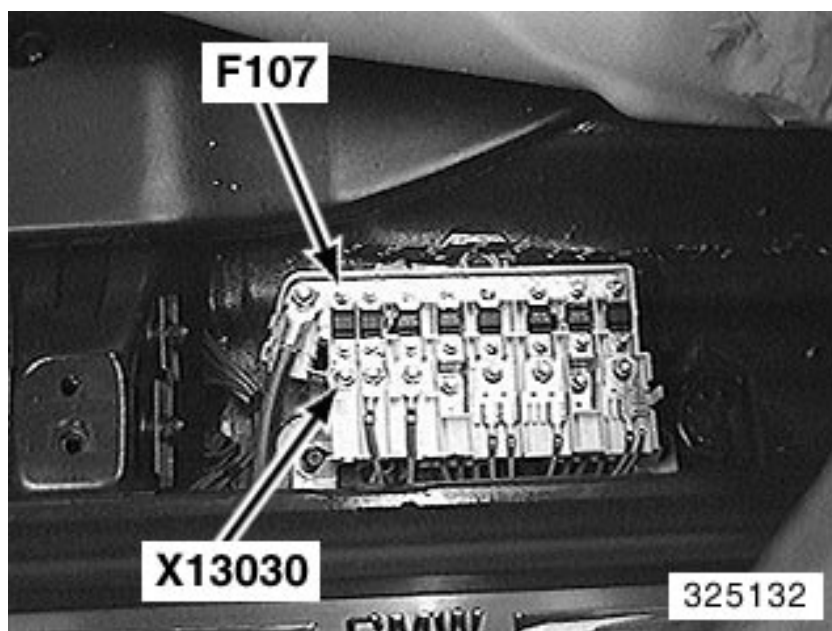


RH side of RH footwell under carpet

F107

Fuse F107


X13030

Cable shoe Fuse F107 voltage supply

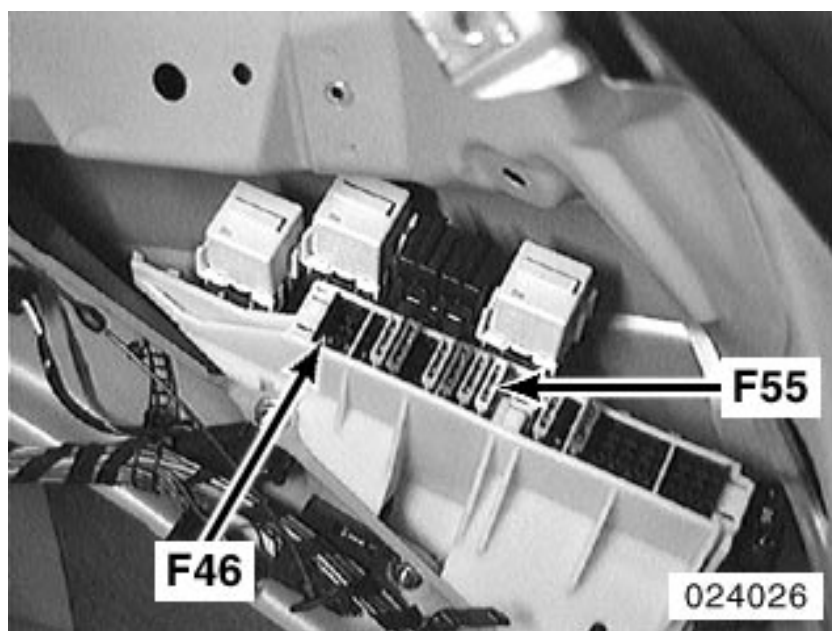


in rear RH side of luggage compartment behind trim panel

F46	Fuses F46 to F55
F55	Fuses F46 to F55

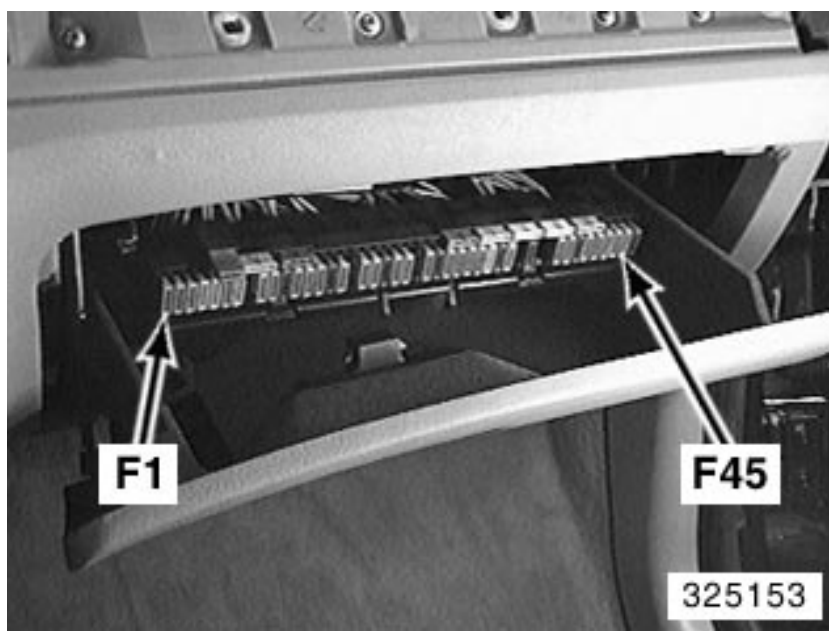

in glove box top

F1	Fuses F1 to F45
F45	Fuses F1 to F45

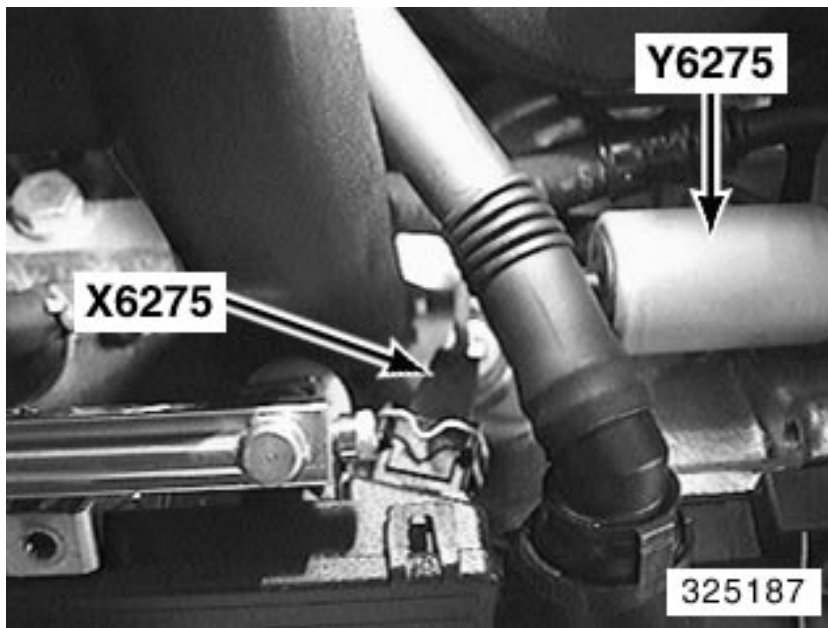

cylinder head

Y6275

VANOS valve

X6275

Component connector (2 -pin, Black), VANOS valve




rear LH side of engine compartment

Y6120

Evaporative emission valve

X6120

Component connector (2 -pin, Black), Evaporative emission valve

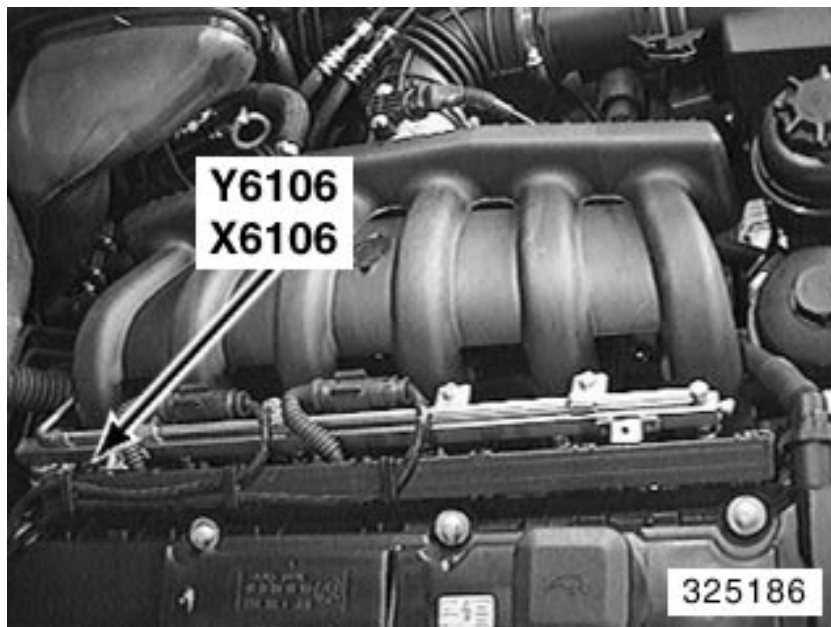


on intake manifold

Y6106

Cyl. 6 fuel injection valve

X6106

Component connector (2 -pin, Black), Cyl. 6 fuel injection valve

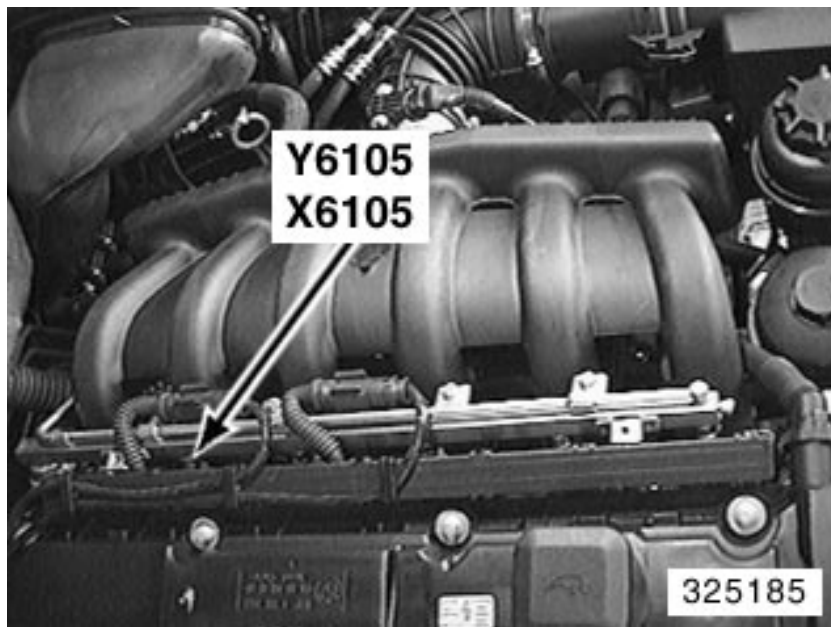


on intake manifold

Y6105

Cyl. 5 fuel injection valve

X6105

Component connector (2 -pin, Black), Cyl. 5 fuel injection valve

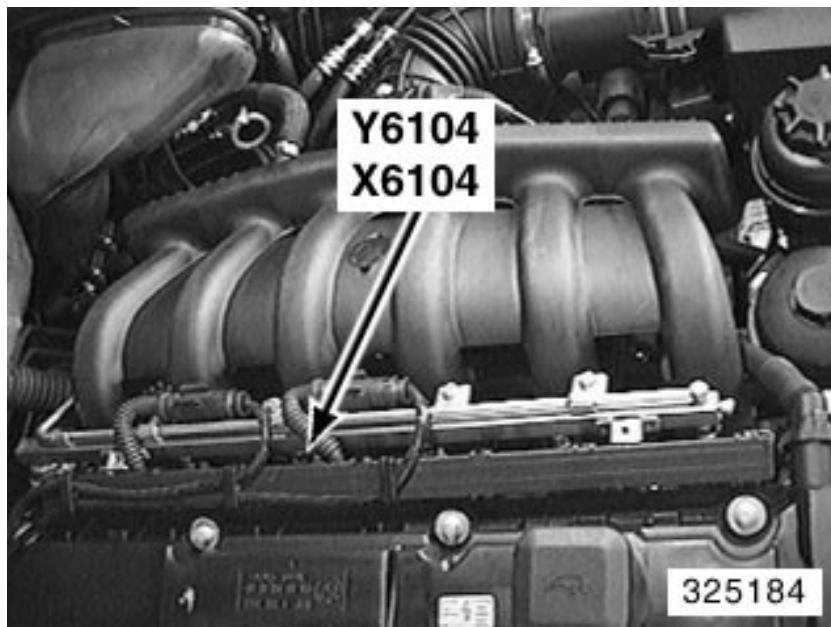


on intake manifold

Y6104

Cyl. 4 fuel injection valve

X6104

Component connector (2 -pin, Black), Cyl. 4 fuel injection valve

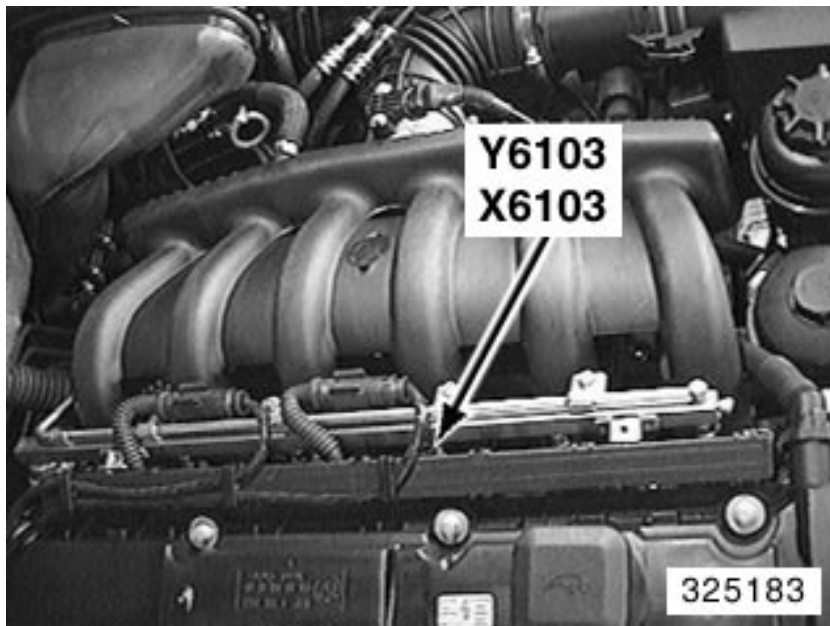


on intake manifold

Y6103

Cyl. 3 fuel injection valve

X6103

Component connector (2 -pin, Black), Cyl. 3 fuel injection valve

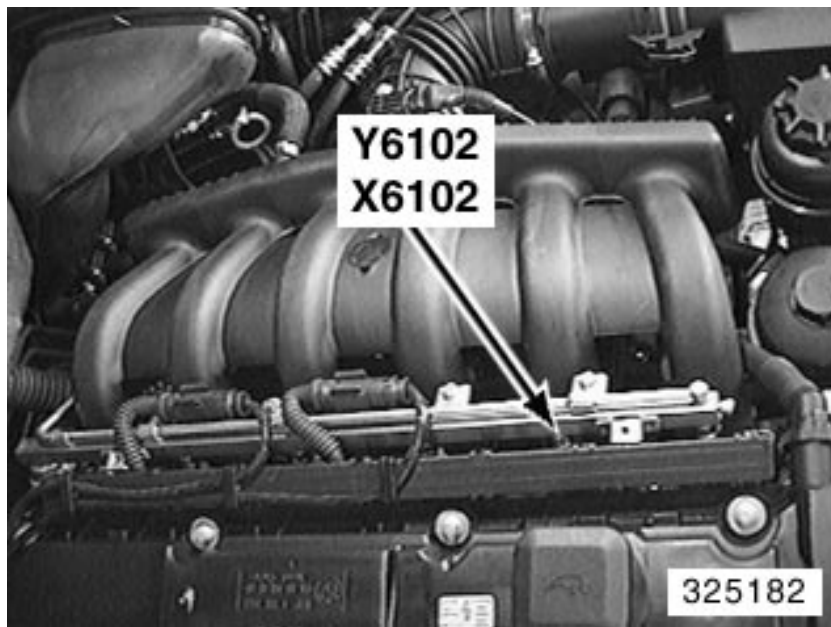


on intake manifold

Y6102

Cyl. 2 fuel injection valve

X6102

Component connector (2 -pin, Black), Cyl. 2 fuel injection valve

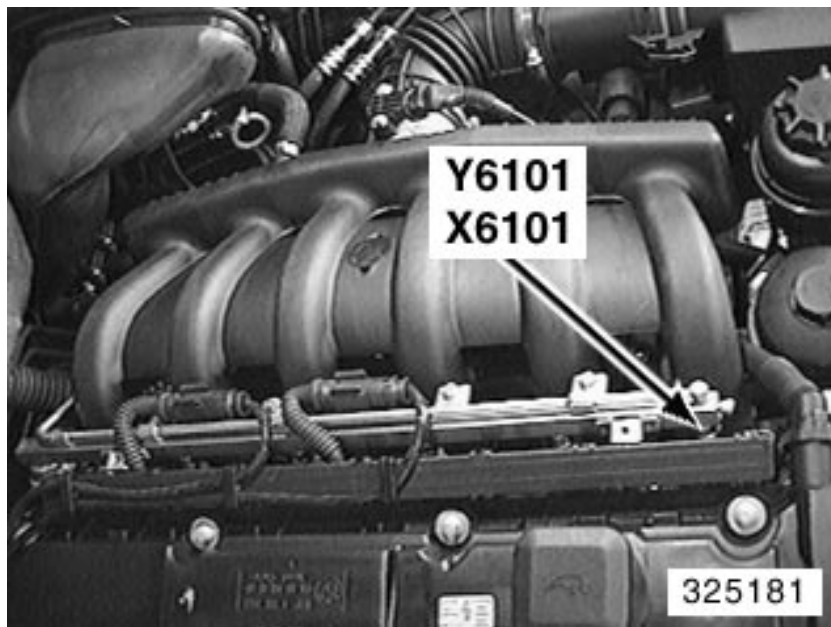


on intake manifold

Y6101

Cyl. 1 fuel injection valve

X6101

Component connector (2 -pin, Black), Cyl. 1 fuel injection valve

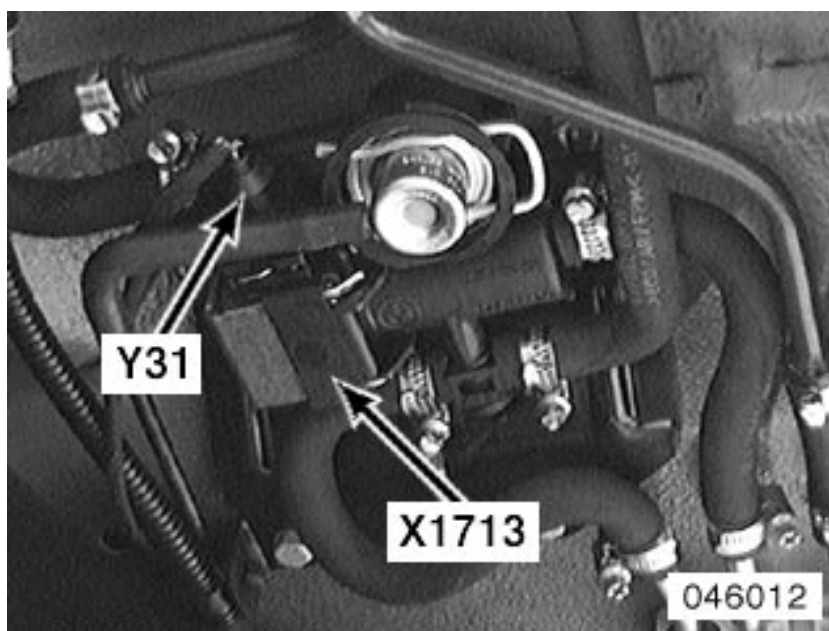


under LH front of vehicle

Y31

Fuel changeover circuit

X1713

Component connector (2-pin, Black), Fuel changeover circuit

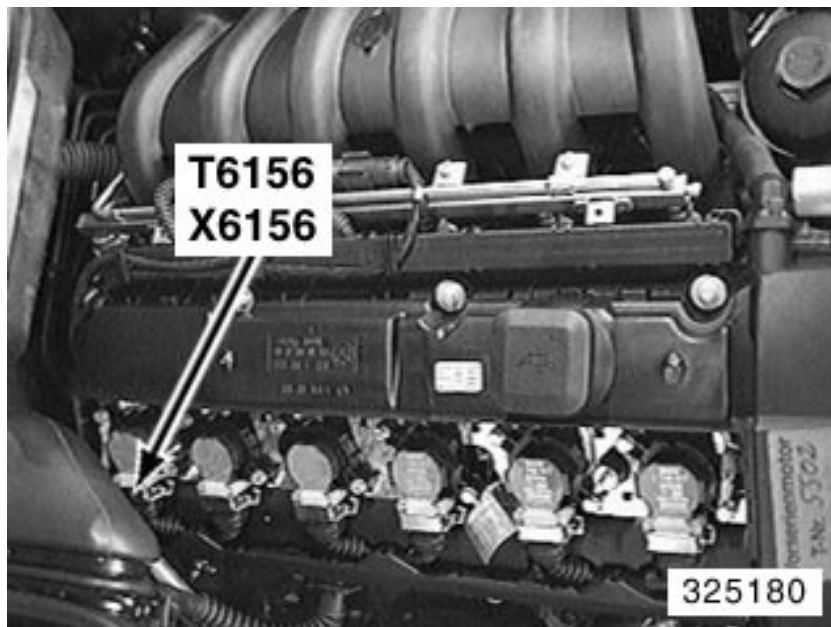


RH side of engine top

T6156

Cyl. 6 ignition coil

X6156

Component connector (3 -pin, Black), Cyl. 6 ignition coil

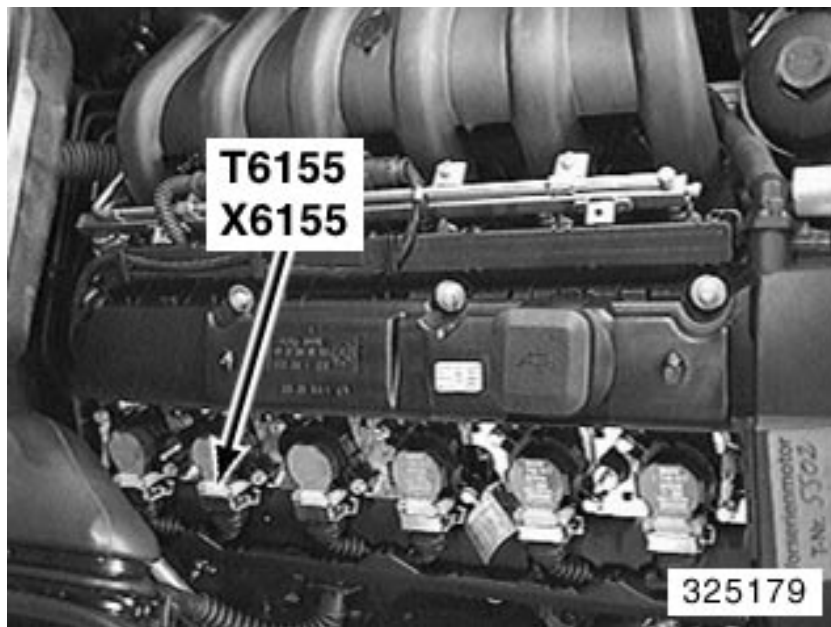


RH side of engine top

T6155

Cyl. 5 ignition coil

X6155

Component connector (3 -pin, Black), Cyl. 5 ignition coil

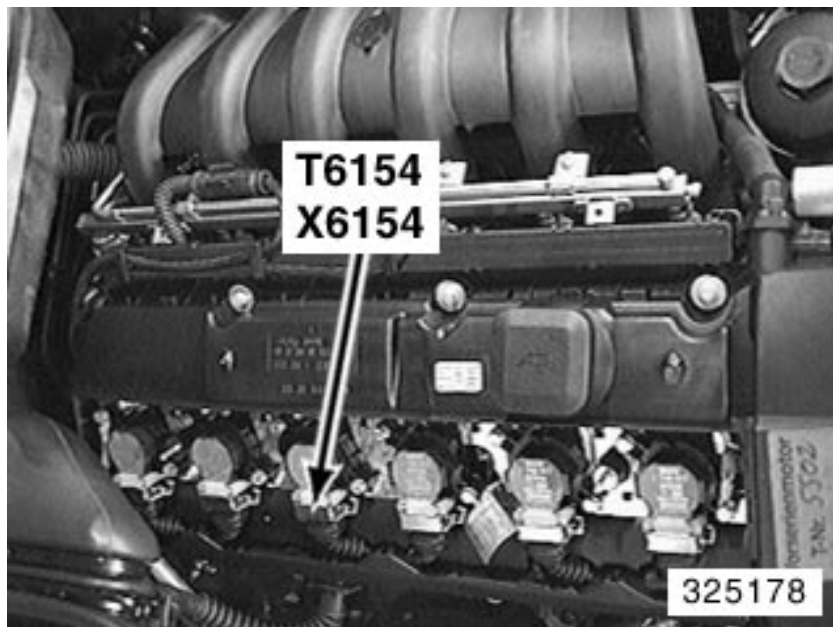


RH side of engine top

T6154

Cyl. 4 ignition coil

X6154

Component connector (3 -pin, Black), Cyl. 4 ignition coil

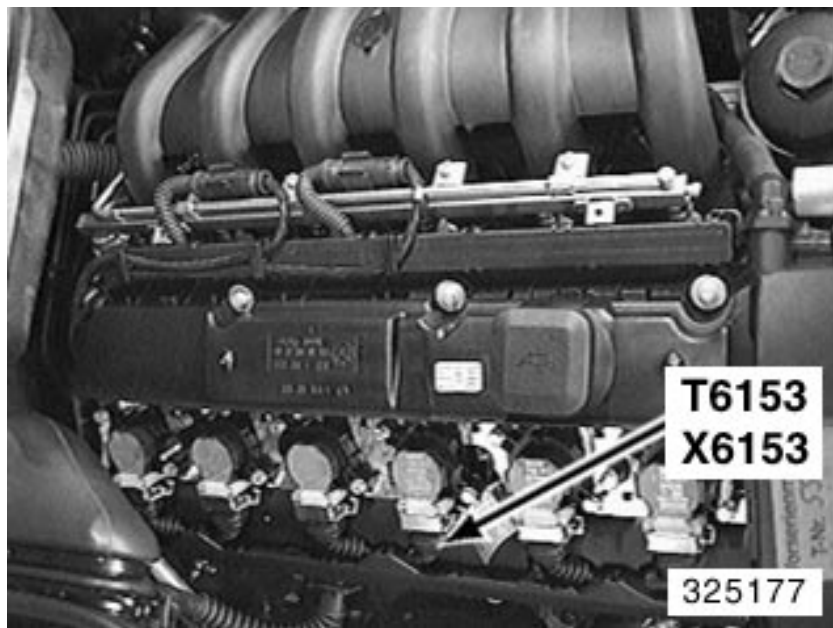


RH side of engine top

T6153

Cyl. 3 ignition coil

X6153

Component connector (3 -pin, Black), Cyl. 3 ignition coil

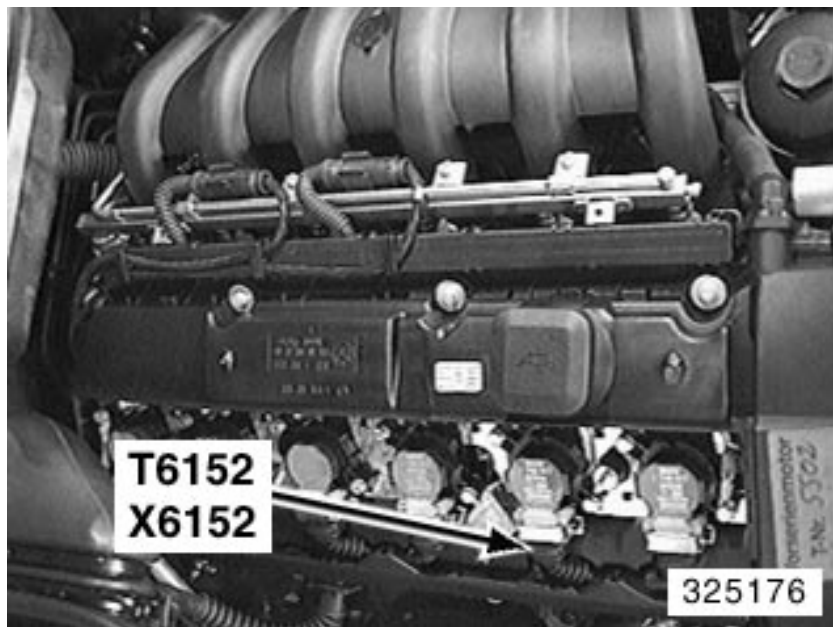


RH side of engine top

T6152

Cyl. 2 ignition coil

X6152

Component connector (3 -pin, Black), Cyl. 2 ignition coil

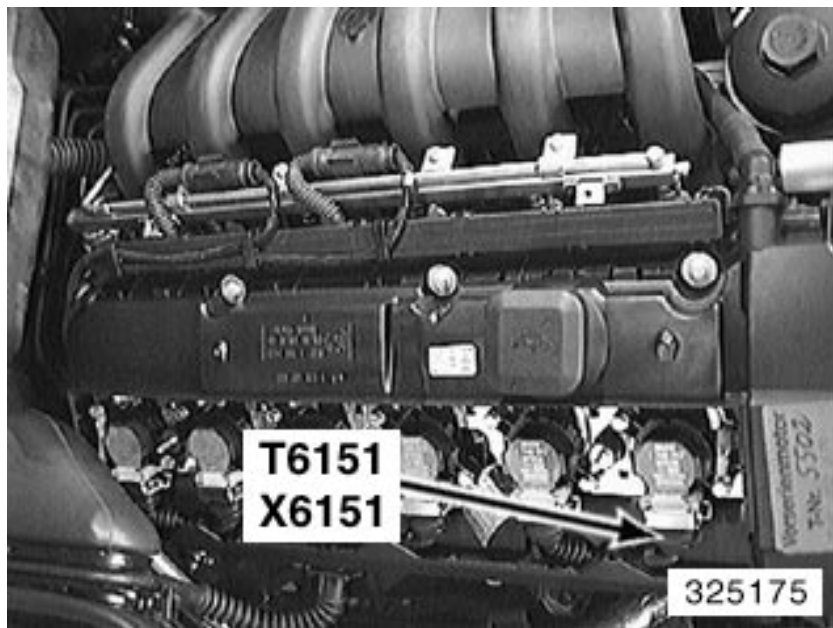


RH side of engine top

T6151

Cyl. 1 ignition coil

X6151

Component connector (3 -pin, Black), Cyl. 1 ignition coil

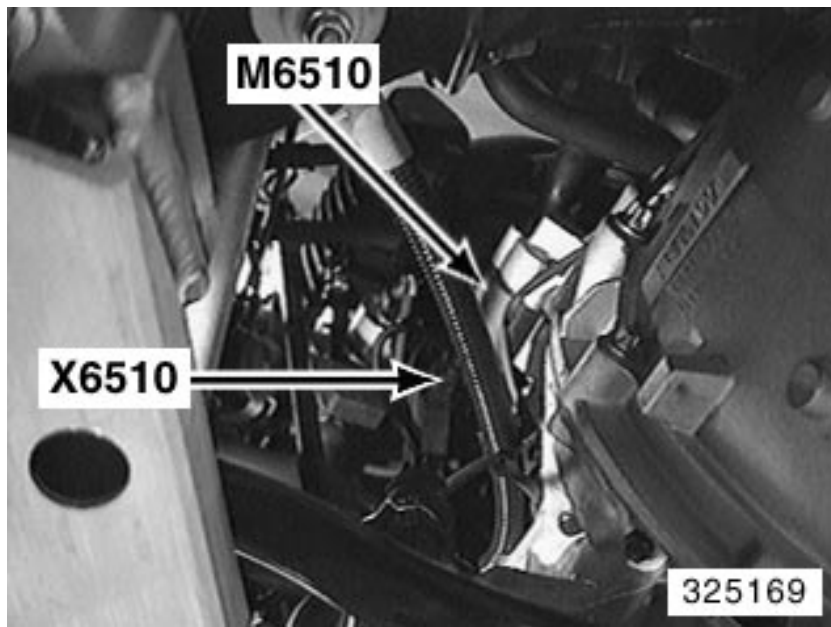


LH side of engine bottom

M6510

Starter

X6510

Cable shoe Starter

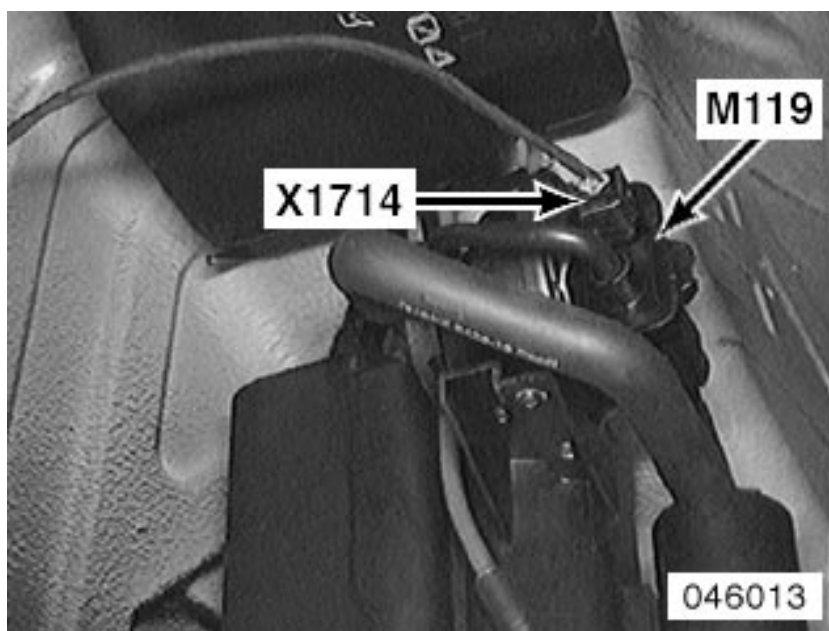


wheel well rear left

M119

Leakage diagnosis pump

X1714

In-line connector (3-pin, Natural), Leakage diagnosis pump

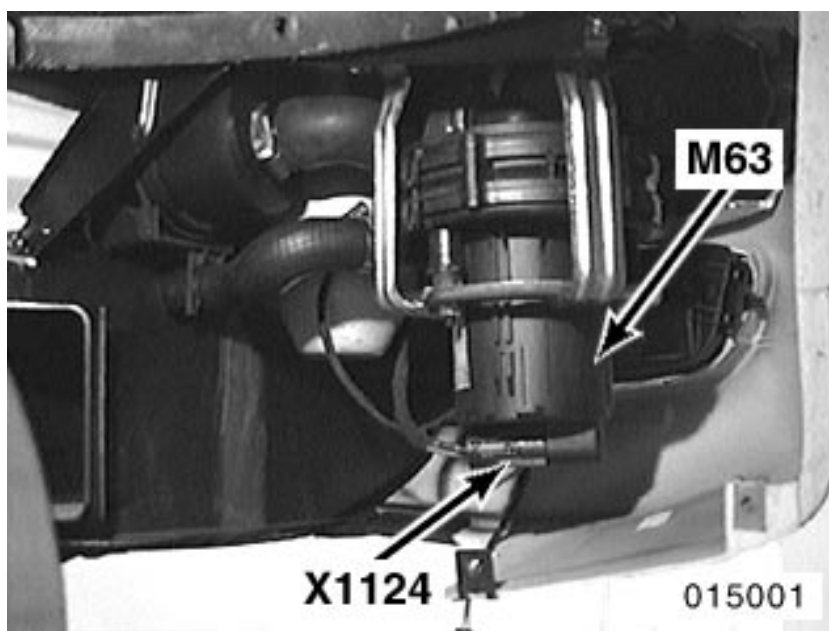


RH front of wheel well

M63

Secondary air injection pump

X1124

Component connector (2-pin, Yellow), Secondary air injection pump

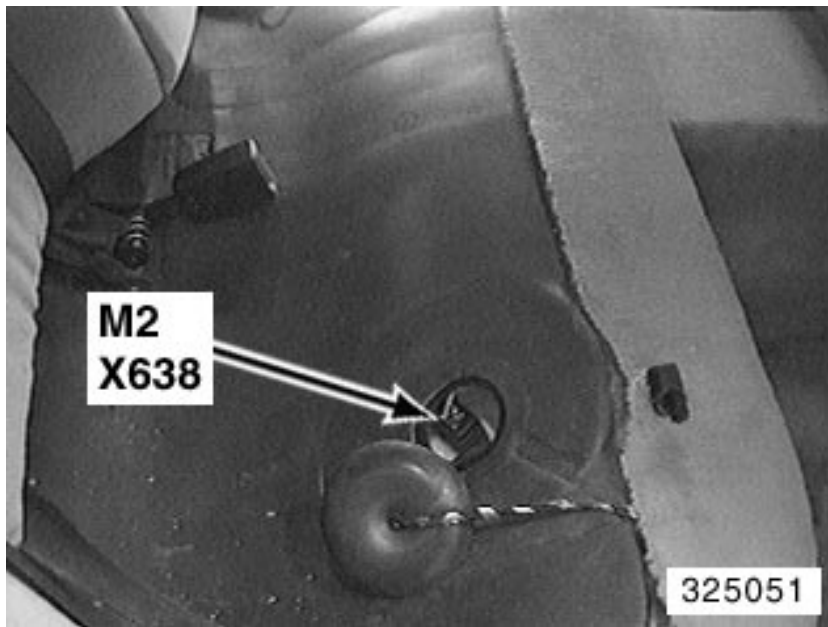


underside of rear seat right

M2

Electrical fuel pump (EKP I)

X638

Component connector (6 -pin, Black), Electrical fuel pump (EKP I)

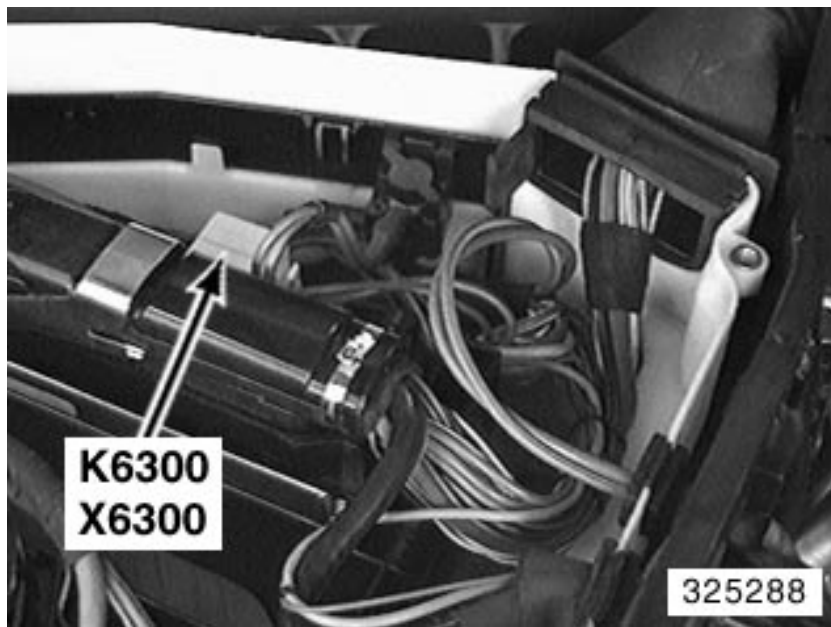


rear RH side of engine compartment in E-Box

K6300

Engine control module relay

X6300

Component connector (9 -pin, Black), Engine control module relay

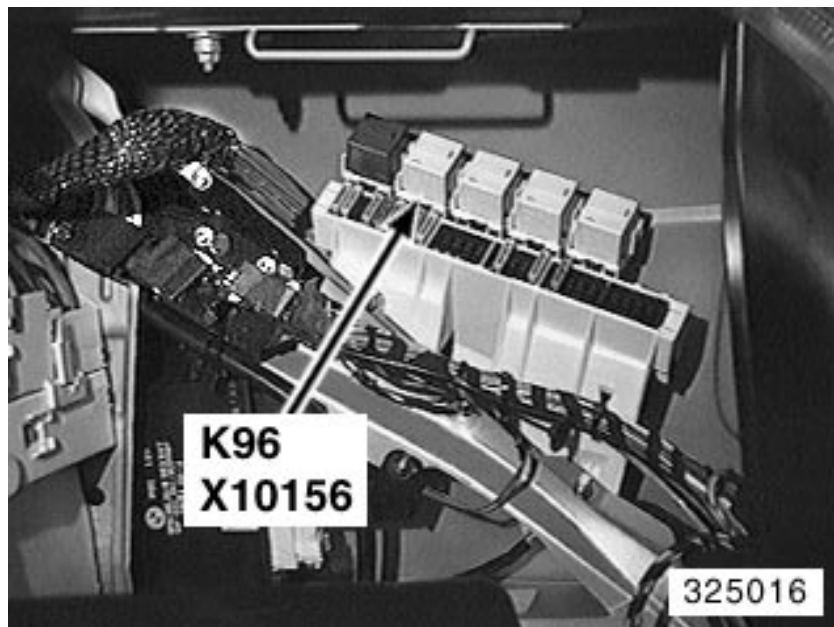


in RH side of luggage compartment

K96

Fuel pump relay

X10156

Component connector (9 -pin, Black), Fuel pump relay

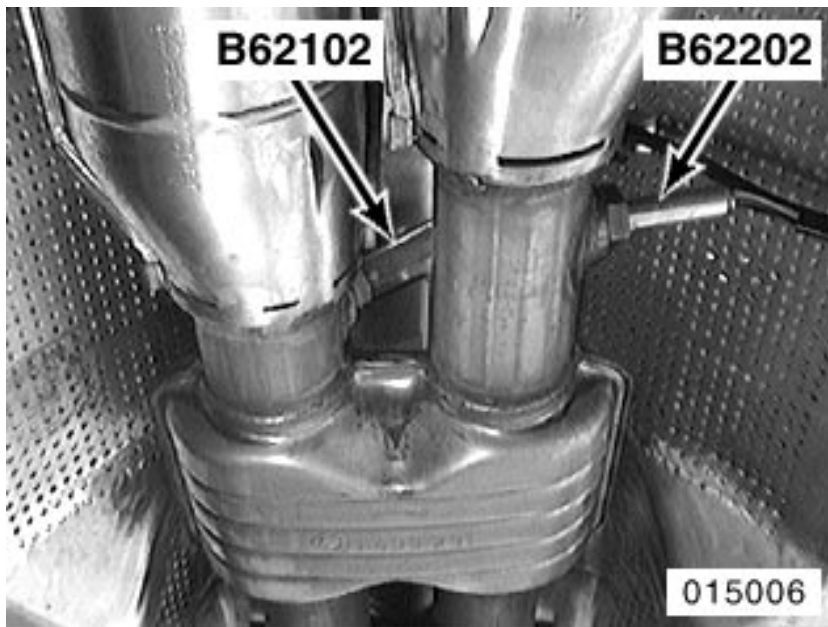


exhaust center

B62102

Heated oxygen sensor I behind catalytic converter

B62202

Heated oxygen sensor II behind catalytic converter

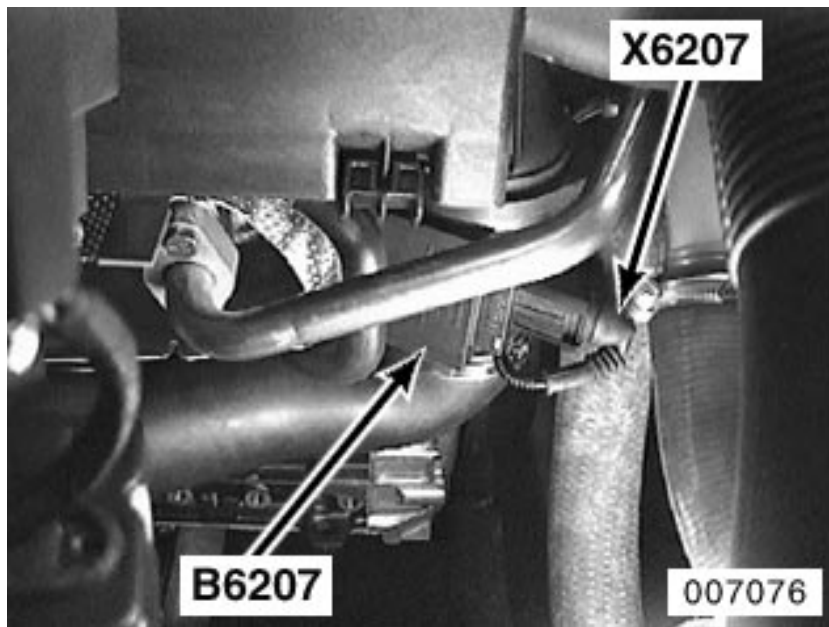


lower RH side of engine front

B6207

Hot-film air mass meter

X6207

Component connector (4 -pin, Black), Hot-film air mass meter

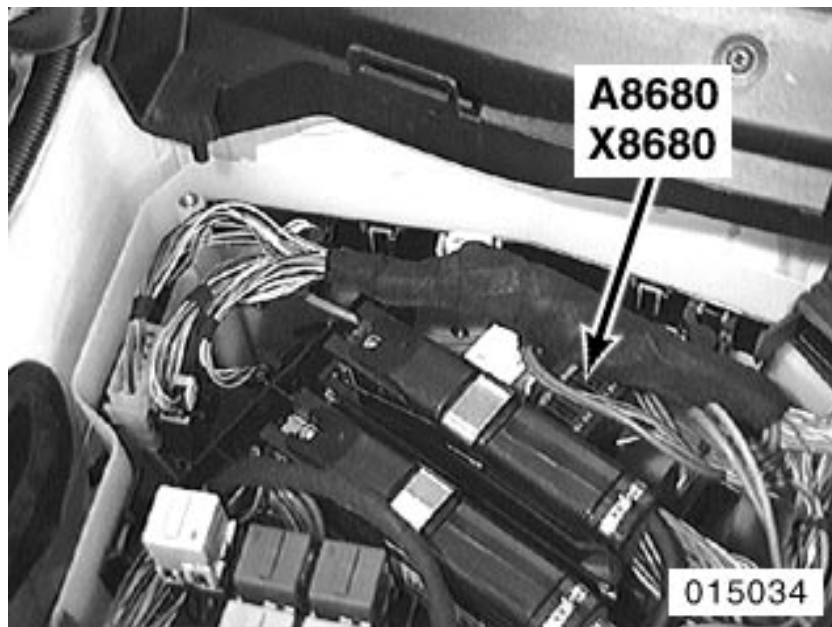


rear RH side of engine compartment in E-Box

A8680

Fuse carrier, engine electronics

X8680

Component connector (10-pin, Black), Fuse carrier, engine electronics

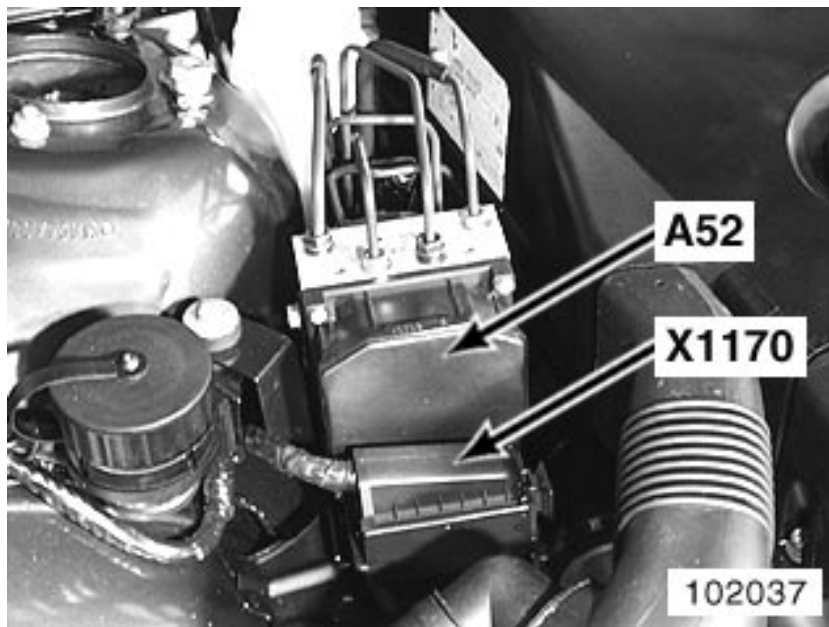


ahead of RH side shock tower

A52

ABS/ASC control module

X1170

Component connector (42-pin, Black), ABS/ASC control module

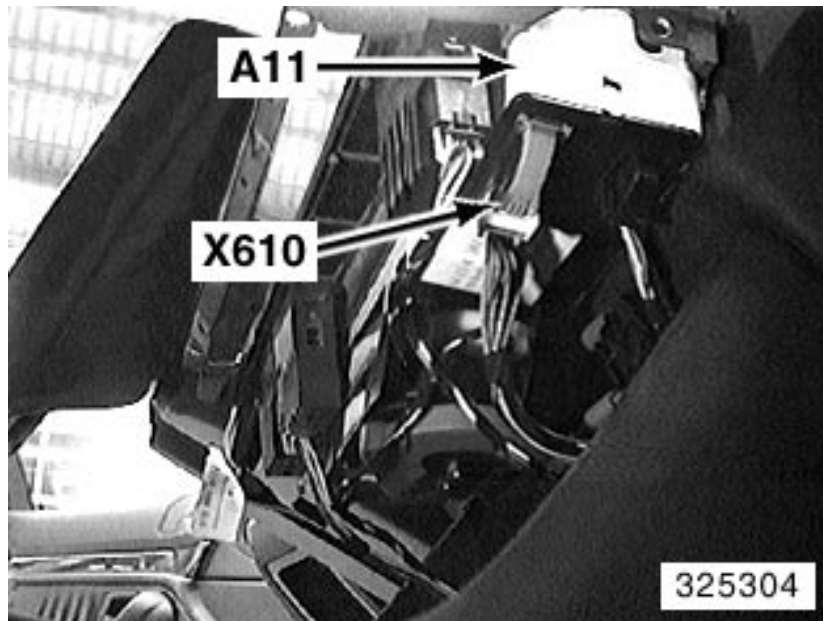


center console

A11

Heating and A/C control module

X610

Component connector (26 -pin, Blue), Heating and A/C control module

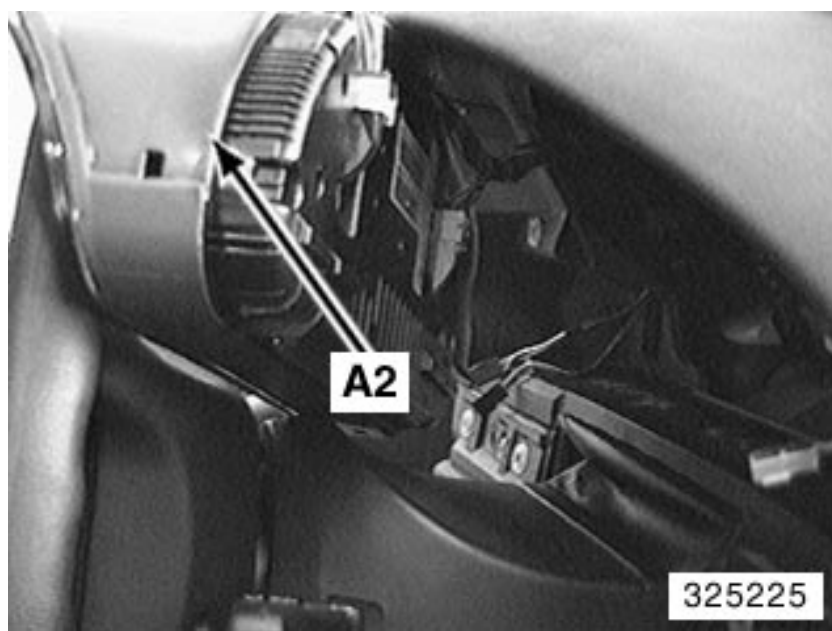

on instrument cluster

A2

Instrument cluster