


2000 - 2001 Radio Module - w/Nav

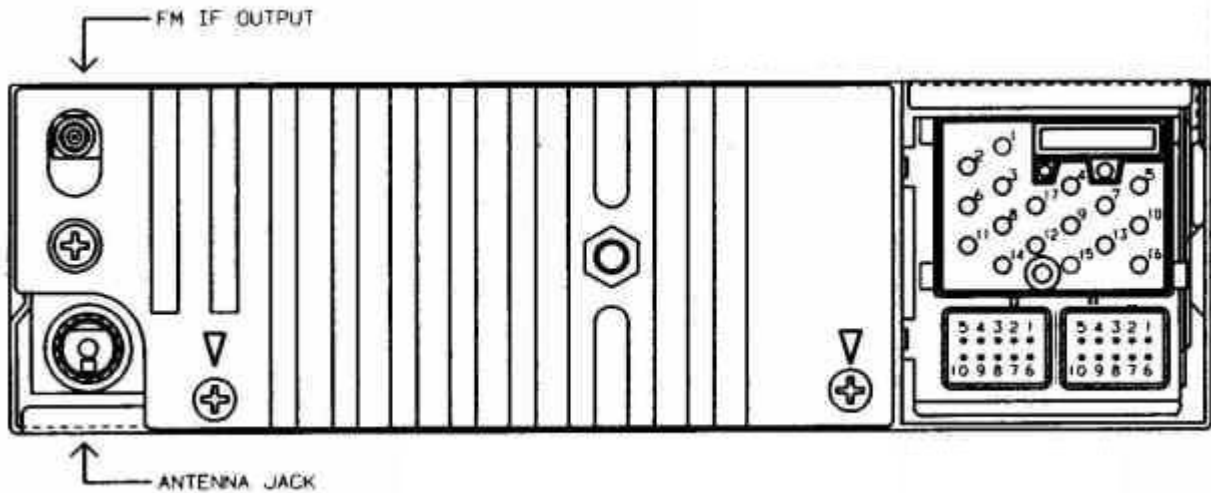

Pin No. / Function

- 1 / Speaker - Front Left (+)
- 2 / Speaker - Front Right (+)
- 3 / Speaker - Rear Left (+)
- 4 / Telephone Mute
- 5 / +12v from ignition (ACC and RUN)
- 6 / Speaker - Rear Right (+)
- 7 / DAC - i-bus
- 8 / Speaker - Front Left (-)
- 9 / Back Up (?) (terminal 30 - Fuse F56)
- 10 / GAL - speed signal
- 11 / Speaker Front Right (-)
- 12 / Speaker Rear Left (-)
- 13 / Nighttime Illumination Signal
- 14 / Speaker Rear Right (-)
- 15 / Ground
- 16 / Auto Antenna - diversity
- 17 / Not Used (LAC)

X18805:

Pin No. / Function

- 1 / Audio Cassette Right (+)
- 2 / Audio Cassette Right (-)
- 3-4 / No connection
- 5 / Low Frequency Signal (-) - Nav Control Module / Video Module
- 6 / Audio Cassette Left (+)
- 7 / Audio Cassette Left (-)
- 8-9 / No Connection
- 10 / Low Frequency Signal (+) - Nav Control Module / Video Module

X01037

Pin No. / Function

- 1 / Low Frequency Voltage Signal CD Changer Left
- 2 / Low Frequency Voltage Signal CD Changer Right
- 3 / Shield - audio shield
- 4-5 / No Connection
- 6 / Low Frequency Voltage Signal CD Changer Left
- 7 / Low Frequency Voltage Signal CD Changer Right
- 8-10 / No Connection